

 **TRUE FITNESS**



APEX TREADMILL

OWNER'S MANUAL AND ASSEMBLY GUIDE

IMPORTANT—PLEASE READ

All products shown are prototype. Actual product delivered may vary. Product specifications, features, and software are subject to change without notice.

For the most up-to-date version of this manual, please see our website: <https://truefitness.com/services-support/user-manuals/>

CONTACTING OUR SUPPORT TEAM

To contact TRUE for any of your pre or post installation questions, please call our toll-free numbers Monday - Friday during normal business hours:

- Commercial Direct Customers and Corporate Accounts | 800.868.8783
- Retail Customers and Distributors | 800.883.8783

Or email us:

- Commercial Direct Customers and Corporate Accounts | service.direct@truefitness.com
- Retail Customers and Distributors | service@truefitness.com
- Service International | int.service@truefitness.com

When contacting TRUE, please have the following information ready:

- Serial Number of Unit
- Contact Information—Full Name, Email, and Phone Number
- Address of Facility or Residence
- Detailed Description Regarding Symptom of the Unit (along with pictures or video if applicable)

NOTE: Authorized service providers, dealers, and distributors may also use TRUE's online resource | portal.truefitness.com.

CONTACTING OUR SALES TEAM

Interested in owning more TRUE products? Please contact us with any product inquires so that we may direct you to the appropriate sales representative to help answer your questions.

- Phone | 800.426.6570
- Email | sales@truefitness.com

REPORTING FREIGHT CLAIMS OR PARTS DAMAGE

Unfortunately, sometimes materials can be damaged during shipment. If materials are damaged during shipment, please follow the guidelines below to determine the appropriate process for you to follow.

Severe Damage—Obvious damage to external packaging and internal product.

Please refuse the shipment and it will be returned to TRUE by the carrier. Contact TRUE product support by calling 800.883.8783 or sales support by calling 800.426.6570 Monday–Friday during normal business hours to notify us that the shipment has been refused. Once we have received the damaged shipment, a replacement shipment will be sent to you. If the shipment comes in multiple boxes, only refuse boxes with damage.

Slight Damage—Minimal damage to external packaging with unknown internal damage to product.

If the shipment has minimal damages and you are not sure if the actual product is damaged, you must sign the bill of lading as damaged when accepting the shipment. Once you have opened the box and you have determined something is indeed damaged, please gather the serial number, model number, description of damage, and photos of damage. Please make sure the photos include the damaged product as well as the damaged box the product arrived in. Contact TRUE product support (service@truefitness.com | 800.883.8783) or TRUE sales support (sales@truefitness.com | 800.426.6570) Monday–Friday during normal business hours.

Concealed Damage—No damage to external packaging but internal damage to product.

You may receive a shipment that looks intact and discover once the box has been opened that there are hidden damages. Please notify the carrier immediately. TRUE will not be able to file a claim if the carrier is not notified in a timely manner. Once you have called the carrier you will need to gather the serial number, model number, description of damage, and photos of damage. Contact TRUE product support (service@truefitness.com | 800.883.8783) or TRUE sales support (sales@truefitness.com | 800.426.6570) Monday–Friday during normal business hours.

TABLE OF CONTENTS

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS—SAVE THESE INSTRUCTIONS.....	5
POWER REQUIREMENTS.....	7
SPACE REQUIREMENTS.....	8
SPECIFICATIONS.....	8
WARNING DECALS.....	9
COMPLIANCES.....	9
PROPER TRAINING POSITION AND TREADMILL SAFETY.....	10

ASSEMBLY INSTRUCTIONS

PREASSEMBLY CHECKLIST.....	11
ASSEMBLY STEPS.....	15

PRODUCT FEATURES

BASE OVERVIEW.....	36
CONSOLE OVERVIEW.....	37

CARE AND MAINTENANCE

INSPECTION.....	39
CLEANING THE EQUIPMENT.....	39
LEVELING THE MACHINE.....	40
RUNNING BELT ALIGNMENT.....	41
TENSIONING THE RUNNING BELT.....	42
PREVENTATIVE MAINTENANCE.....	43
LONG TERM STORAGE.....	43

ADDITIONAL INFORMATION

TROUBLESHOOTING.....	44
WIRING DIAGRAMS.....	46

WARRANTY INFORMATION

COMMERCIAL WARRANTY.....	47
LIMITED-USE COMMERCIAL WARRANTY.....	48
IN-HOME USE WARRANTY.....	49
WARRANTY DETAILS.....	50
WARRANTY REGISTRATION.....	51

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS—SAVE THESE INSTRUCTIONS

This equipment is intended for a commercial or institutional setting. This owner's manual should be accessible to all personal trainers, faculty, and members.

- Read and understand all instructions and warnings prior to use.
- Obtain a medical exam before beginning any exercise program. If at any time during exercise you feel faint, dizzy, or experience pain, stop and consult your physician.
- Obtain proper instruction prior to use.
- This unit is intended for commercial use only.
- Inspect the unit for incorrect, worn, or loose components and do not use until corrected, replaced, or tightened prior to use.
- Do not wear loose or dangling clothing while using the unit.
- Care should be used when mounting or dismounting the unit.
- Read, understand, and test the emergency stop procedures before use.
- Disconnect all power before servicing the unit.
- Do not exceed maximum user weight of 500 lbs / 226.7 kg.
- Keep the top side of the moving surface clean and dry.
- Keep children and animals away.
- Use caution when moving and assembling unit.
- All exercise equipment is potentially hazardous. If attention is not paid to the conditions of equipment usage, death, or serious injury could occur.

⚠ DANGER: To reduce the risk of electric shock, always unplug this product when not in use, before cleaning, or attempting any maintenance activity. Do not handle the plug with wet hands.

⚠ WARNING: Heart rate monitoring systems may be inaccurate. Over-exercising may result in serious injury or death. If you feel faint, dizzy, or experience pain, stop exercising immediately.

⚠ WARNING: To reduce the risk of burns, fire, and electric shock or injury to persons, follow these instructions:

- Health related injuries may result from incorrect or excessive use of exercise equipment.
- TRUE STRONGLY recommends seeing a physician for a complete medical exam before undertaking an exercise program, particularly if the user has a family history of high blood pressure or heart disease, is over the age of 45, smokes, has high cholesterol, is obese or has not exercised regularly in the past year. Additionally, TRUE recommends consulting a fitness professional on the correct use of this product.
- Equipment should be immediately taken out of use if it fails to work properly or when a warning is presented electronically.
- When using this exercise machine, basic precautions should always be followed.
- Use this equipment only for its intended use as described in this manual.
- Do not move the equipment by lifting the console. Do not use the console as a handlebar during a workout.
- This product can expose you to chemicals including Toluene and Acrylamide which are known to the State of California to cause Cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.
- Keep equipment stable on flat ground.
- Risk of personal injury—crushing hazard when equipment is in operation. Keep feet, hands, and fingers away from moving parts.
- Replace warning labels that may be worn, damaged, or missing.
- Replace any non-working or damaged components, remove the unit from service until repair is performed.
- Do not operate the equipment while being covered with a blanket, pillow, plastic, or anything that insulates or stops airflow. Keep air openings free of lint, hair or any obstructing material.
- To avoid serious injury, remove and store the power cord when the machine is not in use.
- This appliance should never be left unattended when plugged in.
- Do not use any type of extension cord with this product.
- Never operate a TRUE product if it has a damaged power cord or electrical plug, or if it has been dropped, damaged, or even partially immersed in water.
- Use a TRUE AC power cord or AC/DC adapter only.
- Position this product so the power cord plug is accessible to the user.

- Keep the power cord away from heated surfaces. Do not pull the equipment by the power cord or use the cord as a handle. Do not run the power cord along the side or under the equipment.
- If the electrical supply cord is damaged it must be replaced by the manufacturer, an authorized service agent, or a similarly qualified person to avoid a hazard.
- This product must be connected to a properly grounded electrical outlet.
- To disconnect, turn power OFF at the ON/OFF switch if applicable, then remove plug from electrical outlet. On the machine power switch, (⏻) means that the machine power is **ON** and (⏻) means the machine power is **OFF**.
- Never insert objects into any openings in this product. If an object should drop inside, turn off the power, unplug the power cord from the outlet and carefully retrieve it. If the item cannot be reached, contact TRUE product support.
- Any changes or modifications to this equipment could void the product warranty.
- Do not use this product in areas where aerosol spray products are being used or where oxygen is being administered. Such substances create the danger of combustion and explosion.
- Do not use this product outdoors, near water, while wet, or in areas of high humidity including extreme temperature changes.
- Close supervision is necessary when used near children under the age of 15, or disabled persons.
- This equipment is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the equipment by a person responsible for their safety.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Wear shoes with rubber or high traction soles. Do not use shoes with heels, leather soles, cleats or spikes. Make sure no stones are embedded in the soles. Do not use this product in bare feet. Keep all loose clothing, shoelaces and towels away from moving parts.
- Do not use if you have a cold or fever.
- To avoid injury, attach the safety clip to clothing before use.
- When mounting the treadmill, ensure the treadmill belt is not running.
- Use handlebars to maintain balance when mounting and dismounting the treadmill and for additional stability while exercising.
- To avoid injury, stand on the side rails before starting the equipment.
- While the treadmill is in use, proceed at a speed that the user can safely maintain with the ability to immediately engage the safety key to stop the treadmill belt if necessary.
- Avoid the possibility of bystanders being struck or caught between moving parts by making sure that they are out of reach of the equipment while it is in motion.
- Do not use typing or web surfing features at excessive speeds. Always stabilize yourself when using typing or web surfing features. (Varies by console option.)
- Never place liquids of any type directly on the unit except in the accessory tray or bottle holders. Containers with lids are recommended.
- Always follow the console instructions for proper operation.
- Do not use the contact heart rate grips as a handlebar during a workout.
- Avoid exiting equipment while leaving the tread belt in motion.
- Never walk or jog backwards on the equipment.
- Allow only one person at a time on the equipment while it's operating.
- Do not allow animals on or near the equipment while in operation.
- To avoid serious injury, do not touch the incline rack while the equipment is in use.
- To avoid serious injury, do not touch the belt while the equipment is in use.
- Do not reach into or underneath the unit, or tip it on its side during operation.
- Do not change the incline of the equipment by placing objects under it.
- Do not use attachments not recommended by the manufacturer.
- Allow only trained personnel to service this equipment.
- It is the sole responsibility of the owner/operator to ensure regular and scheduled maintenance is performed.
- Do not remove the motor cover or you may risk injury due to electric shock. Please contact TRUE product support if the motor area needs servicing.
- Noise emission under load is higher than without load. A-weighted emission sound pressure level at the trainer's ear: 67 dBA.

POWER REQUIREMENTS

Read and understand all instructions before plugging any TRUE power cord into an electrical outlet.

DEDICATED LINE

This product requires a dedicated line without GFCI (Ground-Fault Circuit Interrupter) or AFCI (Arc-Fault Circuit Interrupter). GFCI and AFCI protection is not required for receptacles on a dedicated branch circuit located and identified for a cord-and-plug-connected appliance, such as a treadmill. A dedicated line assures that adequate power is available for safe operation over the life of your TRUE product.


GROUNDING INSTRUCTIONS

This product must be grounded. If the product malfunctions or breakdowns, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

⚠ DANGER:

- Improper connection of the equipment grounding conductor can result in risk of electrical shock.
- Check with a qualified electrician or service provider if you are in doubt as to whether the equipment is properly grounded or installed on a dedicated line.
- Seek a qualified electrician to perform any modifications to the cord or plug. TRUE is not responsible for injuries or damages as a result of cord or plug modification.

- To reduce the risk of burns, fire, electric shock, or injury, it is imperative to connect each product to a properly grounded 110V or 220V electrical outlet. The voltage required for your unit is located on the serial number decal (usually on the front of the unit). Depending on where you live voltage requirements differ.
- Some TRUE products require a circuit rated 110V, 60 Hz, and 20 amps. In the United States, most residential homes have circuits rated 110V, 60 Hz, and 15 amps. If your unit requires a 20 amp outlet, contact an electrician to install a dedicated 20 amp circuit prior to use.
- **110 Volt**—This model is for use on a nominal 110V circuit and has a grounding plug that looks like the plug illustrated in figure A. Make sure the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.
- **220 Volt**—This model is for use on a circuit having a nominal rating no less than 208V and more than 240V and is factory equipped with a specific electric cord and has a grounding plug that looks like the plug illustrated in figure B. Make sure that the product is connected to an outlet having the same configuration as the plug in figure B. No adapter should be used with this product. If the product must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel.

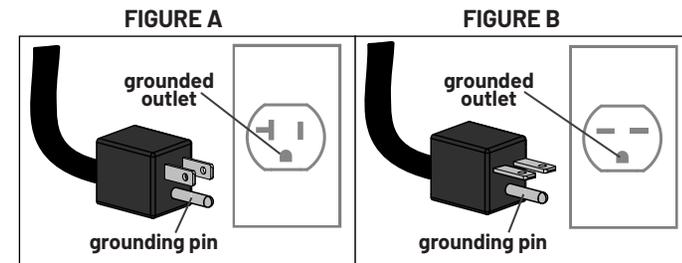


Power Information						
Model	Line Voltage (V)	Frequency (Hz)	Rated Current (Amps)	Number of Units per Circuit	Plug/Outlet*	Max Power Dissipation (Watt)
TC1-0A-35	110	50/60Hz	20	Dedicated 1	NEMA 5-20 	1650
	220	50/60Hz	8	Dedicated 1	NEMA 6-15* 	1650

*The plug configuration for the power adapter may vary by country.

SPACE REQUIREMENTS

TRUE recommends leaving a minimum of 24" (61cm) on each side of the equipment and a 79" (200cm) safety zone at the rear of the equipment.

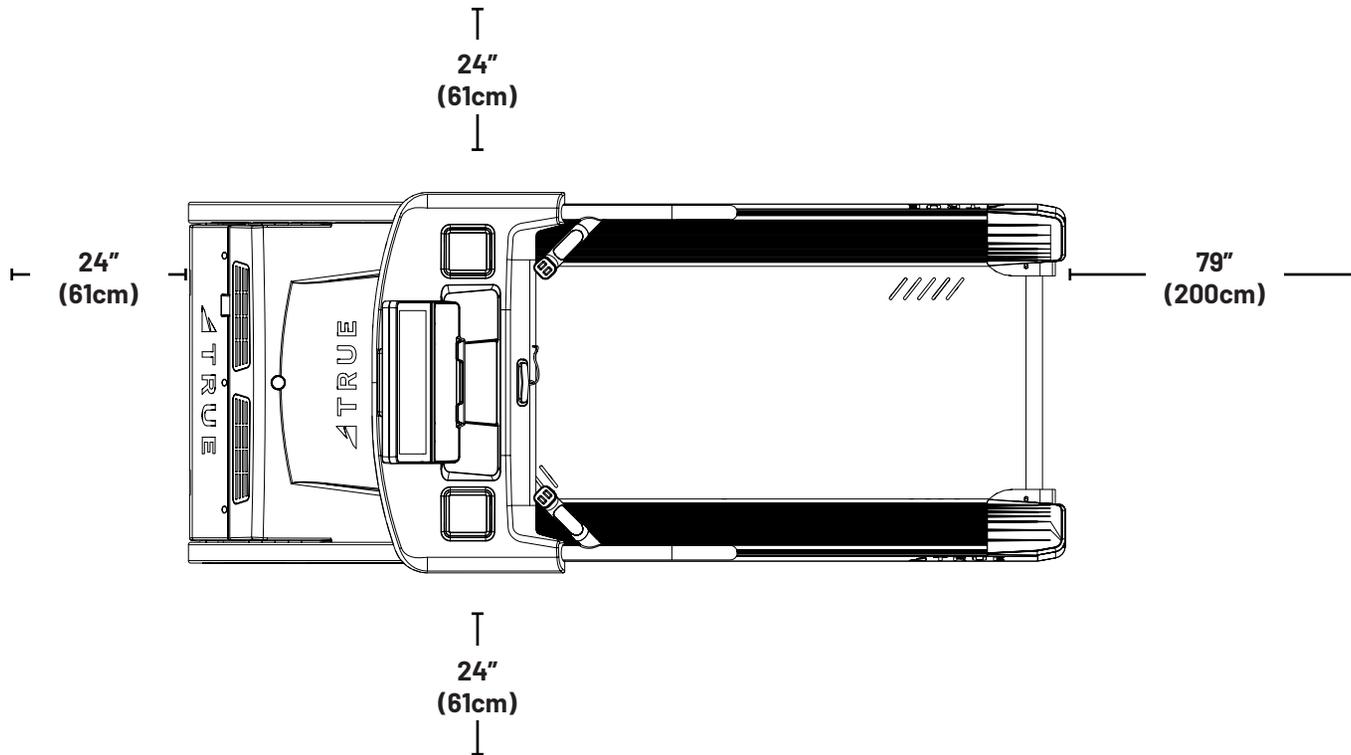


SPECIFICATIONS

- **DIMENSIONS (L X W X H)**
83" x 36" x 64" / 211cm x 91cm x 163cm
- **MACHINE WEIGHT**
450 lbs / 204 kg
- **MAXIMUM USER WEIGHT**
500 lbs / 226.7 kg

WARNING DECALS

⚠ WARNING: Replace warning labels that may be worn, damaged, or missing.

To replace any worn or missing decals contact TRUE product support (service@truefitness.com | 800.883.8783).

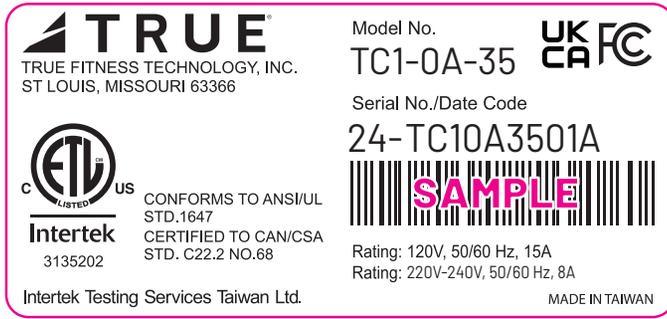

COMPLIANCES

This equipment complies with all applicable codes and regulations. For a complete list of compliances, please visit www.truefitness.com.

PROPER TRAINING POSITION AND TREADMILL SAFETY

Treadmill Entry

When first stepping on the treadmill, step onto the side rails (straddle covers) and hold the hand rails until both feet are fully on the belt.

Treadmill Use

Ensure you have good balance and your feet are stable before you start the treadmill.

Keep your gaze forward and avoid looking down or to your sides, this will help maintain good balance and prevent falls.

While using, ensure all hands, legs, and feet remain within the boundary box of the treadmill belt.

Treadmill Exit

When getting off the treadmill, wait until the belt comes to a full stop, then step on the side rails (straddle covers) and then onto the floor.



ASSEMBLY INSTRUCTIONS



NOTE: Supplemental video available @TRUEFitnessservicevids: https://www.youtube.com/watch?v=S6zUVL21_ME

PREASSEMBLY CHECKLIST

BASIC GUIDELINES FOR SETTING UP THE EQUIPMENT

After removing the equipment from the packaging, place the equipment on a clean, level surface. Make sure the electrical cord easily reaches a grounded three-pronged outlet.

⚠ DANGER: Do not use an extension cord or ungrounded outlet. The ground helps prevent electrical damage to your equipment and enhances your safety by helping to prevent shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the equipment is properly grounded. Do not modify the plug provided with the unit if it will not fit the outlet. Have a proper outlet installed by a qualified electrician.

⚠ CAUTION:



**Use caution when assembling the equipment.
Unpacking and assembling of this product is a two person task.**



**Use caution when unpacking this product. Avoid damage to the product.
DO NOT use a box cutter. DO NOT slice into the packaging.**

VERIFY BOX CONTENTS

IMPORTANT! Please verify box contents. If you have questions, or if there are any missing parts, contact product support (service@truefitness.com | 800.883.8783).

ASSEMBLY INSTRUCTIONS CONTINUED


TOOLS NEEDED FOR ASSEMBLY		INCLUDED IN BOX
5mm Allen Wrench		NO
6mm Allen Wrench		NO
8mm T-Handle Allen Wrench		NO
7/16" Ratchet		NO
13mm Socket Wrench		NO
13mm Wrench		NO

TOOLS NEEDED FOR ASSEMBLY		INCLUDED IN BOX
15/16" Wrench		NO
7/8" Wrench		NO
#2 Phillips Screwdriver		NO
Wire Cutters		NO
Level		NO
Long-Length Ruler 0"-48"/0 cm-120 cm		NO

BOX CONTENTS






ITEM	DESCRIPTION	QTY
1	BASE	1
2	LEFT PEDESTAL	1
3	RIGHT PEDESTAL	1
4	LEFT HEART RATE HANDLEBAR	1
5	RIGHT HEART RATE HANDLEBAR	1
6	CONSOLE REAR COVER	1
7	CONSOLE RACK	1
8	SAFETY KEY	1
9	LEFT HANDLEBAR BASE COVER	1
10	RIGHT HANDLEBAR BASE COVER	1
11	DECLINE FEET	2
12	110V POWER CORD	1
13*	220V POWER CORD*	1
14*	220V SWITCH ASSEMBLY*	1
15*	220V POWER INLET ASSEMBLY*	1
16	HARDWARE PACK	1
17	MANUAL	1




*The 220V Power Cord, 220V Power Inlet Assembly, and 220V Switch Assembly are only included with this product if the unit is being used on a circuit having a nominal rating of more than 120-V.

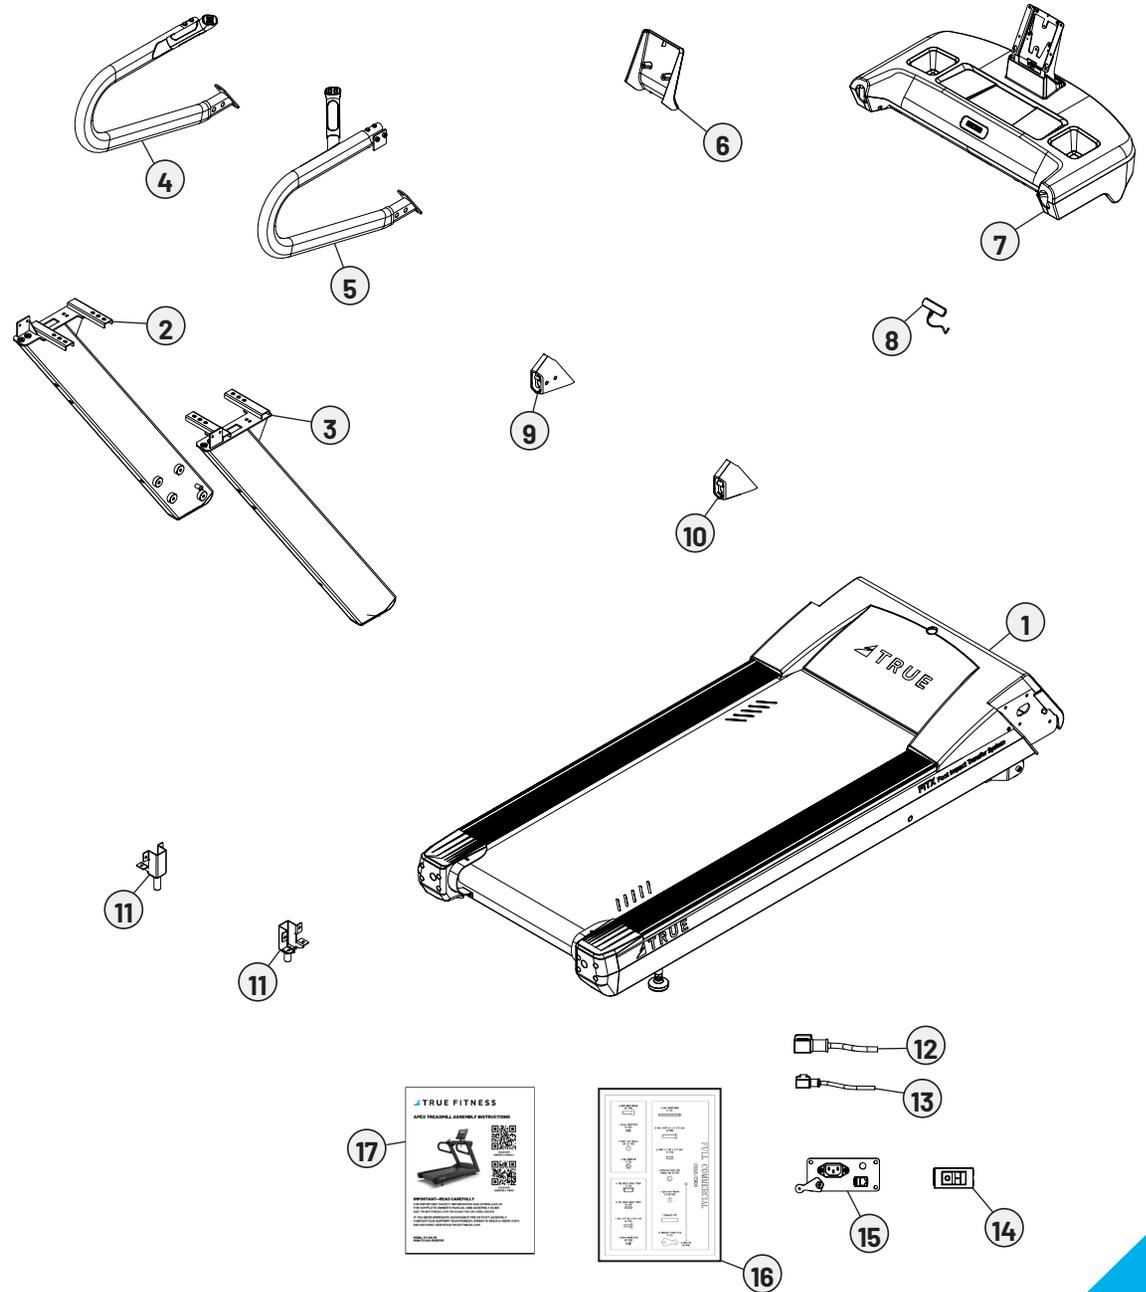

HARDWARE PACK CONTENTS

     TC10206 Hardware Pack

TC1-0A-35 HARDWARE PACK		
ITEM	DESCRIPTION	QTY
PS0099	LOCK WASHER M8, BLK ZP 	26
PS0100	SCREW, SHCS M8-1.25X25, BLK ZP 	18
TPS8123	SEMS PAN HEAD BOLT, M8XP1.25X90 	4
RCS0407	BH SCREW, M8 X P1.25 X 55 	4
TC10127	SCREW, HHCS, M8-1.25 X 20, BLK ZP 	4
TCS0024	SCREW, SEMS, M4-0.7X12MM, NYLOK, BLK 	22

   TC1-0A-35 HARDWARE PACK		
ITEM	DESCRIPTION	QTY
TI0076	TRUSS PHILLIPS BOLT M4XP0.7X12 	2
VC90141	LOCK NUT, M8-1.25, 8T, BLK, ZP 	4
TCS0027	BOLT-HEX HEAD 1/4"-20UNC X 20MM 	8
EST0019	CAP, MOTOR COVER 	1
ST1024	SUBASSEMBLY, SAFETY KEY 	1
TCS0028	CORD LOCK, SAFETY KEY 	1


ASSEMBLY STEPS

Step 1—Remove Motor Cover Plastics

Tools Used in this Step	
#2 Phillips Screwdriver	

Using a #2 Phillips screwdriver remove and set aside the top and bottom motor cover plastics using 11 screws, 1 flat washer, and 1 motor cap cover.

Parts Used in this Step			
Item	Part	Description	Qty
1	TC10068	COVER, MOTOR TOP ASSEMBLY	1
2	TC10069	COVER, MOTOR BOTTOM	1
3	EST0019	CAP, MOTOR COVER	1
4	TC0056	BOLT M5XP0.8X20	1
5	TC10121	WASHER, M5, ID5 X OD15 X 2, BLK ZP	1
6	TC10120	SCREW, PHMS, M5-0.8X15, BLK ZP	10

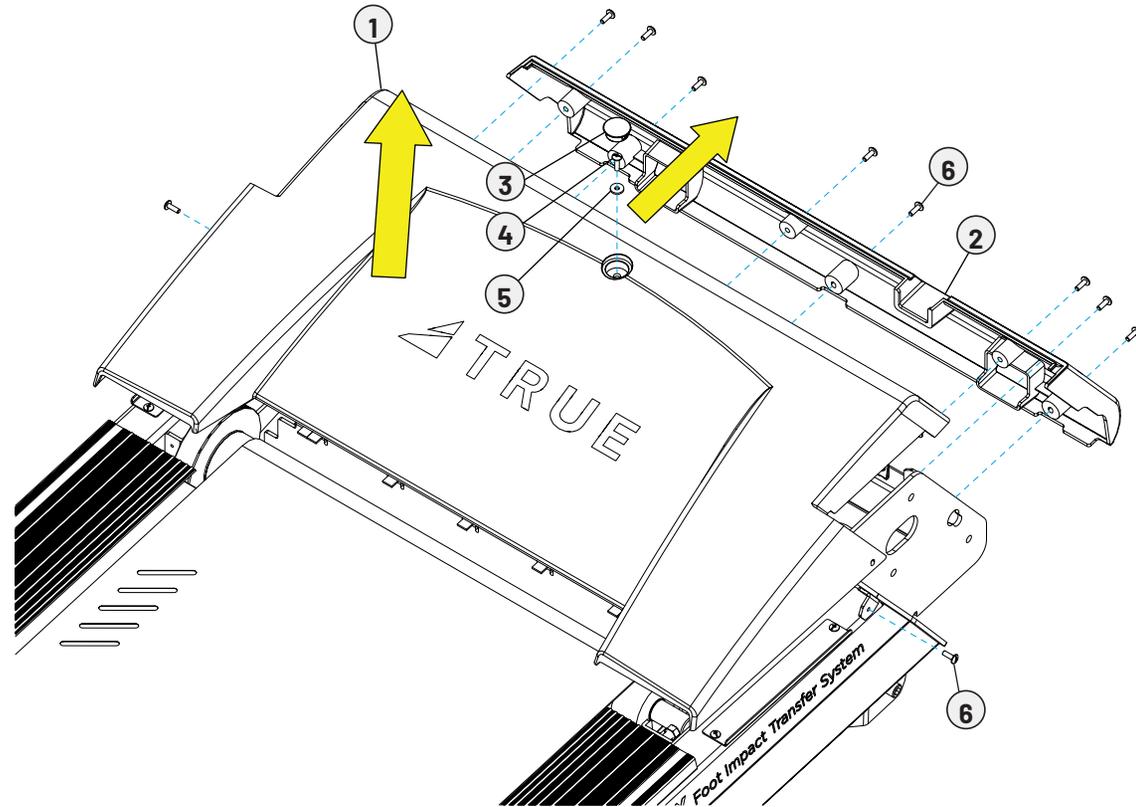

Step 2—Attach Pedestals

Tools Used in this Step	
6mm Allen Wrench	
Wire Cutters	

A. Route and connect the right pedestal cables to the lower board.


IMPORTANT! DO NOT pinch the cables.

B. Using a zip tie, secure the right pedestal cables to the frame and snip excess material using wire cutters.

C. Using a 6mm allen wrench, attach the pedestals to the base using 10 hex screws, but do not tighten.

IMPORTANT! DO NOT fully tighten the hardware until step 4.

Parts Used in this Step			
Item	Part	Description	Qty
1	TC10009	ASSEMBLY, PEDESTAL, LH	1
2	TC10010	ASSEMBLY, PEDESTAL, RH	1
3	PS0100	SCREW, SHCS M8-1.25X25, BLK ZP	10
4	PS0099	LOCK WASHER M8, BLK ZP	10

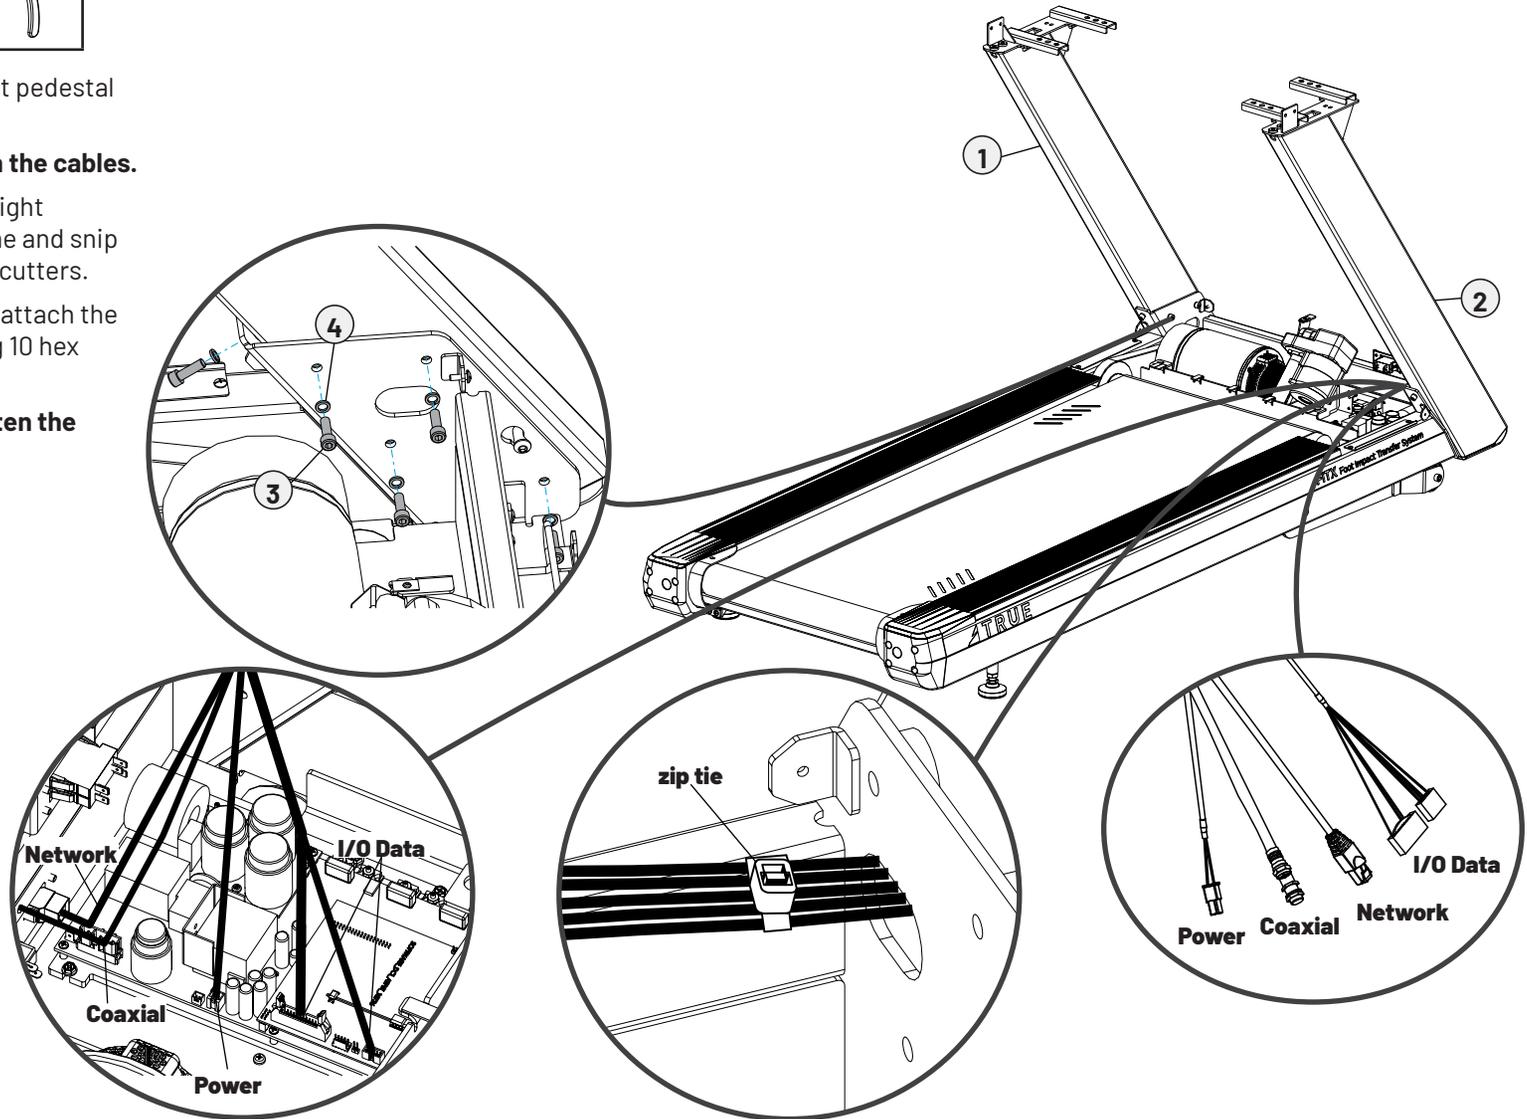


Step 3—Attach Heart Rates Handlebars

Tools Used in this Step	
5mm Allen Wrench	
13mm Socket Wrench	
13mm Wrench	

Parts Used in this Step			
Item	Part	Description	Qty
1	TC10015	ASSEMBLY, HANDRAIL, LH	1
2	TC10016	ASSEMBLY, HANDRAIL, RH	1
3	TPS8123	SEMS PAN HEAD BOLT, M8XP1.25X90	4
4	RCS0407	BH SCREW, M8 X P1.25 X 55	4
5	PS0099	LOCK WASHER M8, BLK ZP	8
6	TC10127	SCREW, HHCS, M8-1.25 X 20, BLK ZP	4
7	VC90141	LOCK NUT, M8-1.25, 8T, BLK, ZP	4

- Using a 5mm allen wrench, install and tighten the 4 hex screws on the top of the heart rate handlebars
- Using a 5mm allen wrench and a 13mm open end wrench, install and tighten the 4 hex screws, 4 lock washers, and 4 lock nuts on the side of the heart rate handlebars.
- Using a 13mm socket wrench, install and tighten the 4 bolts and 4 lock washers on the bottom of the heart rate handlebars.

NOTE: Handlebars are marked **L** for left and **R** for right.

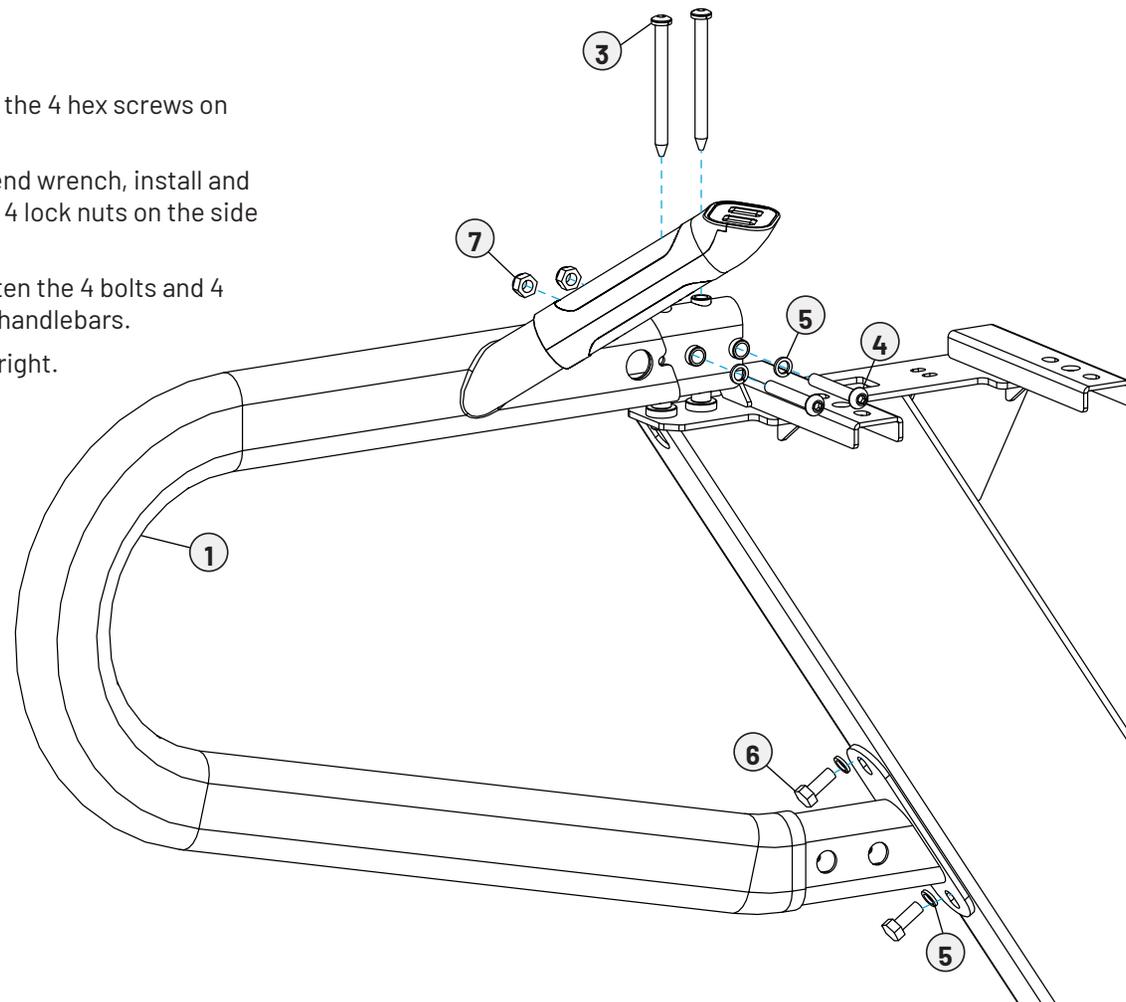


Step 4—Attach Console Rack

Tools Used in this Step	
6mm Allen Wrench	
#2 Phillips Screwdriver	

Parts Used in this Step			
Item	Part	Description	Qty
1	TC10073	SUBASSEMBLY, SHROUD, TOP	1
2	TC10074	SHROUD, BOTTOM FRONT	1
3	TC10075	SHROUD, BOTTOM REAR	1
4	ST1033-35	ASSEMBLY, CONSOLE MAST	1
5	TCS0024	SCREW, SEMS, M4-0.7X12MM, NYLOK, BLK	8
6	PS0100	SCREW, SHCS M8-1.25X25, BLK ZP	8
7	PS0099	LOCK WASHER M8, BLK ZP	8

- A. Using a #2 Phillips screwdriver, remove and set aside the lower console rack covers using 8 screws.

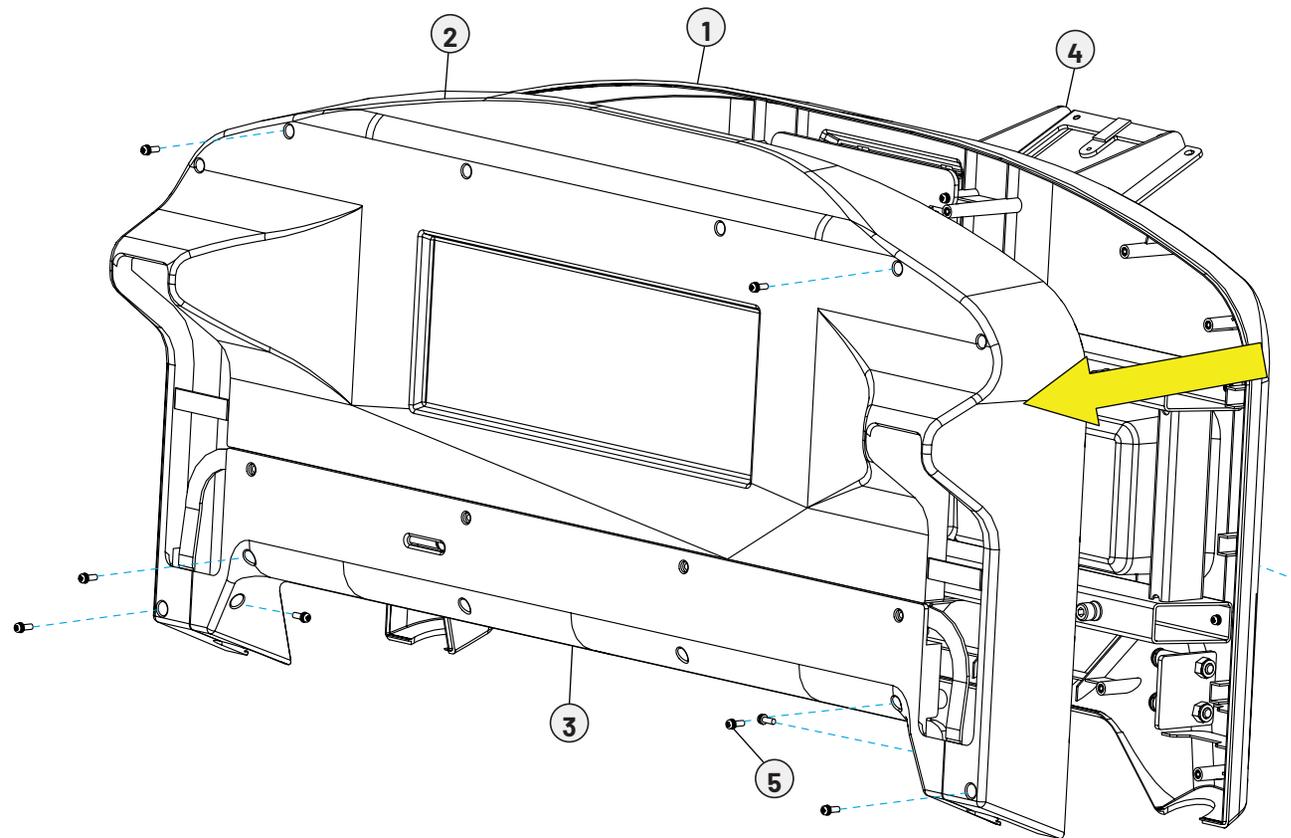

Step 4-Attach Console Rack Continued

B. Align the console rack with the holes on the pedestals and place the console rack on the pedestals.


C. Connect the heart rate cables.

IMPORTANT! DO NOT pinch the cables.

D. Using a 6mm allen wrench, attach the console rack to the pedestals using 8 hex screws and 8 lock washers.

NOTE: Remove the protective film after installing the console rack.


E. Fully tighten the pedestal hardware.

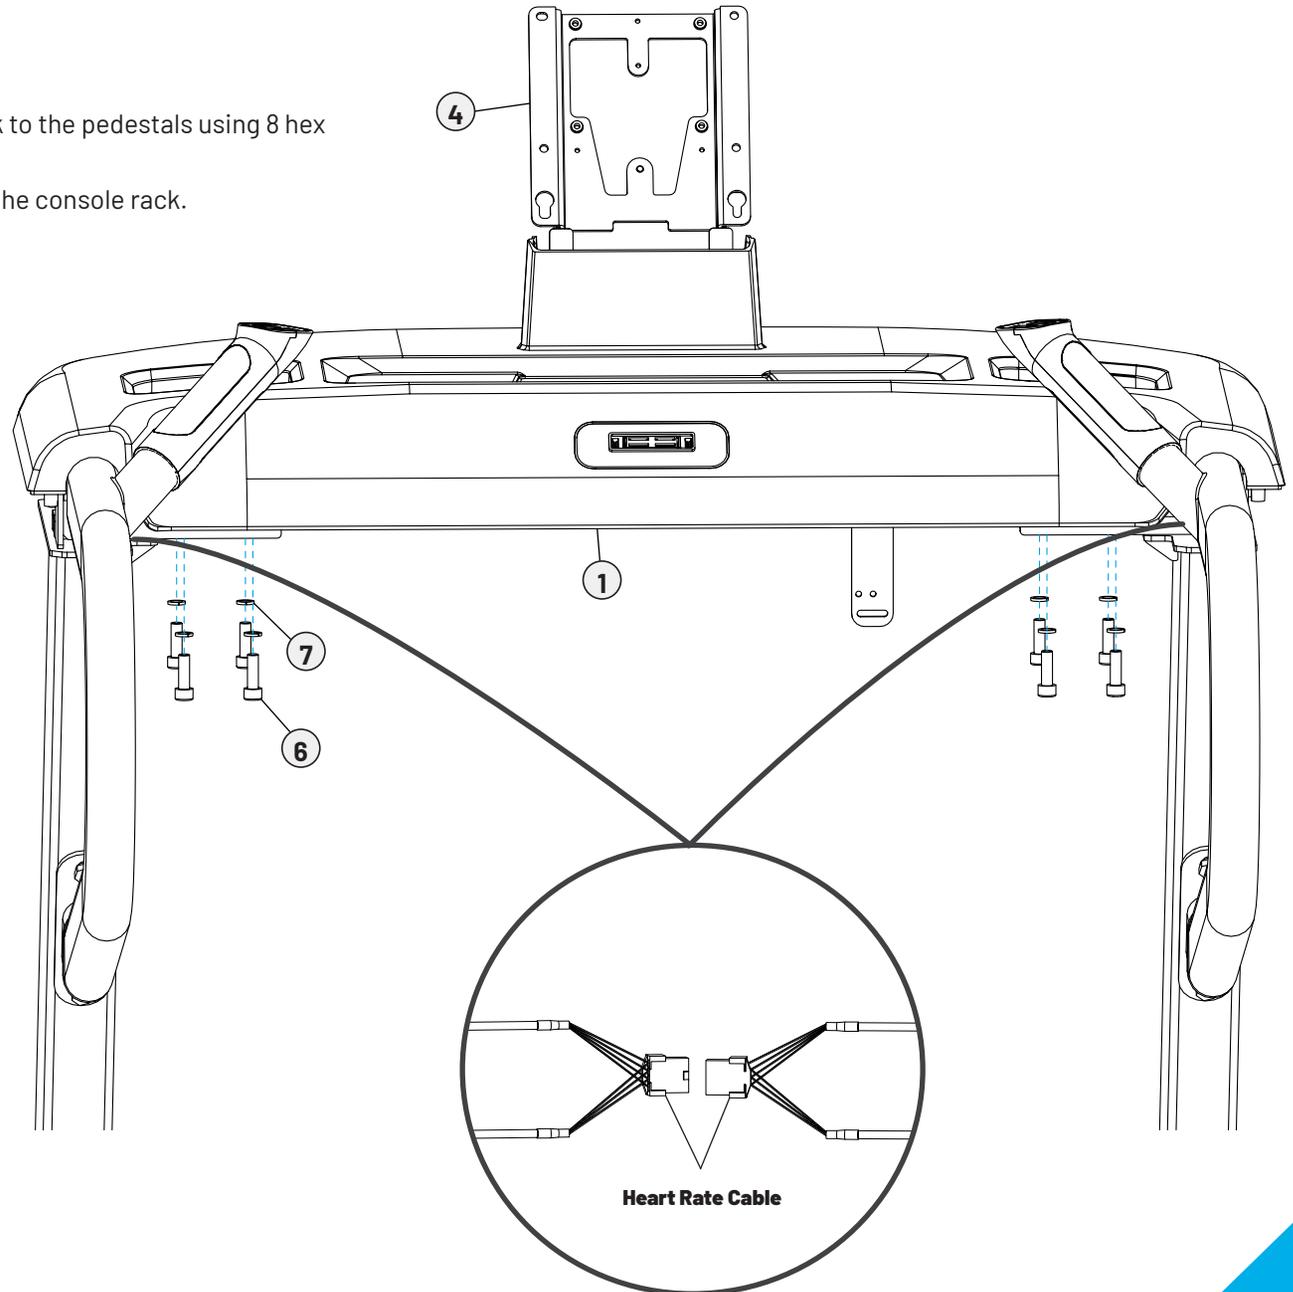

Step 5—Connect Console Rack Cables

Connect the power, coaxial, network, and I/O data cables between the right pedestal and console rack.

IMPORTANT! DO NOT pinch the cables.

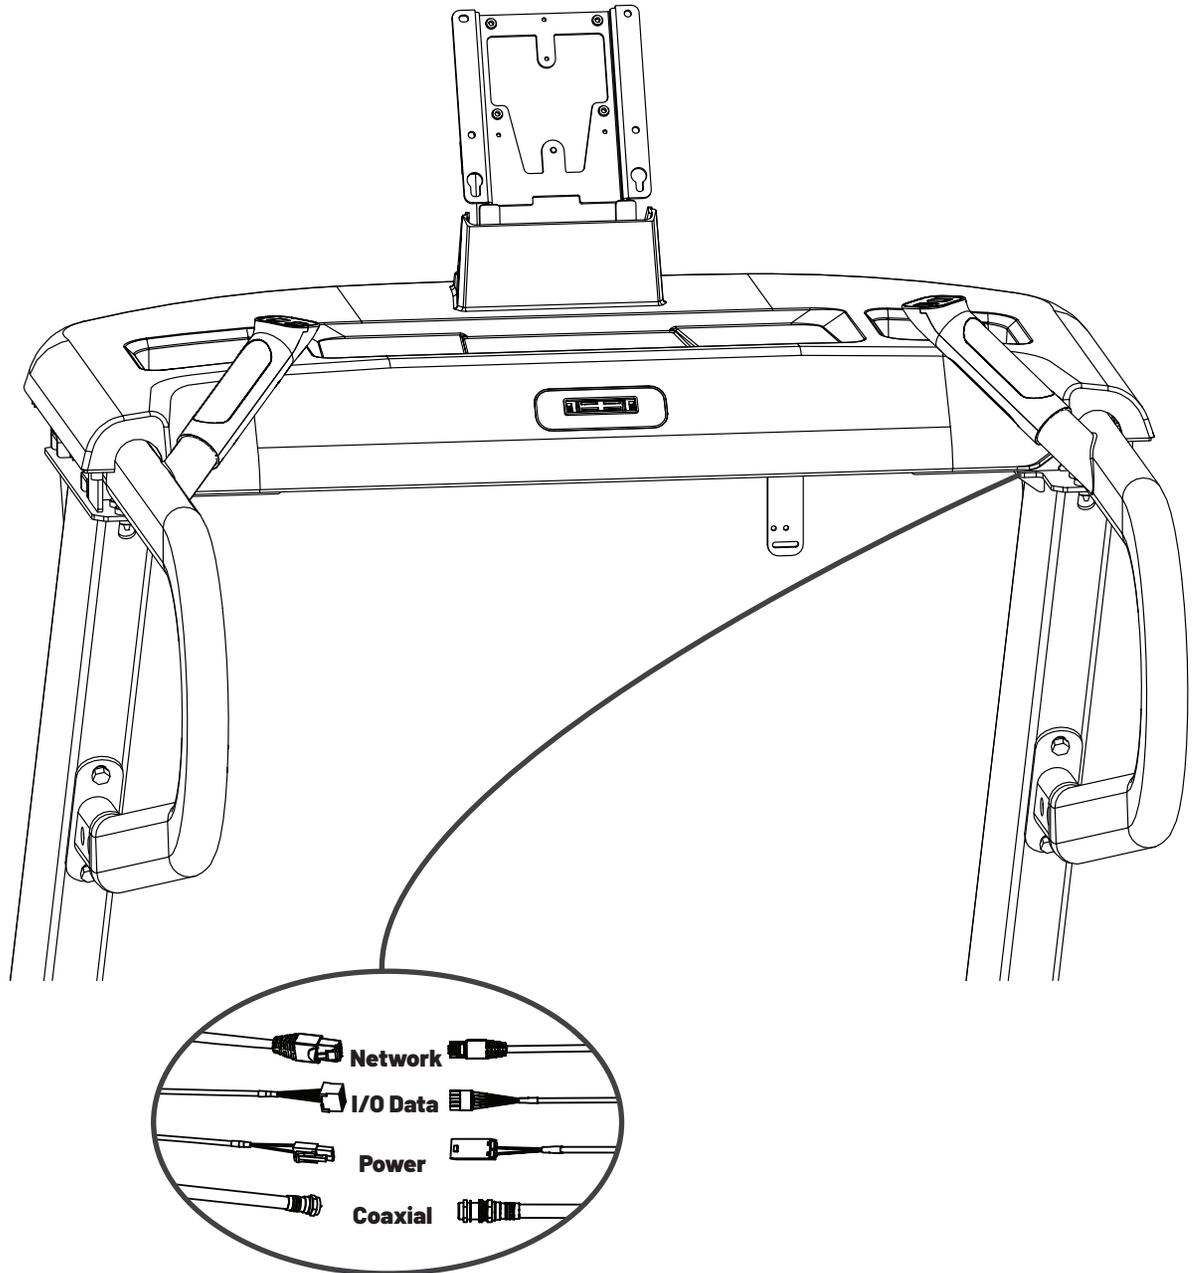


Optional Step 6—Attach Decline Foot Assembly

Tools Used in this Step	
7/8" Wrench	
15/16" Wrench	
7/16" Ratchet	

- Using 2 people, place protective padding on the floor and carefully tilt the treadmill on its side.
- Using a 7/8" open end wrench, loosen the left leveling foot and remove it from the treadmill frame.
- Using a 15/16" wrench, loosen the jam nut on the right leveling foot and remove it from the treadmill frame.
- Using a 7/16" ratchet, attach the decline brackets to the treadmill frame using 8 bolts.

NOTE: The longer decline bracket goes on the left.


Parts Used in this Step			
Item	Part	Description	Qty
1	TC10220	SUBASSEMBLY, DECLINE FEET	1
2	TCS0027	BOLT-HEX HEAD 1/4"-20UNC X 20MM	8
3	C461100	SUBASSEMBLY, LEVELING FOOT, 2-1/2" D W/JAM NUT	2

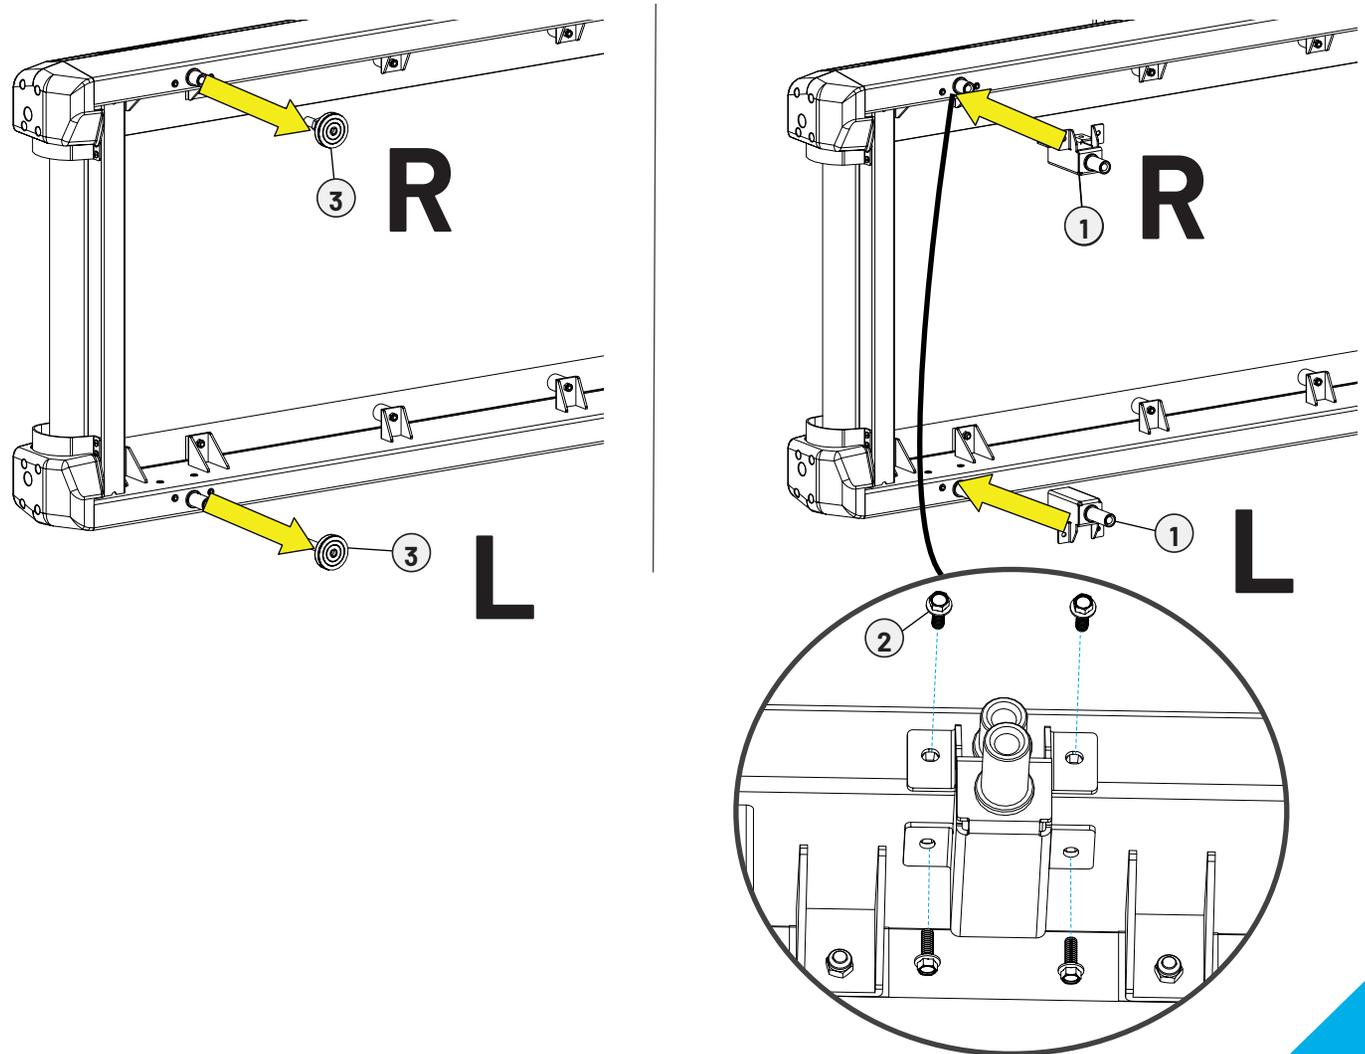

Optional Step 6—Attach Decline Foot Assembly Continued

- E. Insert the leveling feet into the decline assembly holes, tighten using a 7/8" open end wrench.
- F. Return the treadmill to the upright position.
- G. If the treadmill is not level, adjust the right leveling foot with a 7/8" open end wrench before tightening the jam nut with a 15/16" open end wrench.

NOTE: Enable decline functionality on the console, these instructions are included in the console owner's manual. If the optional decline kit is installed, select **YES, DECLINE** to enable decline functionality. A power cycle will be required to complete the process.

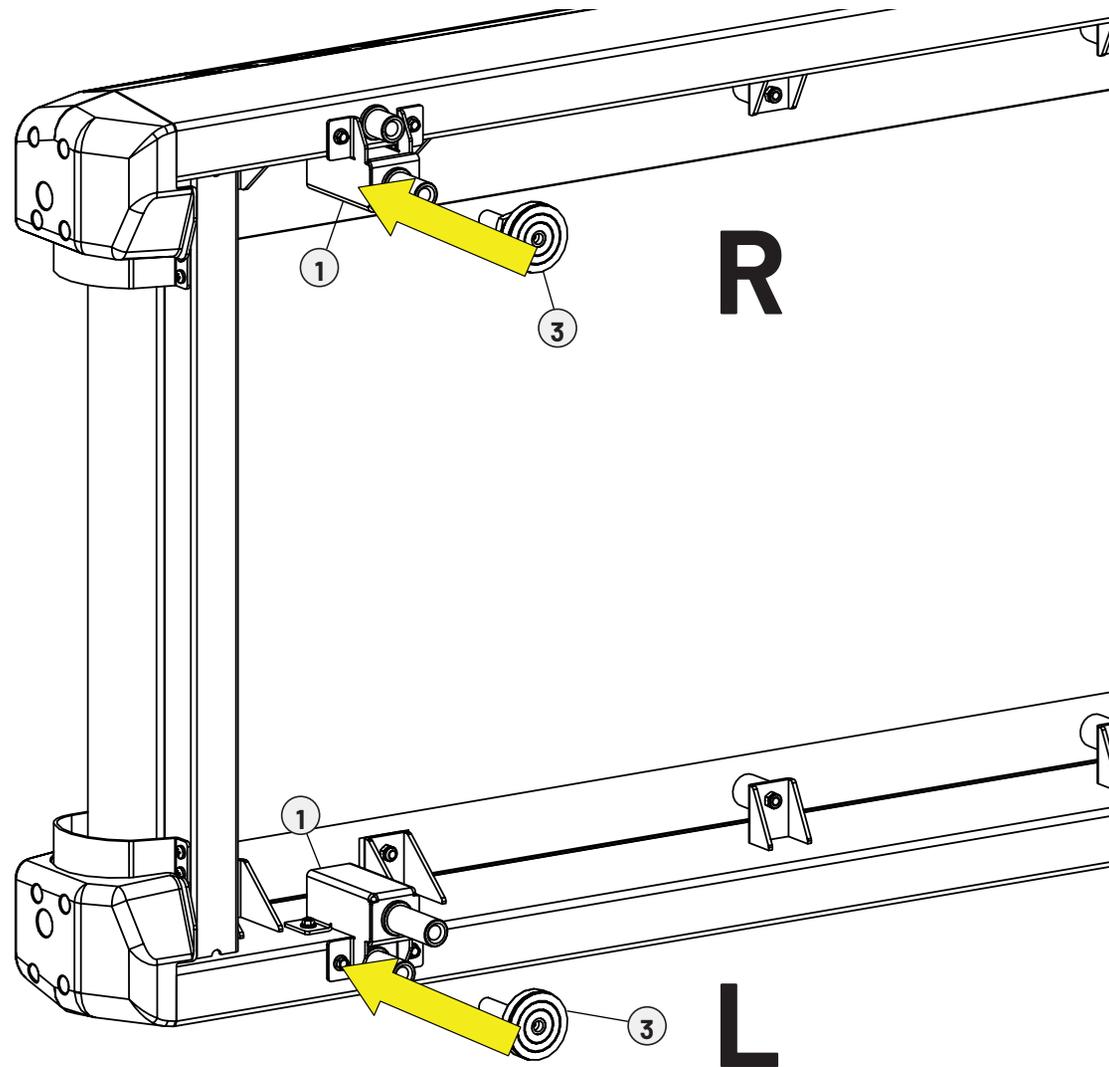


Step 7—Attach Console

Tools Used in this Step	
#2 Phillips Screwdriver	

Parts Used in this Step			
Item	Part	Description	Qty
1	N/A	CONSOLE	1
2	ST1033-35	ASSEMBLY, CONSOLE MAST	2

- A. If the console has three screws (00567700) preassembled, remove and set aside these screws. They are not used in the installation. Remove and set aside the top two screws (00567800) preassembled to the console. Slightly loosen the bottom two screw but leave them installed. All four screws will be used to secure the console to the mast in step C.

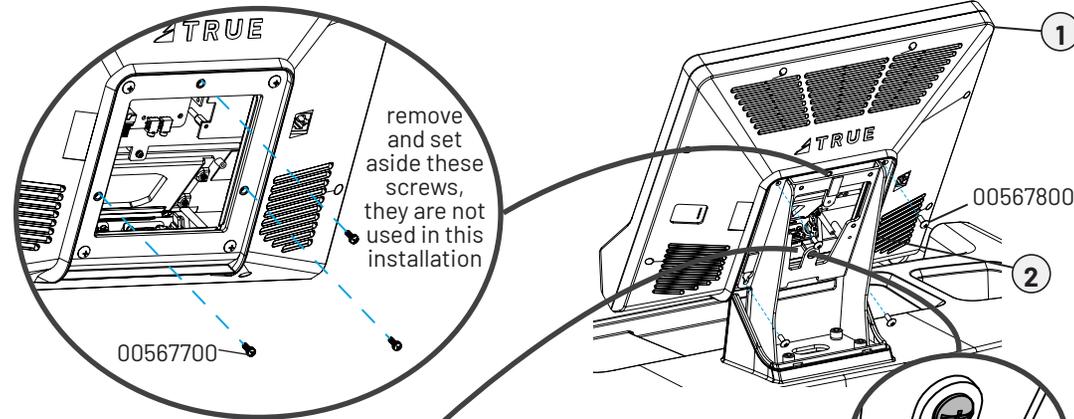


- B. Connect the console and base cables: network, coaxial, heart rate, safety key, button control, I/O data, power, and ground (use the screw on the console mast to attach the ground cable from the console).


NOTE: The LED console does not use the coaxial or network cables. Those cables can be tucked back down the console mast.

Ensure all cables are routed inside the console mast to avoid pinching cables.

- C. Using a #2 Phillips screwdriver, secure the console to the console mast using the four screws (00567800).

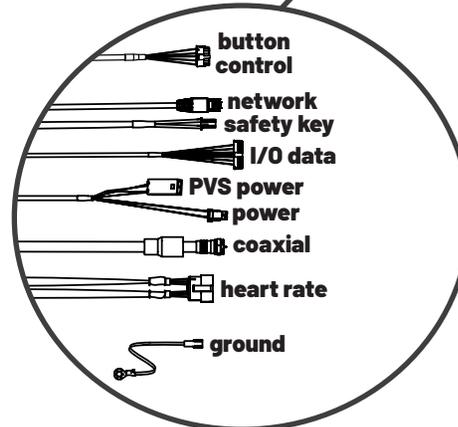

NOTE: Depending on the installation, PVS power may not be used.

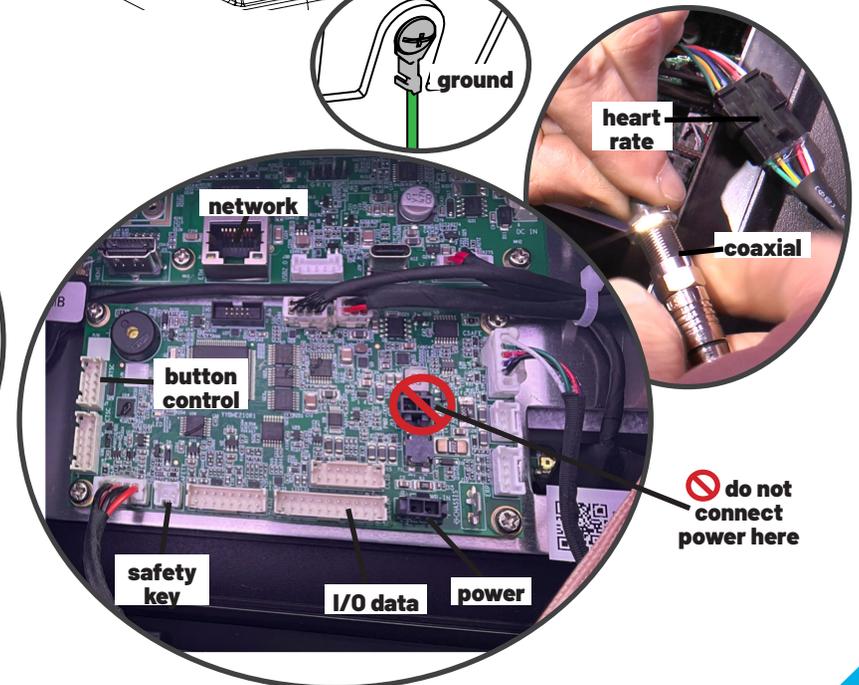

Optional Step 8—Install 220V Power Inlet Assembly

Tools Used in this Step	
#2 Phillips Screwdriver	

NOTE: This step is only for units that will be used on a circuit having a nominal rating of more than 120-V.


- A. Using a #2 Phillips screwdriver, remove the 110V power inlet assembly and 110V switch assembly.
- B. Disconnect the wires from the 110V power inlet and switch assemblies and transfer them to the 220V power inlet and switch assemblies.

IMPORTANT! The 220V panel has a green, blue, and brown dot. The dot color corresponds to the cable color.


- Move the green/yellow cable to the green dot.
- Move the blue cable to the blue dot.
- Move the brown cable to the brown dot.

NOTE: Make sure the colored cables are across from each other.


- C. Using a #2 Phillips screwdriver, secure the 220V power inlet assembly and 220V switch assembly to the frame.

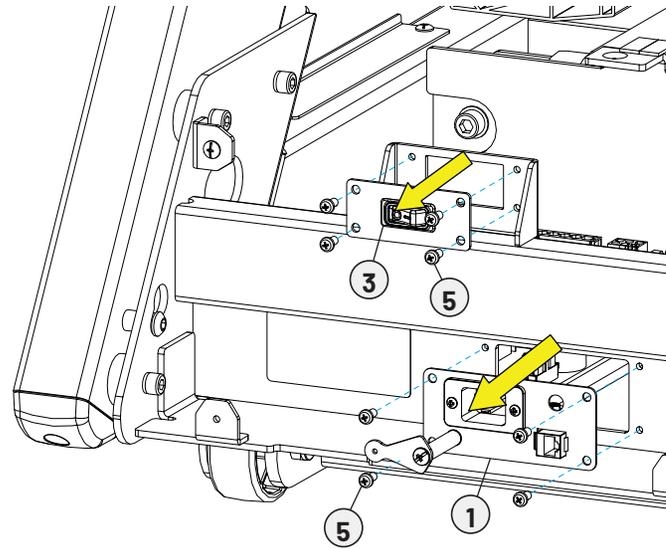


110V Power Inlet Assembly

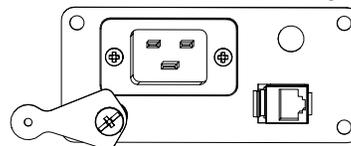

Parts Used in this Step			
Item	Part	Description	Qty
1	TC10090	ASSEMBLY, POWER PLATE, 110V	1
2	TC10091	ASSEMBLY, POWER PLATE, 220V	1
3	TC10221	SUBASSEMBLY, POWER SWITCH, 110V	1
4	TC10222	SUBASSEMBLY, POWER SWITCH, 220V	1
5	T10011	SCREW, PHMS, M5-0.8X10, BLK ZP	8

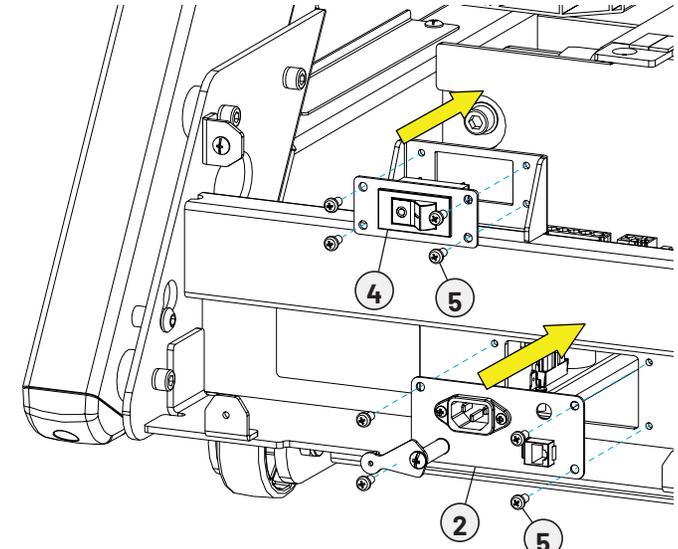


220V Power Inlet Assembly

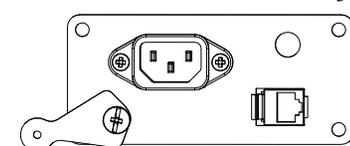


Step 9—Attach Power Cord

- A. Insert the appropriate power cord into the corresponding power inlet.
- B. Secure the power cord in place using the power cord retainer.

NOTE: In the event the current drawn by the treadmill exceeds a specified value, the circuit breaker portion of the power ON/OFF switch will trip. The rocker lever will automatically release and position itself to a position half way between ON and OFF, thus opening the power circuit. If this should occur, please wait 10 minutes and then reset the circuit breaker by rocking the power switch fully to the OFF position (⊙), and then rocking the power switch back to the ON position (☐). If it does not reset, or the circuit breaker operates again under normal use, contact TRUE Product Support at 800.883.8783 or service@truefitness.com.

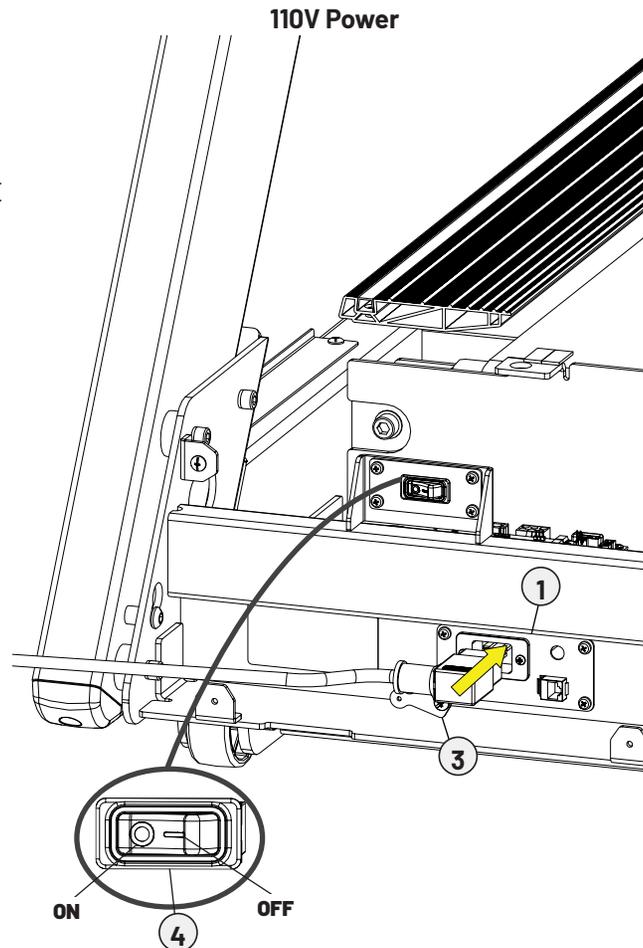

Parts Used in this Step			
Item	Part	Description	Qty
1	TC10090	ASSEMBLY, POWER PLATE, 110V	1
2	TC10091	ASSEMBLY, POWER PLATE, 220V	1
3	T10117-35	PLATE, CORD RETAINER	1
4	TC10221	SUBASSEMBLY, POWER SWITCH, 110V	1
5	TC10222	SUBASSEMBLY, POWER SWITCH, 220V	1

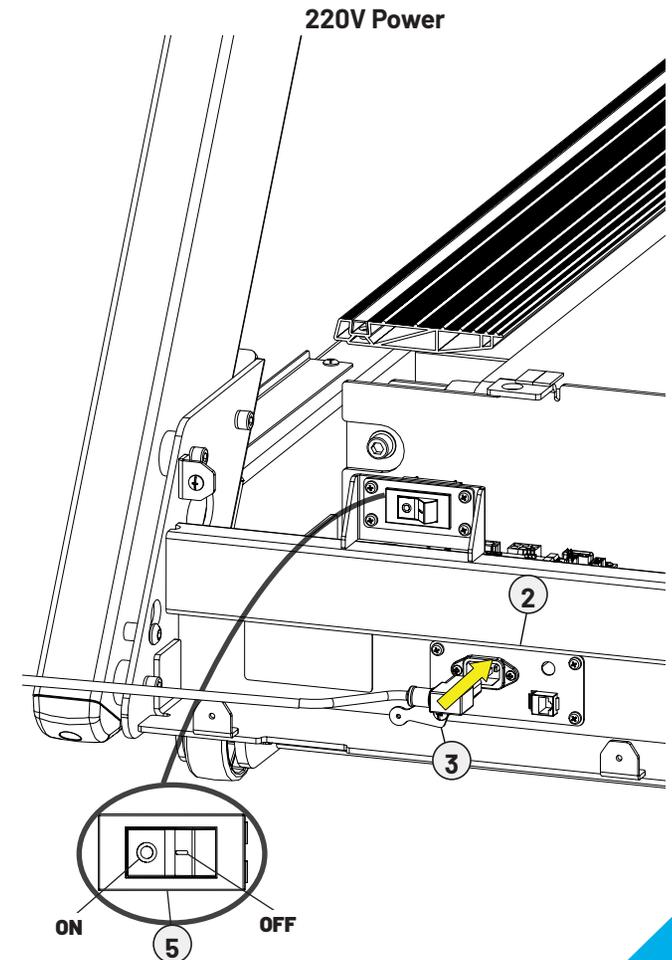

IMPORTANT STEP—DO NOT SKIP!

Step 10—Configure the Console with the Base and then Run Calibration

⚠ CAUTION: AVOID DAMAGE TO THE MACHINE!
ALWAYS VERIFY THE CORRECT BASE MODEL HAS BEEN CONFIGURED TO THE CONSOLE BEFORE RUNNING CALIBRATION.

THE CORRECT BASE MODEL FOR THIS MACHINE IS APEX TREADMILL


Please follow the instructions included with your console for important configuration and calibration steps.

Please contact product support right away if you run into issues setting up the machine:
800.883.8783 | service@truefitness.com | Monday–Friday


Step 11—Reattach Motor Cover Plastics

Tools Used in this Step	
#2 Phillips Screwdriver	

- A. Using a #2 Phillips screwdriver reattach the top motor cover plastic using 5 screws, 1 flat washer, and 1 motor cap cover.
 - B. Route the power cord through the hole in the bottom motor cover plastic and plug it into the corresponding outlet.
- NOTE:** Secure any excess cord length using the cord management bracket.
- C. Insert the coaxial and ethernet cables into the power inlet and route the cables through the hole in the bottom motor cover plastic. Plug the coax and ethernet cables into the corresponding outlets.

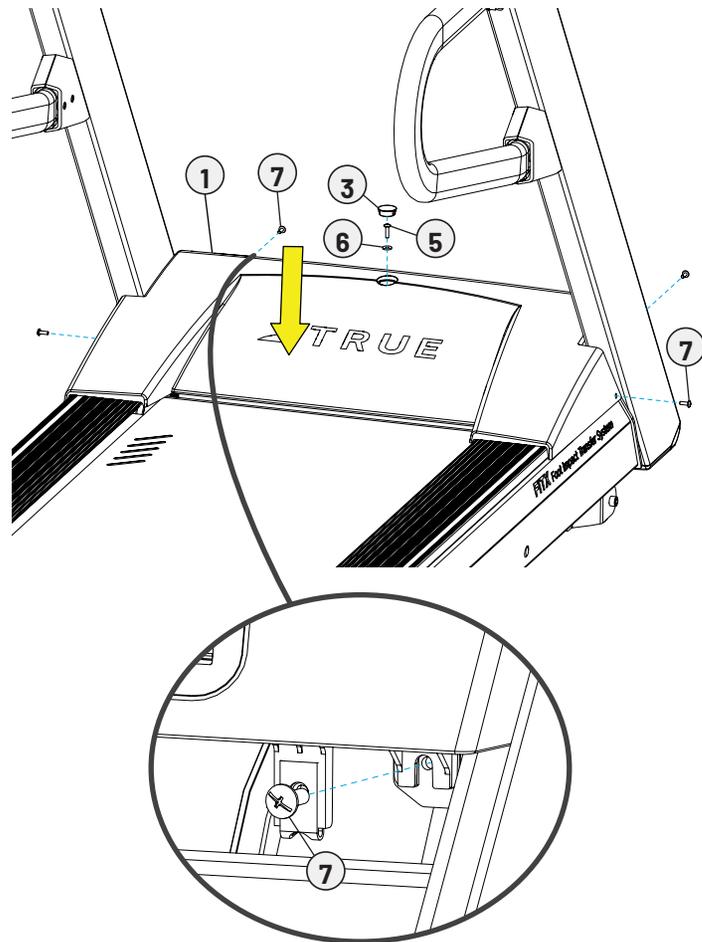


Parts Used in this Step			
Item	Part	Description	Qty
1	TC10068	COVER, MOTOR TOP ASSEMBLY	1
2	TC10069	COVER, MOTOR BOTTOM	1
3	EST0019	CAP, MOTOR COVER	1
4	TC10026	BRACKET, CORD WINDER	1
5	TC0056	BOLT M5XP0.8X20	1
6	TC10121	WASHER, M5, ID5 X OD15 X 2, BLK ZP	1
7	TC10120	SCREW, PHMS, M5-0.8X15, BLK ZP	10

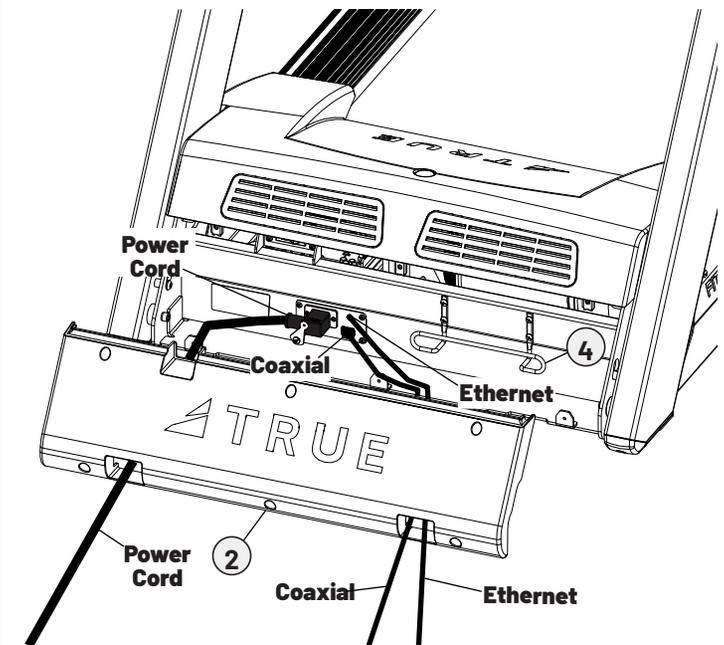

Step 11—Reattach Motor Cover Plastics Continued

- D. Using a #2 Phillips screwdriver, reattach the bottom motor cover plastic using 6 screws.

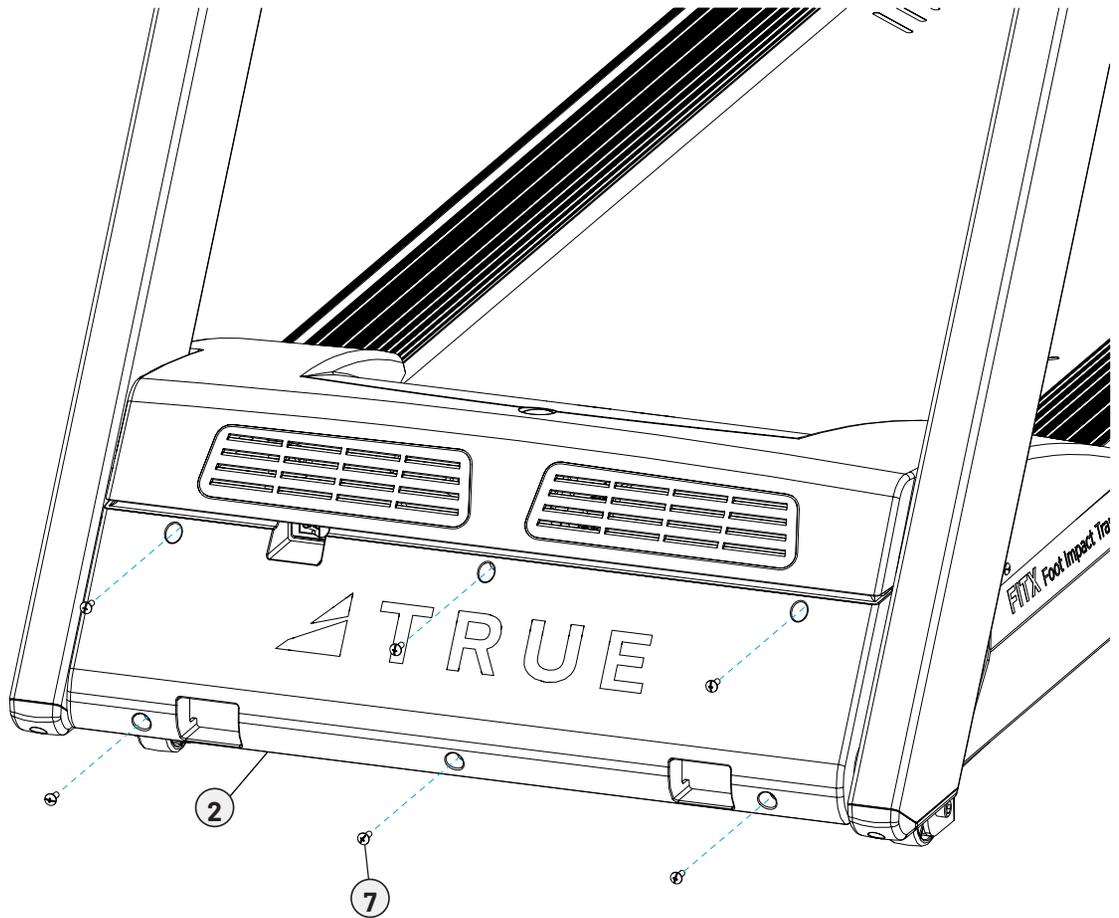

Step 12—Attach Rear Console Cover

Tools Used in this Step


#2 Phillips Screwdriver



Using a #2 Phillips screwdriver, secure the rear console cover to the console mast using 2 screws.

Parts Used in this Step

Item	Part	Description	Qty
1	TC10076	COVER, CONSOLE BACK	1
2	TI0076	TRUSS PHILLIPS BOLT M4XP0.7X12	2

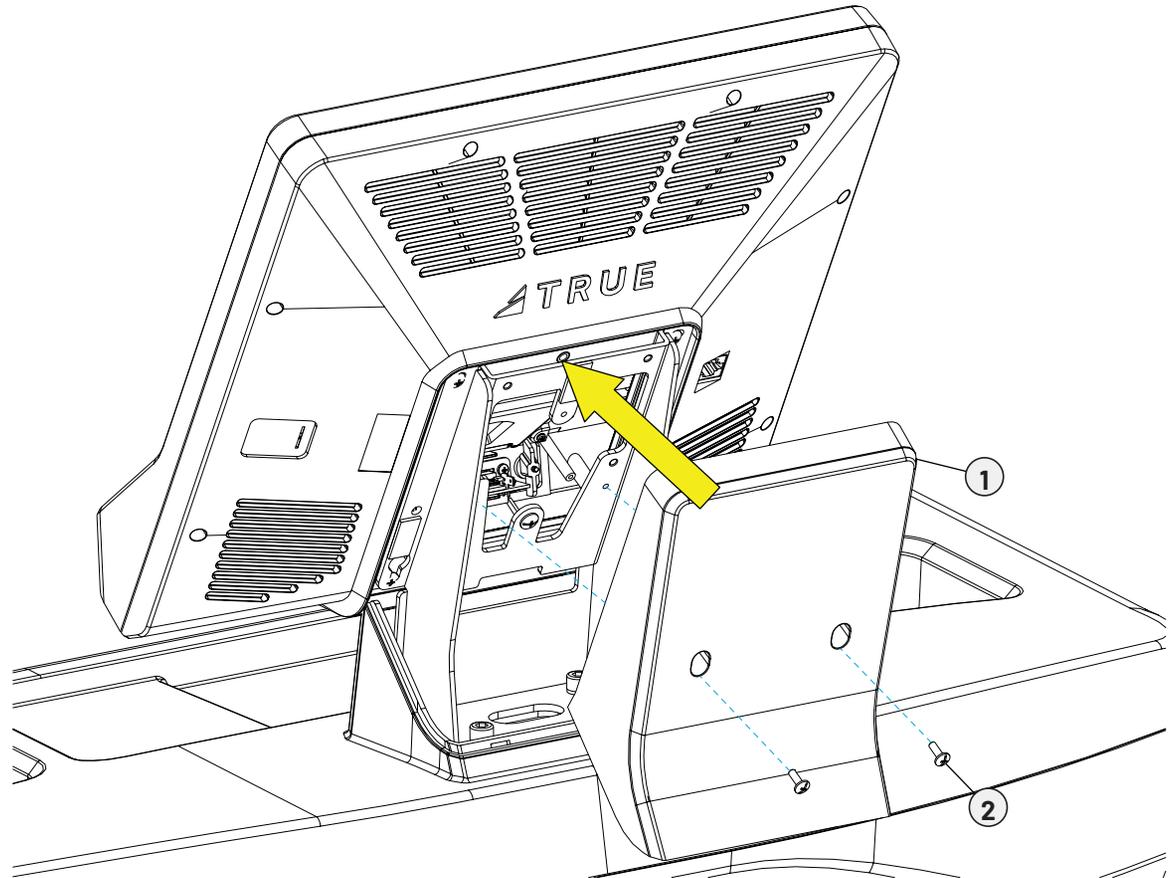

Step 13—Reattach Lower Console Rack Covers

Tools Used in this Step

#2 Phillips Screwdriver



Parts Used in this Step

Item	Part	Description	Qty
1	TC10074	SHROUD, BOTTOM FRONT	1
2	TC10075	SHROUD, BOTTOM REAR	1
3	TCS0024	SCREW, SEMS, M4-0.7X12MM, NYLOK, BLK	18


A. Tuck excess cable length into the console rack.

IMPORTANT! DO NOT pinch the cables.

B. Using a #2 Phillips screwdriver, reattach the lower console rack covers using 18 screws.

NOTE: Be sure to use a hand screwdriver on the back corners of the lower rack console covers.

NOTE: Do not fully tighten until all screws are installed.

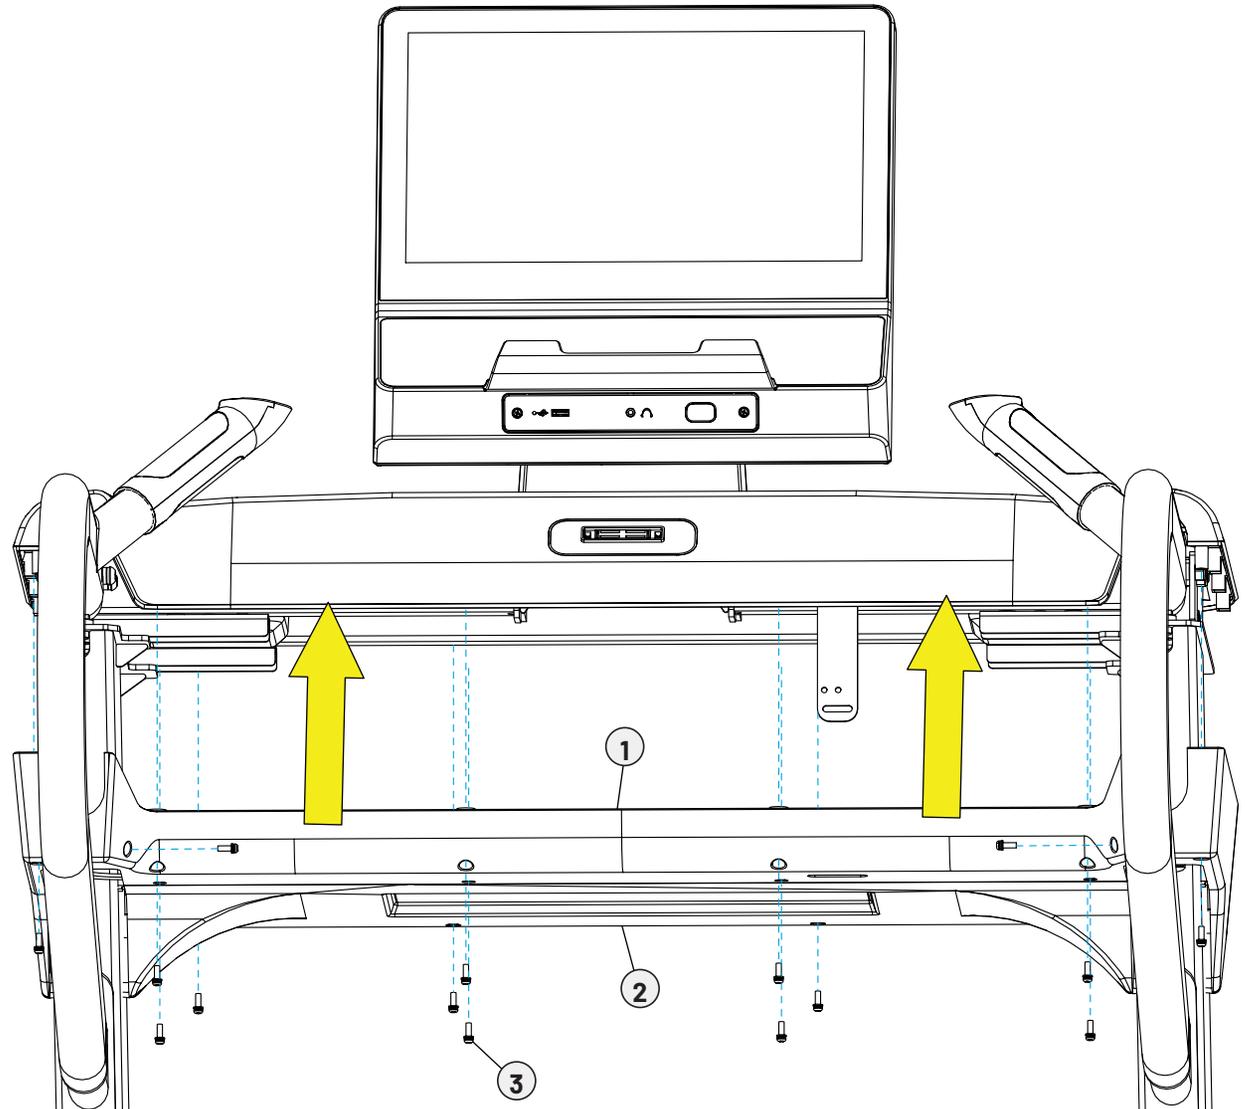


© 2026 TRUE Fitness All Rights Reserved.

Step 14—Attach Handlebar Base Covers

Tools Used in this Step	
#2 Phillips Screwdriver	

Parts Used in this Step			
Item	Part	Description	Qty
1	TC10078	SUBASSEMBLY, COVER, HANDRAIL, OUTER, LH	1
2	TC10079	COVER, HANDRAIL, INNER, LH	1
3	TC10080	SUBASSEMBLY, COVER, HANDRAIL, OUTER, RH	1
4	TC10081	COVER, HANDRAIL, INNER, RH	1
5	TCS0024	SCREW, SEMS, M4-0.7X12MM, NYLOK, BLK	4

Using a #2 Phillips screwdriver, attach the handlebar base covers using 4 screws.

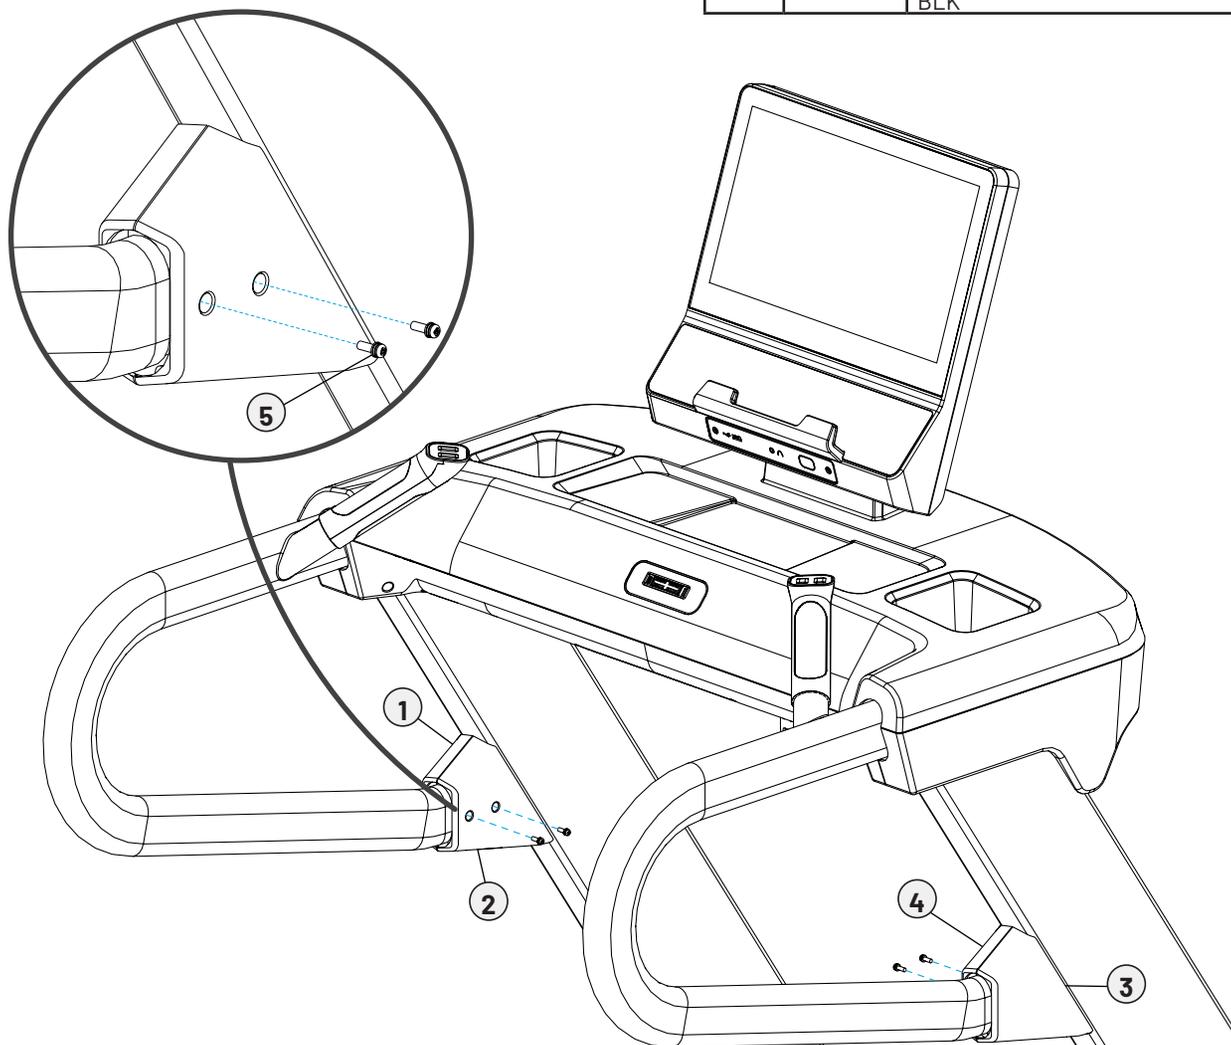

Step 15—Attach Safety Key

Parts Used in this Step			
Item	Part	Description	Qty
1	ST1024	SUBASSEMBLY, SAFETY KEY	1
2	TCS0028	CORD LOCK, SAFETY KEY	1

- Insert the safety key cord through the holes on the metal tab.
- Attach the cord lock to the end of the safety key cord and pull the cord lock up behind the metal tab.
- Attach the safety key clip to the metal tab.
- Remove protective film from safety key attachment point on the console rack.
- Attach the safety key to the console rack.



Step 16-Level the Machine


Tools Used in this Step	
7/8" Wrench	

Once the machine has been moved to its designated location:

- Verify the treadmill is resting on the floor and not on any packaging materials.
- Using a 7/8" open end wrench, adjust the back right leveling foot until it contacts the floor.

IMPORTANT! Do not adjust the leveling foot to such a height that it detaches or unscrews from the machine.

- Verify the lock nut is securely tightened and flush against the bottom of the frame.

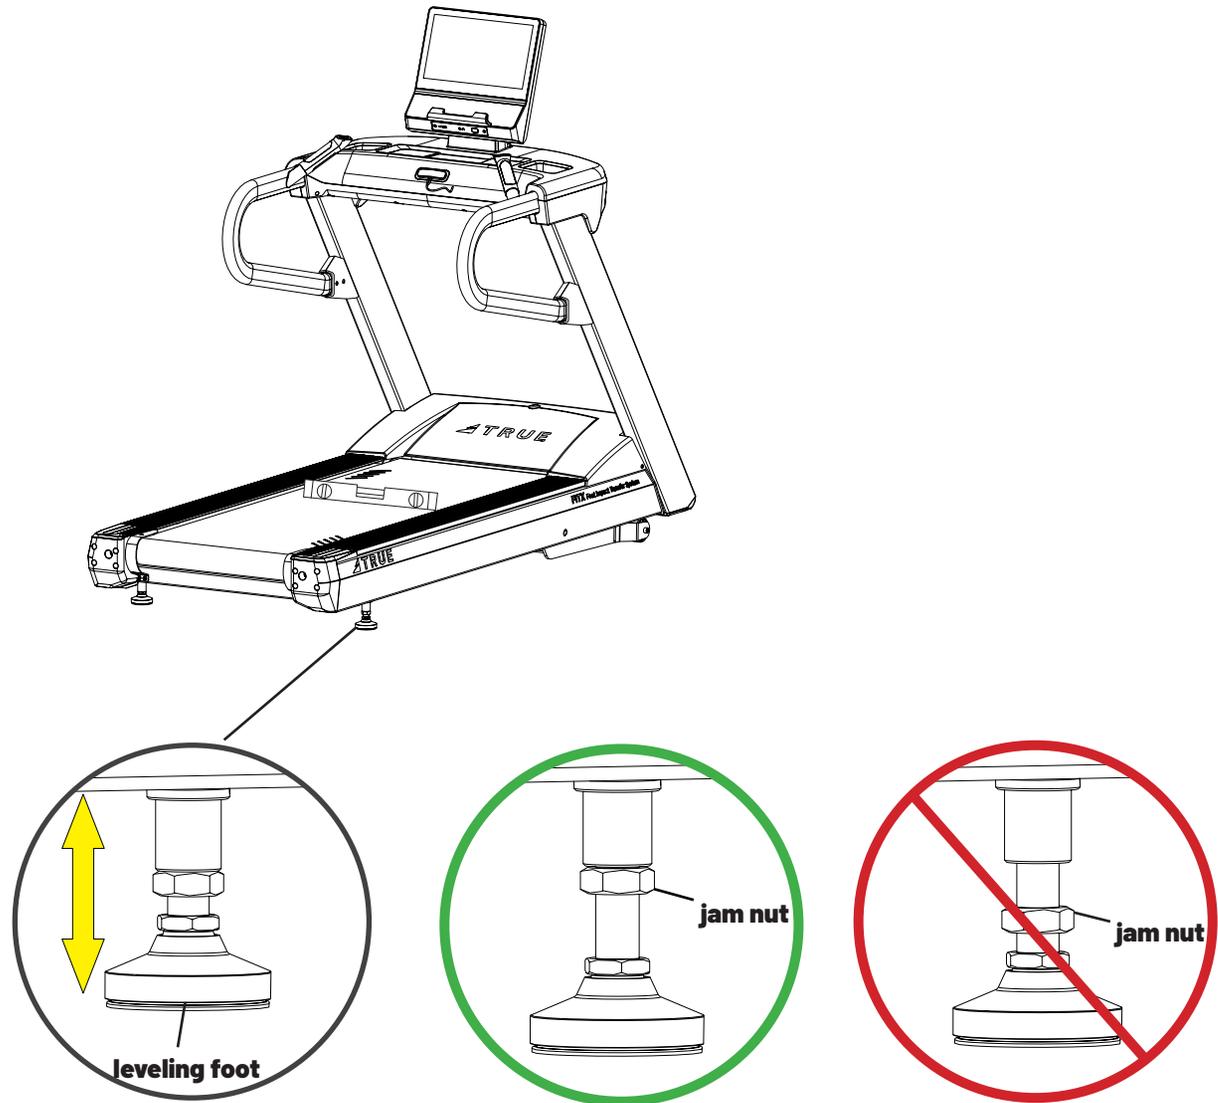


Step 17-Break in Belt and Deck

Your treadmill uses a high-efficient, low-friction, hard waxed deck and maintenance free belt. For optimal performance, TRUE recommends a 15 minute break in period to help transfer the wax from the deck to the belt. On a brand new unit, ensuring the wax has been adequately worked into the belt helps alleviate alignment and tension issues.

IMPORTANT! On a brand new unit, do not make any belt adjustments until you have completed this step.

- A. Turn on the treadmill.
- B. Step onto the treadmill and place your feet on the straddle covers.
- C. Attach the safety clip to your clothes.
- D. Press Start.
- E. When the treadmill starts, step onto the running belt.
- F. Set the speed to 3 mph (5 kph) and set the incline to 0.5%.
- G. While gripping the handrails, walk on all areas of the treadmill for 15 minutes to work in the wax: step side-to-side and front-to-back.
- H. Verify the belt is centered and feels smooth. If adjustments still need to be made, see [RUNNING BELT ALIGNMENT](#) on page 41.
- I. Check for slippage on the running belt. If adjustments still need to be made, see [TENSIONING THE RUNNING BELT](#) on page 42.


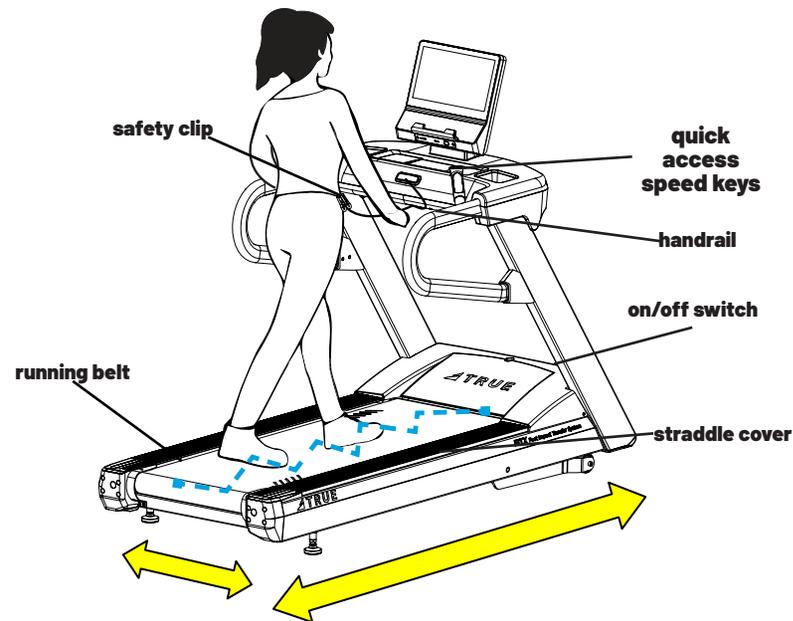


Step 18-Adjust Running Belt Tensioning

Tools Used in this Step	
8mm T-Handle Allen Wrench	
Long-Length Ruler 0"-48"/0 cm-120 cm	

To tension the running belt:

- A. Press **Stop**.
- B. Turn the treadmill off.
- C. Rotate the running belt by hand so the four horizontal tick marks are visible.
- D. Measure the distance between the tick marks on each side of the machine. The span should be at least $35\frac{61}{64}$ " (91.32 cm) but no greater than $36\frac{1}{8}$ " (91.76 cm) on each side.
- E. If the belt needs to be adjusted, locate the adjustment bolts at the rear of the treadmill.
- F. On each side of the machine, turn the adjustment bolts clockwise $\frac{1}{4}$ turn and remeasure.
- G. When both sides are measuring within range, turn the treadmill on and start the belt at 3 mph (5 kph) keeping off the unit.
- H. Allow 2 minutes for the belt to self adjust.
- I. Check to see if the belt is still slipping.

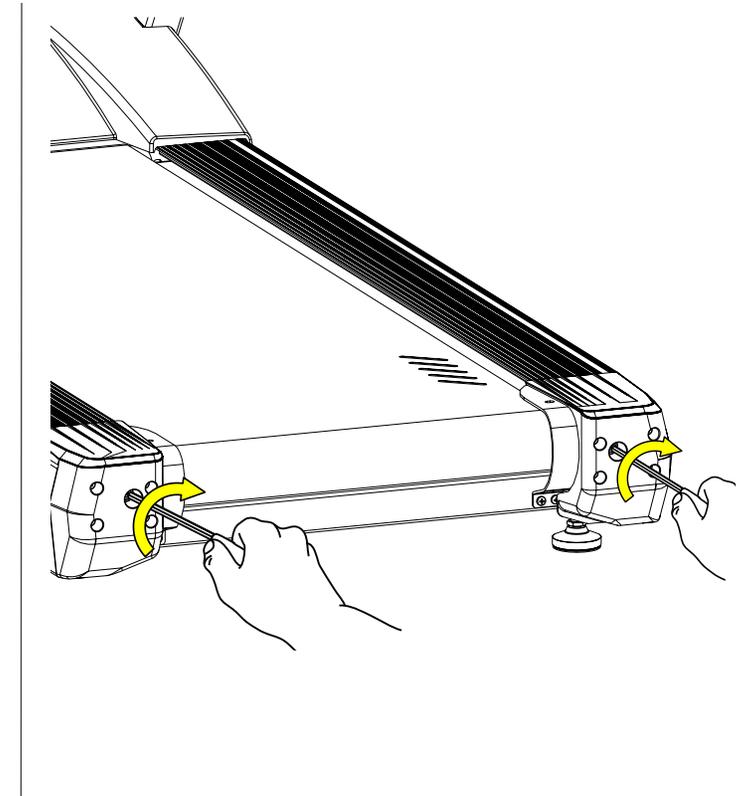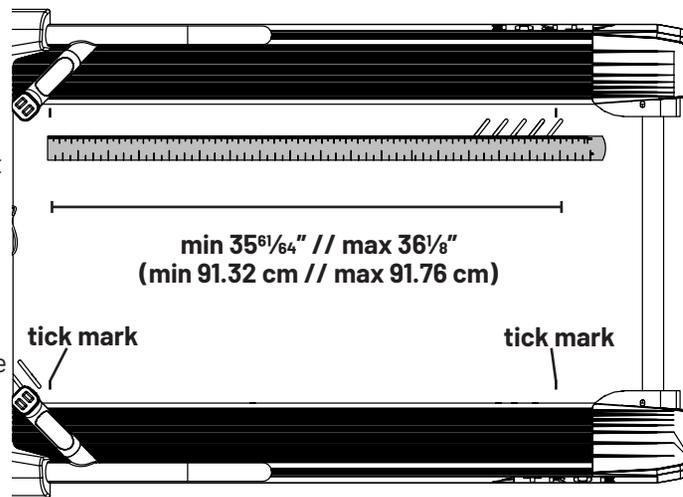

Repeat these steps if additional tensioning is needed.

PRODUCT FEATURES

BASE OVERVIEW

A. Console Assembly

The console allows the user to set up a workout program and control the treadmill during a workout.

B. Quick Access Keys

Allows the user to quickly start, stop and wake the treadmill or make fast, convenient adjustments to the incline level or speed of the treadmill.

C. Contact Heart Rate Pads

Allows the user to check their heart rate without wearing a wireless chest strap.

IMPORTANT! For increased safety and accuracy this feature should only be used when the belt speed is below 4 mph.

D. Safety (E-Stop) Key

A tethered safety device designed to attach to both the user and the treadmill console. Removal of the key from the console will stop belt motion to prevent injury in an emergency.

IMPORTANT! The safety key must be in place on the treadmill, and should be attached to the user's clothing. The treadmill will not operate if the safety key is not attached to the treadmill.

E. Belt

The moving surface of the treadmill on which the user walks or runs.

F. Straddle Covers

Stationary covers on either side of the belt, which allows the user to safely straddle the belt during startup or in the event of an emergency.

G. Belt Adjustment Bolts

An adjustment system that allows the users to adjust the belt tension as needed.

H. On/Off Switch

Allows users or faculty to turn the power on or off to the treadmill.

I. Circuit Breaker

A safety device designed to protect the treadmill from excessive electrical current.

J. Power Cord

Delivers power from the wall outlet to the treadmill.


K. Leveling Feet

An adjustable system used to aid in the leveling the treadmill.




CONSOLE OVERVIEW

UNITE TOUCHSCREENS (16" SHOWN)

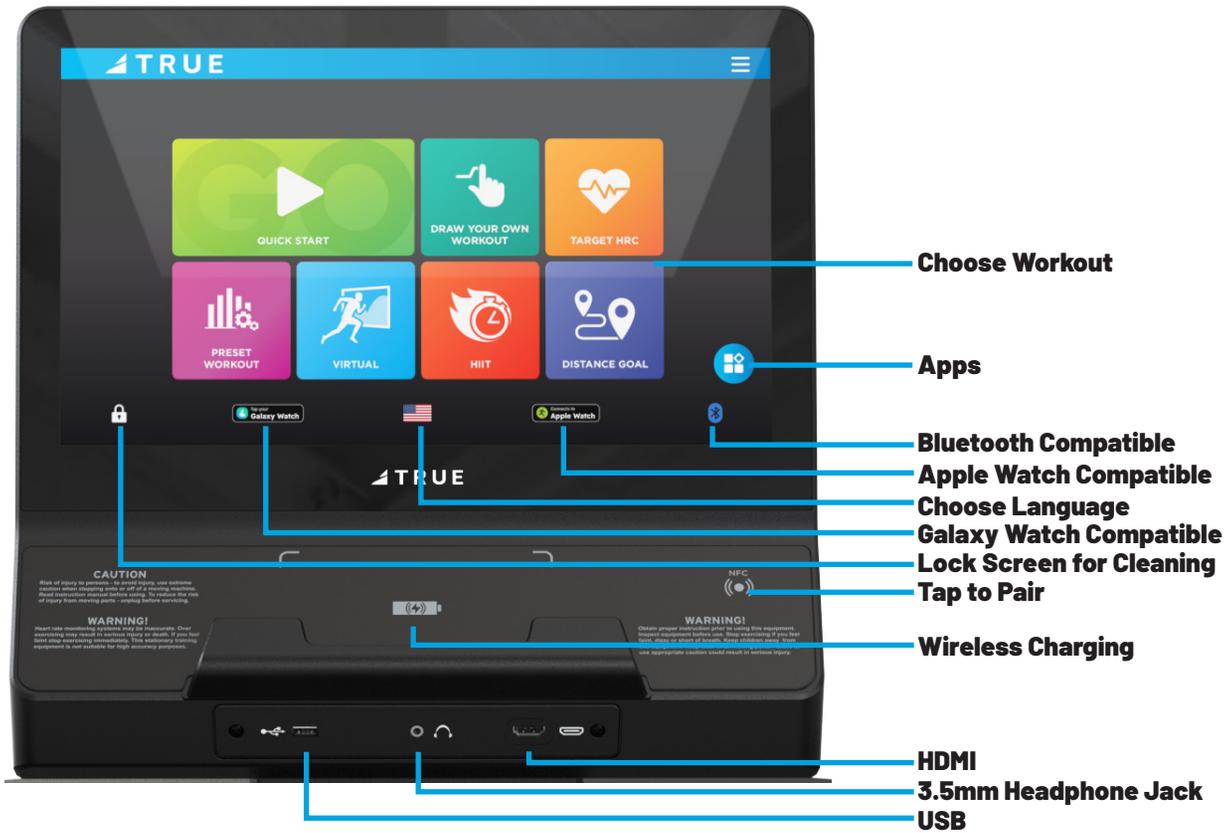

UNITE LED

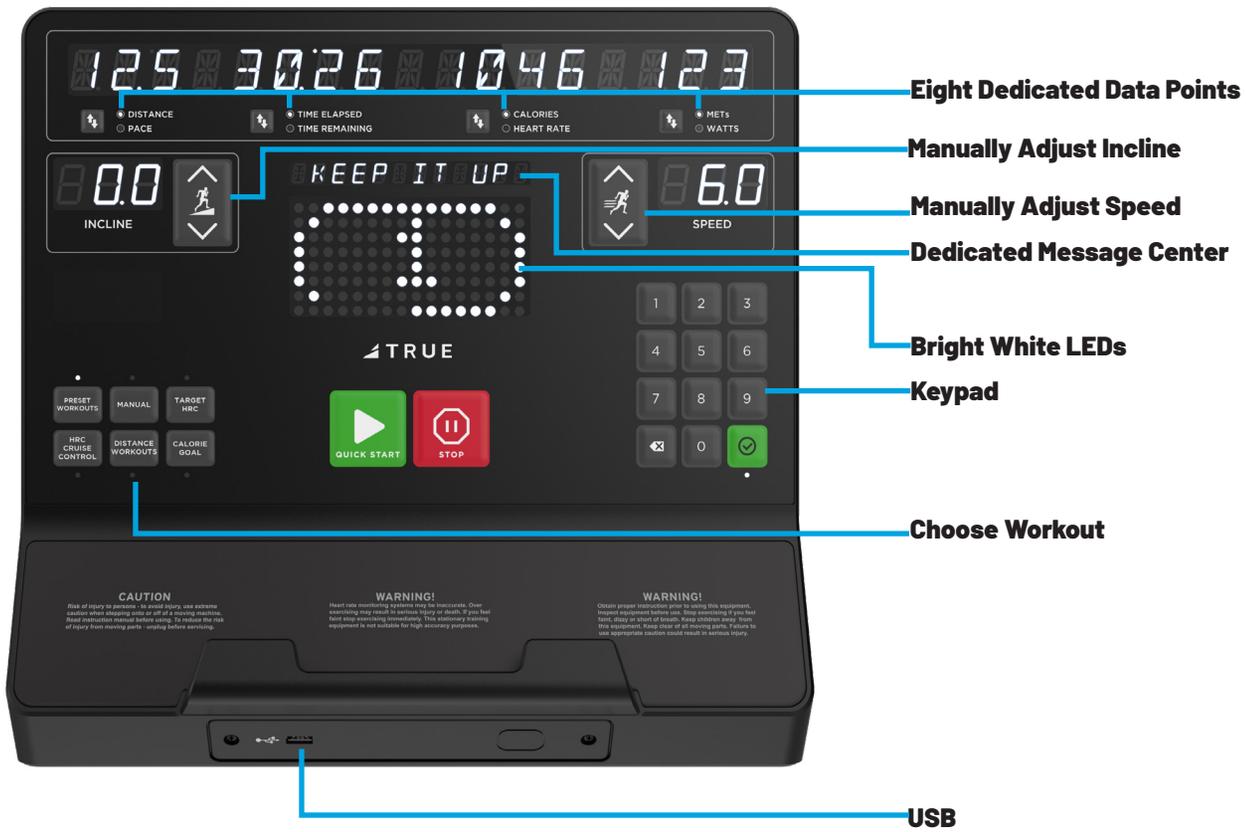

CARE AND MAINTENANCE

It is important to perform the minor maintenance tasks described in this section. Failure to maintain the treadmill as described here could void the TRUE Fitness Warranty. To reduce the risk of electrical shock, always unplug the unit from its power source before cleaning or performing any maintenance tasks.

INSPECTION

TRUE is not responsible for performing or scheduling regular maintenance or inspections. Users should inspect the treadmill daily. Check for worn, frayed or missing safety lanyards. Replace missing or worn safety lanyards immediately. Do not exercise on the treadmill without attaching the safety clip to your clothing. Look and listen for loose fasteners, unusual noises, worn or frayed power cords, and any other indications that the equipment may be in need of service. If any of these are noticed, obtain service. Do not attempt to use the treadmill until proper service has been performed or damaged parts have been replaced.

IMPORTANT!

If you determine that the treadmill needs service, make sure that the treadmill cannot be used inadvertently. Turn the unit off, and then unplug the power cord from its power source. Remove the magnetic safety key and safety clip and store it in a safe place. Make sure other users know that the treadmill needs service. To order parts or to contact a TRUE authorized service representative, please visit www.truefitness.com.

CLEANING THE EQUIPMENT

AFTER EACH USE

- Use GymWipes™ Antibacterial wipes or spray a solution of 30 parts water to 1 part mild detergent to dampen a soft cloth and wipe all exposed surfaces.
- Use a LCD/screen cleaner or spray a solution of 1 part 91% isopropyl alcohol and 1 part water to dampen a soft cloth and wipe the surface of the console. This helps remove fingerprints, dust, and dirt.

WEEKLY

- **Vacuum**—Use a vacuum to remove any dust or dirt that might have accumulated under or around the treadmill, any motor cover vents, and under the straddle covers. Clogged air vents can prevent adequate cooling to the drive motor, incline motor, and motor control board causing a shortened life.
- **Inspect Belt**—Check for proper running belt alignment and tension. If running belt adjustment is required, please see the following pages for how to adjust.

⚠ CAUTION:

Do not use any acidic cleaners. Doing so will weaken the paint or powder coatings and may void the TRUE Fitness Warranty. Never pour water or spray liquids on any part of the treadmill. Allow the treadmill to dry completely before using. Frequently vacuum the floor underneath the unit to prevent the accumulation of dust and dirt, which can affect the smooth operation of the unit. Use a soft nylon scrub brush to clean the running belt. Do not clean directly underneath the treadbelt. Most of the working mechanisms are protected inside the motor cover and base of the treadmill. However, for efficient operation, the treadmill relies on low friction. To keep the friction low, the unit's running belt, staging platforms, and internal mechanisms must be as clean as possible.

LEVELING THE MACHINE

⚠ CAUTION:


Prevent potential damage to the machine and injury to the user. This unit is equipped with adjustable rear leveling feet. Make sure that the running surface is level at all times. If the treadmill is placed on an uneven surface, adjusting the rear feet can help, but may not completely compensate for extremely uneven surfaces. Treadmills that are not level can cause misalignment of the belt, uneven belt wear, and possible injuries for the user.

Once the machine has been moved to its designated location:

- A. Verify the treadmill is resting on the floor and not on any packaging materials.
- B. Using a 7/8" open end wrench, adjust the back right leveling foot until it contacts the floor.



IMPORTANT! Do not adjust the leveling foot to such a height that it detaches or unscrews from the machine.

- C. Verify the lock nut is securely tightened and flush against the bottom of the frame.

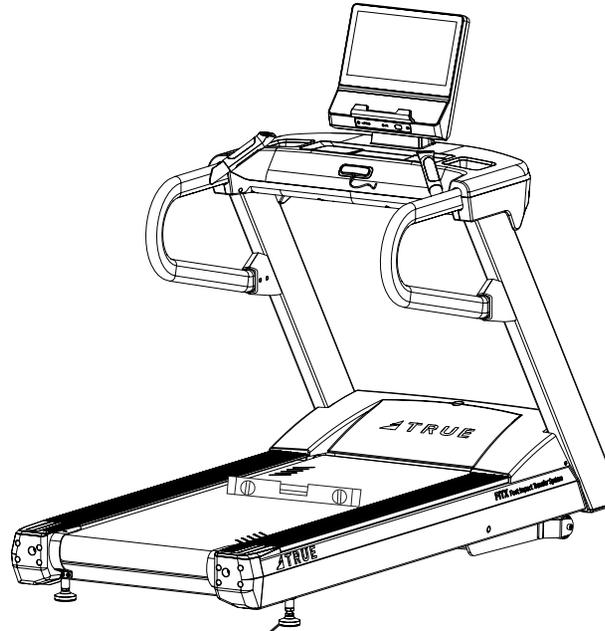

Tools Used in this Step

7/8" Wrench

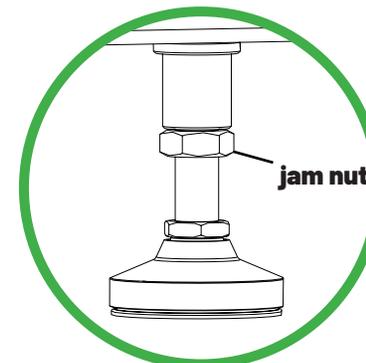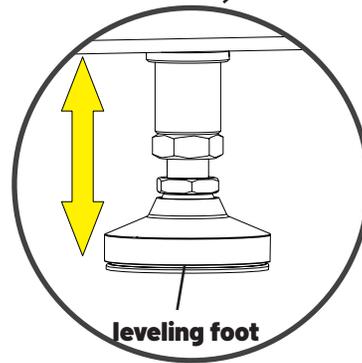

RUNNING BELT ALIGNMENT

Proper belt alignment allows the belt to remain centered and ensures smooth operation. Realigning the belt takes a few simple adjustments. If you are unsure about this procedure, contact TRUE product support (service@truefitness.com | 800.883.8783).

IMPORTANT! Damage to the running belt due to improper belt adjustments is not covered under warranty.

⚠ CAUTION:

- Verify the treadmill is level before attempting any belt adjustments. An unstable unit may cause belt misalignment.
- Special care must be taken when aligning the running belt. Turn off the treadmill while adjusting or working near the rear roller. Remove any loose clothing and tie back your hair. Be very careful to keep your fingers and any other object clear of the belt and rollers, especially in front of the roller and behind the deck. The treadmill will not stop immediately if an object becomes caught in the belt or rollers.
- If you hear any chafing or the running belt appears to be getting damaged, stop the running belt immediately by pressing **Stop**. Walk around to the rear of the unit and observe the belt for a few minutes. The belt should be centered on the running deck. If the belt drifts off center, you must make adjustments.
- For your safety, use the power switch to turn off the treadmill before making any adjustments. Do not adjust the running belt when someone is standing on the unit.
- Do not turn the adjusting bolt more than ¼ turn at a time. Over tightening the bolt can damage the treadmill and over stretch the belt.

IMPORTANT! Failure to align the belt may cause the belt to tear or fray, which may not be covered under the TRUE Warranty.

To stop the running belt:

- A. Press **Stop**.
- B. Turn the treadmill off.

If the running belt is too far to the right side:


- A. Locate the right side belt adjustment bolt at the rear of the treadmill.
(To determine left and right, stand at the rear of the treadmill and face the display.)
- B. On the right side of the machine, turn the adjustment bolt clockwise ¼ turn.
- C. Turn the treadmill on and start the belt at 3 mph (5 kph) keeping off the unit.
- D. Allow 2 minutes for the belt to self adjust.

Repeat these steps if additional adjustment is necessary.

If the running belt is too far to the left side:

- A. Locate the left side belt adjustment bolt at the rear of the treadmill.
(To determine left and right, stand at the rear of the treadmill and face the display.)
- B. On the left side of the machine, turn the adjustment bolt clockwise ¼ turn.
- C. Turn the treadmill on and start the belt at 3 mph (5 kph) keeping off the unit.
- D. Allow 2 minutes for the belt to self adjust.

Repeat these steps if additional adjustment is necessary.

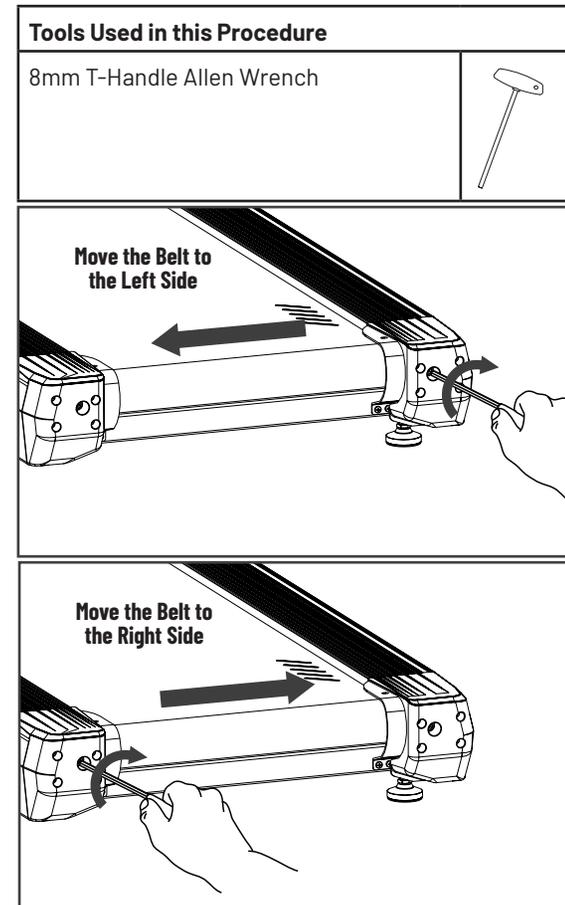

TENSIONING THE RUNNING BELT

If there is a slipping or jerking sensation when running on the treadmill, the running belt may require tightening. In most cases the belt has stretched from use. Tensioning the belt takes a few simple adjustments. If you are unsure about this procedure, contact product support (service@truefitness.com | 800.883.8783).

IMPORTANT! Damage to the running belt due to improper belt adjustments is not covered under warranty.

⚠ CAUTION:



- Verify the treadmill is level before attempting any belt adjustments. An unstable unit may cause belt misalignment.
- Special care must be taken when tensioning the running belt. Turn off the treadmill while adjusting or working near the rear roller. Remove any loose clothing and tie back your hair. Be very careful to keep your fingers and any other object clear of the belt and rollers, especially in front of the roller and behind the deck. The treadmill will not stop immediately if an object becomes caught in the belt or rollers.
- For your safety, use the power switch to turn off the treadmill before making any adjustments. Do not adjust the running belt when someone is standing on the unit.
- Do not turn the adjusting bolt more than $\frac{1}{4}$ turn at a time. Over tightening the bolt can damage the treadmill and over stretch the belt.
- If you tighten the belt and it still slips, the problem could actually be the drive belt, which is located under the motor cover and connects the motor to the front roller. If the drive belt is loose, it feels similar to the walking belt being loose. Tightening the drive belt should only be done by a trained service person, contact TRUE product support for assistance.

To tension the running belt:

- A. Press **Stop**.
- B. Turn the treadmill off.
- C. Rotate the running belt by hand so the four horizontal tick marks are visible.
- D. Measure the distance between the tick marks on each side of the machine. The span should be at least $35\frac{61}{64}$ " (91.32 cm) but no greater than $36\frac{1}{8}$ " (91.76 cm) on each side.
- E. If the belt needs to be adjusted, locate the adjustment bolts at the rear of the treadmill.
- F. On each side of the machine, turn the adjustment bolts clockwise $\frac{1}{4}$ turn and remeasure.
- G. When both sides are measuring within range, turn the treadmill on and start the belt at 3 mph (5 kph) keeping off the unit.
- H. Allow 2 minutes for the belt to self adjust.
- I. Check to see if the belt is still slipping.

Repeat these steps if additional tensioning is needed.

Tools Used in this Procedure	
8mm T-Handle Allen Wrench	
Long-Length Ruler 0"-48"/0 cm-120 cm	

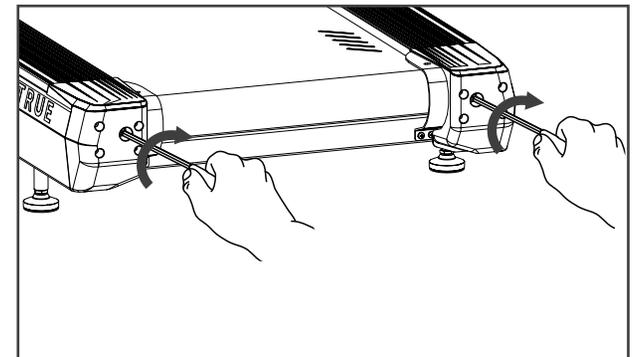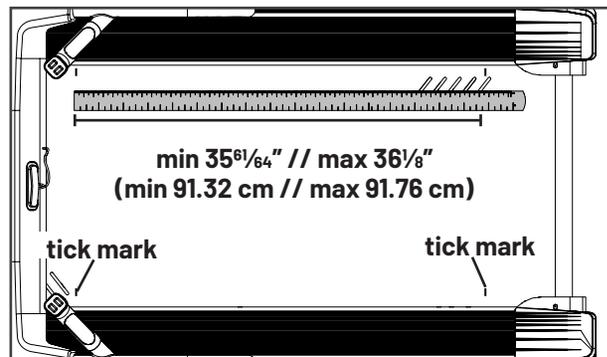

PREVENTATIVE MAINTENANCE

TRUE recommends that quarterly scheduled maintenance be performed by a qualified service technician. Please contact your dealer or visit www.truefitness.com to contact a local TRUE authorized service technician.

IMPORTANT! Use only TRUE Fitness certified service providers. Using non-authorized service providers could void the TRUE Warranty.

Frequency	Tasks
Daily	<ul style="list-style-type: none">• Look and listen for loose fasteners, unusual noises, worn or frayed cables, and any other indications that the equipment may be in need of service.• Use GymWipes™ Antibacterial wipes or spray a solution of 30 parts water to 1 part mild detergent to dampen a soft cloth and wipe all exposed surfaces.• Use a LCD/screen cleaner or spray a solution of 1 part 91% isopropyl alcohol and 1 part water to dampen a soft cloth and wipe the surface of the console. This helps remove fingerprints, dust, and dirt.
Weekly	<ul style="list-style-type: none">• Vacuum any dust or dirt that might have accumulated under or around the treadmill. Clogged air vents can prevent adequate cooling to the drive motor, incline motor, and motor control board causing a shortened life.• Check for proper running belt tension.
Quarterly	<ul style="list-style-type: none">• Record time, distance, and hours from the console.• Check error log in console.• Remove shroud covers and vacuum any debris out of the speed sensor, control electronics and moving parts.• Move and vacuum underneath the machine.• Inspect all fasteners.• Inspect all electrical connections.• Inspect components for abnormal or premature wear.

LONG TERM STORAGE

When the treadmill is not in use for any length of time, turn it off. Make sure that the power cord is unplugged from the power source and is positioned so that it will not become damaged or interfere with people or other equipment.

CLEANING AND STORING THE CHEST STRAP

Clean the chest strap using a sponge or soft cloth dampened in mild soap and water. Dry the surface thoroughly with a clean towel. Store the chest strap in a place where it remains free of dust and dirt. Be sure to protect the chest strap from extreme temperatures. Do not store it in a place that may be exposed to temperatures below 32° F (0° C).

ADDITIONAL INFORMATION

TROUBLESHOOTING

This troubleshooting information is intended to assist in diagnostics only and is not all inclusive. Technical specifications, error codes, and programming are subject to change without notice. TRUE accepts no liability for any damage or loss suffered by persons whom rely wholly or in part on any description or statement contained within this manual. Please visit www.truefitness.com to obtain the most recent version of all manuals and contact TRUE product support (800-883-8783) for assistance with troubleshooting and diagnostics.

Malfunction	Possible Cause	Corrective Action
No Power	Unit turned off	Verify the On/Off switch is at the ON position
	Damaged power cord	Replace power cord
	Power cord not fully seated in socket	Inspect power connection at the unit and outlet
	No power at outlet	Using a voltmeter verify power at outlet
	Tripped circuit breaker	The location of the circuit breaker is next to the On/Off switch. Verify the circuit breaker is not open. If the breaker is open reset.
Unit resets or pauses randomly	Damaged power cord	Replace power cord
	Power cord not fully seated in socket	Inspect power connection at the unit and outlet
	Safety e-stop key not fully engaged	Re-engage the safety/e-stop key to the console
	Nucleus board may be damaged	Contact TRUE product support
	Insufficient power	Verify output voltage from 20A outlet with a voltmeter
	Error code is displayed on console	Contact TRUE product support
	Pinched or loose main communication cable	
No User Present displayed on screen	User weight must be over 90lbs. Verify No User Present settings in console.	
Walking belt hesitates or slips when stepping	Adjust belt tension	See Tensioning the Running Belt
Rubbing sound from treadmill when in operation	Foreign object may be stuck under walking belt	Inspect under the unit. Remove and object that may be under the unit.
	Foreign object may be stuck in motor compartment	
	Rollers may be damaged or misaligned	Contact TRUE product support
	Drive motor may be damaged	
	Drive belt may be misaligned	
	Interference with anti-pinch bracket	
	Adjust belt tension	See Tensioning the Running Belt







Malfunction	Possible Cause	Corrective Action
Heart rate is displaying erratically or not displaying	Transmitter belt contacts are not making good contact with the skin	Re-adjust the transmitter belt so that it is in full contact with the skin
	Contacts on the transmitter belt are not moist	Moisten the contacts on the transmitter belt
	Transmitter belt is not within 3 feet (1 meter) of the heart rate receiver	Adjust your position on the belt so that you are within 3 feet (1 meter) of the console
	The battery inside the transmitter belt is depleted	Replace the transmitter belt with a compatible transmitter belt
	Another user wearing a compatible transmitter strap is within 3 foot (1 meter) of the unit	Move the units so that there is more space in-between units
	Environmental interference from high voltage power lines	Move the unit to another position within the room or move the cause of the interference until heart rate reading are stable. If the probable source of interference is plugged into the same outlet move the suspect source to another outlet.
	Environmental interference from computers	
	Environmental interference from motor driven appliances	
	Environmental interference from cell or cordless phone	
	Environmental interference from Wi-Fi router	
Contact Heart Rate not displaying	Machine needs to be restarted	Power cycle
	Cables are pinched or damaged	Contact TRUE product support
	Nucleus board may be damaged	Contact TRUE product support
	Heart Rate Grips may be damaged	Contact TRUE product support

WIRING DIAGRAMS

TCL-0A-35 and TC2-0A-35 Wiring Diagram

Removed wires	
Line Part Number	Old Part Number
JTC0001	XL-1979A
JTC0002	XL-1979A
JTC0003	XL-2028
JTC0004	XL-2027
JTC0005	XL-1979A
JTC0006	XL-1979B
JTC0007	XL-1979B
JTC0008	XL-1979B
JTC0009	XL-1979B
JTC0010	XL-1979B
JTC0011	XL-1979B
JTC0012	XL-1979B
JTC0013	XL-1979B
JTC0014	XL-1979B
JTC0015	XL-1979B
JTC0016	XL-1979B
JTC0017	XL-1979B
JTC0018	XL-1979B
JTC0019	XL-1979B
JTC0020	XL-1979B
JTC0021	XL-1979B
JTC0022	XL-1979B
JTC0023	XL-1979B
JTC0024	XL-1979B
JTC0025	XL-1979B
JTC0026	XL-1979B
JTC0027	XL-1979B
JTC0028	XL-1979B
JTC0029	XL-1979B
JTC0030	XL-1979B
JTC0031	XL-1979B
JTC0032	XL-1979B
JTC0033	XL-1979B
JTC0034	XL-1979B
JTC0035	XL-1979B
JTC0036	XL-1979B
JTC0037	XL-1979B
JTC0038	XL-1979B
JTC0039	XL-1979B
JTC0040	XL-1979B
JTC0041	XL-1979B
JTC0042	XL-1979B
JTC0043	XL-1979B
JTC0044	XL-1979B
JTC0045	XL-1979B
JTC0046	XL-1979B
JTC0047	XL-1979B
JTC0048	XL-1979B
JTC0049	XL-1979B
JTC0050	XL-1979B
JTC0051	XL-1979B
JTC0052	XL-1979B
JTC0053	XL-1979B
JTC0054	XL-1979B
JTC0055	XL-1979B
JTC0056	XL-1979B
JTC0057	XL-1979B
JTC0058	XL-1979B
JTC0059	XL-1979B
JTC0060	XL-1979B
JTC0061	XL-1979B
JTC0062	XL-1979B
JTC0063	XL-1979B
JTC0064	XL-1979B
JTC0065	XL-1979B
JTC0066	XL-1979B
JTC0067	XL-1979B
JTC0068	XL-1979B
JTC0069	XL-1979B
JTC0070	XL-1979B
JTC0071	XL-1979B
JTC0072	XL-1979B
JTC0073	XL-1979B
JTC0074	XL-1979B
JTC0075	XL-1979B
JTC0076	XL-1979B
JTC0077	XL-1979B
JTC0078	XL-1979B
JTC0079	XL-1979B
JTC0080	XL-1979B
JTC0081	XL-1979B
JTC0082	XL-1979B
JTC0083	XL-1979B
JTC0084	XL-1979B
JTC0085	XL-1979B
JTC0086	XL-1979B
JTC0087	XL-1979B
JTC0088	XL-1979B
JTC0089	XL-1979B
JTC0090	XL-1979B
JTC0091	XL-1979B
JTC0092	XL-1979B
JTC0093	XL-1979B
JTC0094	XL-1979B
JTC0095	XL-1979B
JTC0096	XL-1979B
JTC0097	XL-1979B
JTC0098	XL-1979B
JTC0099	XL-1979B
JTC0100	XL-1979B

Added wires	
Line Part Number	Old Part Number
JTC0001	
JTC0002	
JTC0003	
JTC0004	
JTC0005	
JTC0006	
JTC0007	
JTC0008	
JTC0009	
JTC0010	
JTC0011	
JTC0012	
JTC0013	
JTC0014	
JTC0015	
JTC0016	
JTC0017	
JTC0018	
JTC0019	
JTC0020	
JTC0021	
JTC0022	
JTC0023	
JTC0024	
JTC0025	
JTC0026	
JTC0027	
JTC0028	
JTC0029	
JTC0030	
JTC0031	
JTC0032	
JTC0033	
JTC0034	
JTC0035	
JTC0036	
JTC0037	
JTC0038	
JTC0039	
JTC0040	
JTC0041	
JTC0042	
JTC0043	
JTC0044	
JTC0045	
JTC0046	
JTC0047	
JTC0048	
JTC0049	
JTC0050	
JTC0051	
JTC0052	
JTC0053	
JTC0054	
JTC0055	
JTC0056	
JTC0057	
JTC0058	
JTC0059	
JTC0060	
JTC0061	
JTC0062	
JTC0063	
JTC0064	
JTC0065	
JTC0066	
JTC0067	
JTC0068	
JTC0069	
JTC0070	
JTC0071	
JTC0072	
JTC0073	
JTC0074	
JTC0075	
JTC0076	
JTC0077	
JTC0078	
JTC0079	
JTC0080	
JTC0081	
JTC0082	
JTC0083	
JTC0084	
JTC0085	
JTC0086	
JTC0087	
JTC0088	
JTC0089	
JTC0090	
JTC0091	
JTC0092	
JTC0093	
JTC0094	
JTC0095	
JTC0096	
JTC0097	
JTC0098	
JTC0099	
JTC0100	

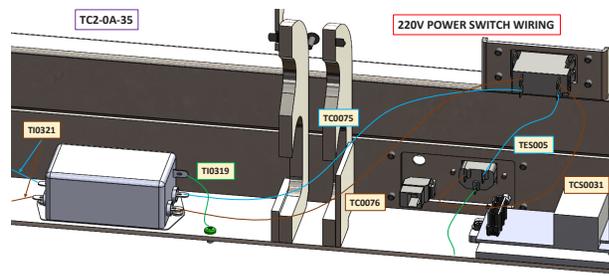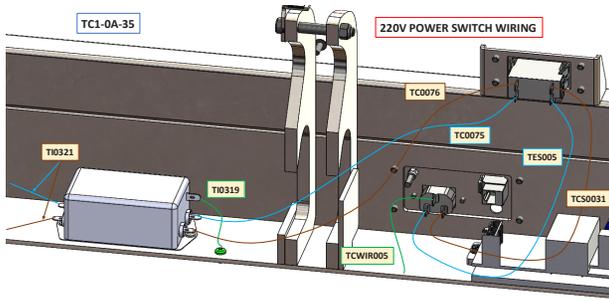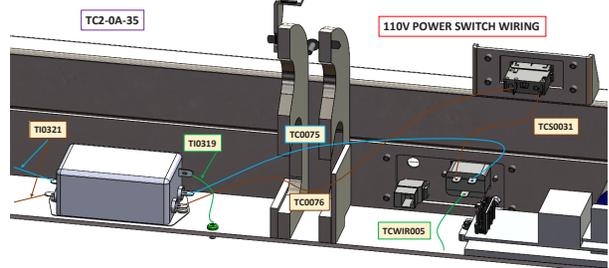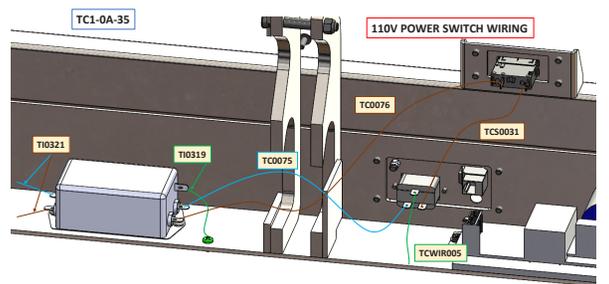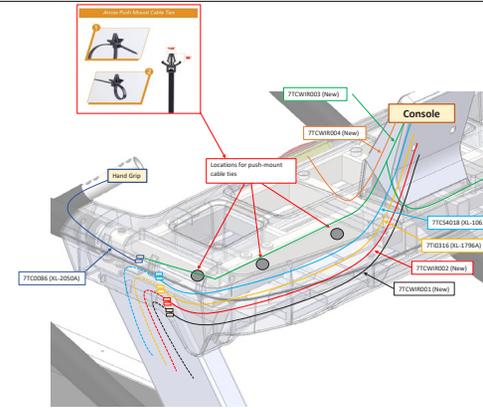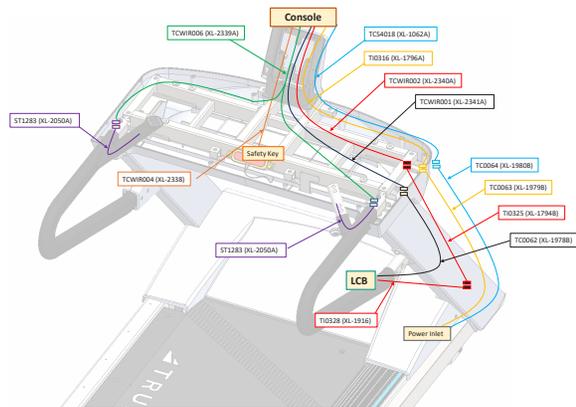

WARRANTY INFORMATION

ATTENTION OWNER'S: To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

COMMERCIAL WARRANTY

CARDIO				
WARRANTY ITEM	VAPOR, APEX	GRAVITY PLUS	GRAVITY	ADX, RO, SURGE
Frame*	10 Years (with registration)	10 Years (with registration)	10 Years (with registration)	5 Years (with registration)
Parts	3 Years	3 Years	3 Years	3 Years
Consoles	3 Years	3 Years	3 Years	2 Years
Labor**	2 Years (with registration)	2 Years (with registration)	1 Year (with registration)	1 Year (with registration)
Wear Items***	180 Days	180 Days	180 Days	90 Days

STRENGTH	
WARRANTY ITEM	PALLADIUM, FUSE XL, FORCE, FITNESS LINE, ATLAS, XFT, XFW, MP, SM, FT, FS
Frame*	10 Years (with registration)
Parts	5 Years
Cables and Linear Bearings	1 Year
Labor**	1 Year (with registration)
Wear Items***	90 Days (6 Months for FORCE only)

FLEXIBILITY	
WARRANTY ITEM	STRETCH
Parts	1 Year
Wear Items***	90 Days

Warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance.

*Frame is the serialized base of the unit and does not include paint or coatings. Frame warranty will equal that of parts warranty unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.

**Labor warranty is available for equipment located within United States. TRUE Fitness equipment is automatically covered under a 6-month Limited Labor Warranty. This 6-month Limited Labor Warranty begins from the date of purchase shown by a valid receipt. If a valid receipt is not available, the 6-month Limited Labor Warranty period begins from the date of manufacture on the originally purchased equipment.

***Wear Items include: batteries, covers, caps, badges, paint, pedal straps, toe clips, elliptical pedal inserts, foot pads, Coax/TV, HDMI, USB, mirroring or Ethernet connections, and safety key.

See *Warranty Details* for product registration requirements, terms, conditions, and complete coverage details.

ATTENTION OWNER'S: To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

LIMITED-USE COMMERCIAL WARRANTY*

CARDIO				
WARRANTY ITEM	VAPOR, APEX	GRAVITY PLUS	GRAVITY	LAUNCH
Frame**	10 Years (with registration)			
Parts	5 Years	5 Years	5 Years	5 Years
Consoles	3 Years	3 Years	3 Years	3 Years
Tread Belt and Deck	5 Years	5 Years	5 Years	2 Years
Labor***	3 Years (with registration)	3 Years (with registration)	2 Years (with registration)	1 Year (with registration)
Wear Items****	180 Days	180 Days	180 Days	90 Days

TRUE Fitness may offer alternative warranties to purchasers of commercial equipment for limited-use commercial.* This policy ensures that customers who use commercial equipment for limited-use commercial use may receive alternative warranty coverage, provided they meet the specified requirements. It's important to note that the specific terms and conditions of the alternative warranty, as well as the eligibility criteria, may vary depending on the product and TRUE's policies at the time of purchase. Customers should review the warranty terms and contact TRUE for precise details.

*To be eligible for the alternative limited-use commercial warranty, equipment use cannot exceed 6-hours use a day or be for use in a membership, dues paying, or institutional facility.

Customers must provide TRUE with the following within 45 days of installation of the qualifying commercial-rated equipment:

- Purchase agreement.
- Proof of professional delivery and installation.
- TRUE will recognize the alternative warranty for the purchaser and implement it within 45 days of receiving the required documentation if such an alternative warranty is available for the specific product.

Warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance.

**Frame is the serialized base of the unit and does not include paint or coatings. Frame warranty will equal that of parts warranty unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.

***Labor warranty is available for equipment located within United States. TRUE Fitness equipment is automatically covered under a 6-month Limited Labor Warranty. This 6-month Limited Labor Warranty begins from the date of purchase shown by a valid receipt. If a valid receipt is not available, the 6-month Limited Labor Warranty period begins from the date of manufacture on the originally purchased equipment.

****Wear Items include: batteries, covers, caps, badges, paint, pedal straps, toe clips, elliptical pedal inserts, foot pads, Coax/TV, HDMI, USB, mirroring or Ethernet connections, and safety key.

See Warranty Details for product registration requirements, terms, conditions, and complete coverage details.

ATTENTION OWNER'S: To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

IN-HOME USE WARRANTY*

CARDIO				
WARRANTY ITEM	VAPOR, APEX	GRAVITY PLUS	GRAVITY	LAUNCH
Frame**	25 Years (with registration)			
Drive Motor***	25 Years (with registration)			
Parts	10 Years	12 Years	10 Years	7 Years
Consoles	3 Years	3 Years	3 Years	3 Years
Tread Belt and Deck	10 Years	10 Years	7 Years	5 Years
Labor****	2 Years (with registration)	2 Years (with registration)	2 Years (with registration)	1 Year (with registration)
Wear Items*****	180 Days	180 Days	180 Days	180 Days

TRUE Fitness may offer alternative warranties to purchasers of commercial equipment for in-home use.* This policy ensures that customers who use commercial equipment for in-home use may receive alternative warranty coverage, provided they meet the specified requirements. It's important to note that the specific terms and conditions of the alternative warranty, as well as the eligibility criteria, may vary depending on the product and TRUE's policies at the time of purchase. Customers should review the warranty terms and contact TRUE for precise details.

*To be eligible for the alternative in-home use warranty, equipment must be used at a home address and cannot be used outside of the purchaser of the equipment and their immediate family.

Customers must provide TRUE with the following within 45 days of installation of the qualifying commercial-rated equipment:

- Purchase agreement.
- Proof of professional delivery and installation.
- TRUE will recognize the alternative warranty for the purchaser and implement it within 45 days of receiving the required documentation if such an alternative warranty is available for the specific product.

Warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance.

**Frame is the serialized base of the unit and does not include paint or coatings. Frame warranty will equal that of parts warranty unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.

***Drive Motor warranty will equal that of parts warranty unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.

****Labor warranty is available for equipment located within United States. TRUE Fitness equipment is automatically covered under a 6-month Limited Labor Warranty. This 6-month Limited Labor Warranty begins from the date of purchase shown by a valid receipt. If a valid receipt is not available, the 6-month Limited Labor Warranty period begins from the date of manufacture on the originally purchased equipment.

*****Wear Items include: batteries, covers, caps, badges, paint, pedal straps, toe clips, elliptical pedal inserts, foot pads, Coax/TV, HDMI, USB, mirroring or Ethernet connections, and safety key.

See *Warranty Details for product registration requirements, terms, conditions, and complete coverage details.*

ATTENTION OWNER'S: To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

WARRANTY DETAILS

All TRUE Fitness products are distributed by TRUE and are warranted to the original product purchaser and the parts of the TRUE product (the "Product") listed below. During the applicable Warranty Period, the Product, under normal use and service, shall be free of manufacturing defects in workmanship and materials.

NOTE:

- Standard shipping is included with warranty part replacement.
- Shipping for warranty frame or replacement is included for the period of three years from the original date of purchase.

All Warranty Items are "LIMITED"

- This limited warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, failure to follow instructions and warnings in owner's manual, accident, misuse, abuse, unauthorized modification, failure to provide reasonable and necessary maintenance, software version upgrades, compatibility with third party/aftermarket hardware, software, applications, or websites.
- TRUE's liability shall under no circumstances exceed the actual amount paid by you for the product, nor shall TRUE under any circumstances be liable for any consequential, incidental, special or punitive damages or losses, whether direct or indirect.
- Some states or countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
- TRUE will neither assume nor authorize any person to assure for us any other obligation or liability concerning the sale of this Product. Under no circumstances shall TRUE be liable under this warranty, or otherwise, of any damage to any person or property, including any lost profits or lost savings, for any special, indirect, secondary, incidental, or consequential damages arising out of the use of or inability to use this Product.
- This limited warranty, which is given expressly and in lieu of all other express warranties, constitutes the only warranty made by TRUE.
- The remedies described herein are your sole and exclusive remedies and TRUE's entire liability for any breach of this limited warranty.
- No one is authorized to change, modify, or extend the terms of this limited warranty.
- This limited warranty is in lieu of all other warranties of any kind either expressed or including but not limited to implied warranties of merchant.
- This limited warranty applies to the product only while the product remains in the possession of the original purchaser and is not transferable.
- This limited warranty becomes VALID ONLY if the Product is initially assembled/installed by a TRUE authorized dealer/technician (if anyone other than a TRUE authorized dealer/technician initially assembles and installs the Product, this limited warranty will be void unless the written authorization of TRUE is first obtained).
- The "Warranty Period" for this limited warranty shall be for the duration forth in the applicable charts, beginning from the date of original purchase; provided, however, except to the extent prohibited by applicable law, the "Warranty Period" shall only be six months for labor (from the date of original purchase) unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.
- All serial numbers must be intact on the Product for this limited warranty to be valid.
- Installation or download of any 3rd party or after-market products will result in voided warranty. This includes, but is not limited to, electrical and mechanical parts, software, or applications.
- TRUE will ship to an authorized service provider any new or rebuilt replacement part or component, or at our option, replace or refund the Product.
- Replacement parts are warranted for the remaining portion of the original warranty period.
- Proof/receipts of necessary maintenance may be required within 30 days of requested warranty part or service.
- This limited warranty does not apply to the performance of the heart rate accuracy will not be warranted as performance varies, based on user's physiology, age, method of use, and other external factors.

ATTENTION OWNER'S: To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

WARRANTY REGISTRATION

Thank you for purchasing a TRUE product!

To ensure you get the most out of your purchase and receive the full benefits of our warranty, **you must register your product within 45 days of purchaser's receipt of this product.**

How to register your product:

- Online:**
 Simply visit our website at truefitness.com and register your product warranty in one simple step.
- QR Code:**
 Scan the QR code below with your smartphone to be taken directly to the registration page.
 
- By Mail:**
 Complete the information below and mail to:
 TRUE Product Support
 865 Hoff Road
 St. Louis, MO 63366

PLEASE RETAIN THIS PORTION FOR YOUR RECORDS
BASE SERIAL NUMBER:
CONSOLE SERIAL NUMBER:




 TRUE FITNESS TECHNOLOGY, INC.
 ST. LOUIS, MISSOURI 63366
 Model No. TC1-0A-35
 Serial No./Date Code 24-TC10A3501A


 OR
 Intertek
 3135202
 CONFORMS TO ANSI/BSI
 STD. BIFXA
 CERTIFIED TO CAN/CSA
 STD. C22.2 NO.68
 Rating: 120V, 50/60 Hz, 15A
 Rating: 220V-240V, 50/60Hz, 8A
 Intertek Testing Services Taiwan Ltd.
 MADE IN TAIWAN



WARRANTY REGISTRATION

Base Serial Number	Console Serial Number	
<input type="text"/>	<input type="text"/>	
Purchase Date	Company (if applicable)	
<input type="text"/>	<input type="text"/>	
Customer Name (First and Last)		
<input type="text"/>		
Email Address	Phone Number	
<input type="text"/>	<input type="text"/>	
Street Address	City	State
<input type="text"/>	<input type="text"/>	<input type="text"/>
Postal Code	Country	
<input type="text"/>	<input type="text"/>	



CONTACT US
service@truefitness.com
800.883.8783

865 Hoff Road
St. Louis, MO 63366

[TRUEFITNESS.COM](https://www.truefitness.com)



MAN-TC1-0A-35 Owner's Manual and Assembly Guide REV09

© 2026 TRUE Fitness All Rights Reserved.