PLS1400 PENDULUM SQUAT

TRUE FITNESS





MODEL PLS1400 (MAN-PLS1400 REV02)



TRUE[®]

IMPORTANT—PLEASE READ

IMPORTANT!

All products shown are prototype. Actual product delivered may vary. Product specifications, features, and software are subject to change without notice.

For the most up-to-date version of this manual, please see our website:

https://truefitness.com/support/user-manuals/

IMPORTANTE!

Todos los productos mostrados son prototipos. La realidad el producto suministrado puede diferir. Especificaciones de productos, características y software están sujetas a cambios sin previo aviso.

Para la más actualizada de este manual del propietario y para los documentos en otros idiomas, por favor visite https://truefitness.com/support/user-manuals/

IMPORTANT! Tous les produits présentés sont prototype. Le produit réel livré peut varier. Spécifications du produit, caractéristiques et logiciels sont sujettes à modification sans préavis. Pour la plus à jour le manuel du propriétaire et pour documents dans des langues supplémentaires, veuillez https://truefitness.com/support/user-manuals/ de visite

重要提示!

显示所有产品的原型。实际交付的产品可能有所不同产品规格,功能和软件如有更改,恕不另行通知迄今为止对于大多数的使用说明书,和对于其他语言的文档,请访问https://truefitness.com/support/user-manuals/

!ماھ

اهمىلست يىل عفىل جتن مل فىلتخت دق جذومن ال يە قضور عمل تاجتن مل عى مج. راعش نود رى غتل قلباق جماربلو تازىمل و ،جتن مل تافص اوم. قراىز ىجرى كارامل لى ك نال اىت لىت لىسى ام مظعمل قراىز ىجرى ،ةى اص اتغ ي تانانتسمل

WICHTIG!

Alle hier gezeigten Produkte sind Prototypen. Das tatsächliche Produkt ausgeliefert wird, kann variieren. Produkt-Spezifikationen, Funktionen und Software können sich ohne vorherige Ankündigung ändern. In den meisten Fällen bis zu Bedienungsanleitung Bisher besuchen und für Dokumente in weiteren Sprachen finden Sie unter https://truefitness.com/ support/user-manuals/

BELANGRIJK!

Alle getoonde producten zijn prototype. Daadwerkelijke product geleverd kan verschillen. Product specificaties, eigenschappen & software zijn onderhevig aan verandering zonder kennisgeving. Voor de meest actuele handleiding van de eigenaar & voor documenten in andere talen kunt u terecht op https://truefitness.com/support/user-manuals/

ВАЖНО!

Все товары указаны прототипа. Фактический продукт, поставляемый могут отличаться. Технические характеристики, особенности и программного обеспечения могут быть изменены без предварительного уведомления. Для получения самой последней на сегодняшний день руководство по эксплуатации и Для документов на другие языки, пожалуйста, посетите https://truefitness.com/support/user-manuals/



THANK YOU FOR CHOOSING TRUE

Since its founding in 1981, TRUE Fitness has been built on two core guiding principles: Build the highest quality products and support them with superior service. Today, TRUE is the global leader in premium fitness equipment for the commercial and residential markets.

Over the years, the fitness industry has changed, new markets have sprung up, and the needs of our customers have evolved, but those principles remain constant, and we remain ever-vigilant in working to achieve them.

In keeping with our values, TRUE has always striven to equip our machines with the latest technology and safety features since the beginning, giving our customers the very best exercise experience possible while providing peace of mind.

As your dedicated partner, we will do whatever it takes to keep your facility going strong. Our experienced team provides end-to-end service, from facility planning and maintenance to providing your machines with the newest technologies. You can count on TRUE Fitness for the best service in the industry, provided by a team focused on optimizing the life of your equipment.

CONTACTING OUR SUPPORT TEAM

Before you contact TRUE, we recommend gathering the serial number, model number, and a brief description of the reason for your request. After you have all the pertinent information, we suggest you contact your selling dealer or local service company to set up an appointment. If you are not familiar with who is in your area, you can visit https://shop.truefitness.com/store-locator/ and use our store locator to obtain the contact information for the closest dealer.

If you still need help, please contact our product support team.

Address	TRUE Fitness Attn: Product Support 865 Hoff Road St. Louis, MO 63366
Phone	800.883.8783
Email	service@truefitness.com
Hours of Operation	Monday - Friday 8:30am - 5:00pm (CST)

CONTACTING OUR SALES TEAM

Interested in owning more TRUE products? Please contact us with any product inquires so that we may direct you to the appropriate sales representative to help answer your questions.

Address	TRUE Fitness Attn: Sales Department 865 Hoff Road St. Louis, MO 63366
Phone	800.426.6570
Email	sales@truefitness.com
Hours of Operation	Monday - Friday 8:30am - 5:00pm (CST)



REPORTING FREIGHT CLAIMS OR PARTS DAMAGE

Unfortunately, sometimes materials can be damaged during shipment. If materials are damaged during shipment, please follow the guidelines below to determine the appropriate process for you to follow.

Severe Damage—Obvious damage to external packaging and internal product.

Please refuse the shipment and it will be returned to TRUE by the carrier. Contact TRUE product support by calling 800.883.8783 or sales support by calling 800.426.6570 Monday-Friday during normal business hours to notify us that the shipment has been refused. Once we have received the damaged shipment, a replacement shipment will be sent to you. If the shipment comes in multiple boxes, only refuse boxes with damage.

Slight Damage—Minimal damage to external packaging with unknown internal damage to product.

If the shipment has minimal damages and you are not sure if the actual product is damaged, you must sign the bill of lading as damaged when accepting the shipment. Once you have opened the box and you have determined something is indeed damaged, please gather the serial number, model number, description of damage, and photos of damage. Please make sure the photos include the damaged product as well as the damaged box the product arrived in. Contact TRUE product support (service@truefitness.com // 800.883.8783) or TRUE sales support (sales@truefitness.com // 800.426.6570) Monday-Friday during normal business hours.

Concealed Damage—No damage to external packaging but internal damage to product.

You may receive a shipment that looks intact and discover once the box has been opened that there are hidden damages. Please notify the carrier immediately. TRUE will not be able to file a claim if the carrier is not notified in a timely manner. Once you have called the carrier you will need to gather the serial number, model number, description of damage, and photos of damage. Contact TRUE product support (service@truefitness.com // 800.883.8783) or TRUE sales support (sales@truefitness.com // 800.426.6570) Monday-Friday during normal business hours.



TABLE OF CONTENTS

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS—SAVE THESE INSTRUCTIONS	7
GENERAL CARE AND MAINTENANCE	9
COMMERCIAL MAINTENANCE SCHEDULE.	10
COMPLIANCES	10
DIMENSIONS AND WEIGHTS	11
LABEL LOCATIONS	12
WARNING AND INTENDED USE LABELS	12

ASSEMBLY INSTRUCTIONS

PREASSEMBLY CHECKLIST	14
ASSEMBLY STEPS	16

PREVENTATIVE MAINTENANCE

DAILY INSPECTION AND MAINTENANCE	26
WEEKLY INSPECTION AND MAINTENANCE	26
OTHER SCHEDULED PREVENTATIVE MAINTENANCE	26
CLEANING THE EQUIPMENT.	27

WARRANTY INFORMATION



SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS—SAVE THESE INSTRUCTIONS

A FACILITY AND USER SAFETY PRECAUTIONS

- Review and understand all of the warning labels affixed to this machine and on the facility safety sign.
- Be certain that the machine operation is understood before it is used. Refer to the instructional procedure label affixed to the machine.
- Make sure all users are properly trained on how to use this equipment. If this machine is being used in a commercial setting, end users may not have access to this owners manual. It is the responsibility of the facility to instruct users as to the proper usage of the equipment as well as making them aware of potential hazards. Maximum user weight is 400 lbs / 182 kg.
- Use each machine only for the intended exercise. Do not allow anyone to invent exercises not included on the instructional procedure label or the intended use label.
- Do not modify the machine.
- This equipment meets industry safety standards for stability when used for the intended exercise. Do not allow straps, resistance bands or other means to be attached to the framework of this machine to perform stretching or body weight exercises. This can result in machine instability and lead to serious crushing injuries.
- Keep children away from this equipment. Adults should closely supervise use by teenagers.
- It is recommended that users receive a thorough medical exam before commencing an exercise program. All medical issues should be reviewed to ensure that weight training will not aggravate pre-existing medical conditions.
- If the machine appears damaged or inoperable, contact a facility staff member to place an "OUT OF ORDER, DO NOT USE" sign on the machine until it is repaired. Only use TRUE supplied replacement components to service this machine.
- Instruct users not to wear loose or dangling clothes or have headphone wires hanging when using this equipment.
- Do not attempt to free any jammed assemblies by yourself as this may cause injury.
- On Plate Loaded and Free Weight machines:
 - Use of spotter(s). Instruct users to seek the advice of the facility staff as to the appropriate use of spotters when lifting. More than one spotter may be required depending upon the amount of weight being lifted.
 - Instruct users to load weight plates evenly and carefully to avoid tipping equipment and crushing injuries.
 - If the machine is equipped with safety stops or catches, inspect them and verify their proper operation before use and make sure they are securely in place before using or exiting the machine. Be certain members are instructed on how to operate and adjust all safety mechanisms.
 - This equipment is designed for standard olympic size weight plates with a 50mm bore (1.9").
 - Do not exceed the maximum weight capacity of the machine. Maximum plate size is 45 lbs (25 kg).
- On Selectorized and cable equipped machines:
 - Do not allow users to perform any exercise by holding the end of the cable and/or the cable end fitting. Use only appropriate handles or attachments properly connected to the cable end.
 - Do not high-pin or double-pin the weight stack. Do not allow the machine to be used if the top plate or weight stack is pinned in a raised position. Use an assistant and carefully return the machine to the proper position with the cap plate resting on the top weight. Inspect the entire length of the cable to ensure that it is properly seated in all of the pulley grooves.
 - Do not allow the use of weight plates or dumbbells to be used as a means to add additional weight to the weight stacks. Use only the TRUE adder weight system specifically designed for the machine.



INSTALLATION SAFETY PRECAUTIONS

- Read this installation manual entirely before assembling this equipment.
- Verify that there is adequate space surrounding this piece of equipment for safe access and operation. Installation must meet ADA requirements for accessibility.
- Install this piece of equipment on a solid level surface that does not deviate more than 1/8" over a 10' distance (or as defined and required by local building and architectural codes.)
- TRUE strongly recommends that all equipment be anchored to the floor to prevent movement and increase stability.
 - Due to the wide variation of flooring on which the unit can be installed, contact a qualified contractor to determine an appropriate fastening system for your floor.
 - Use 3/8" diameter hardware (10 mm) to anchor the machine. Anchors should have a minimum pull out force of 220 lb (110 kg) for each position.
 - When attaching the machine to the floor, if there is a gap between the machine foot and the floor, do not use the anchor to remove the gap as this can cause the machine frame to deform. Instead, place a shim between the bottom of the foot and the floor, then tighten the anchor.
 - Anchoring holes are provided on the feet of the frame. All anchoring locations must be used when anchoring the equipment to the floor.
- **DO NOT** install any fitness equipment near a pool, hot tub or other damp locations. Corrosion caused by installation in these locations can lead to premature failure of components.
- Be sure all hardware is tight before using this machine.
- Some assembly materials may come preassembled in the carton. Refer to the Assembly Instructions for more
 information on disassembling any assembly materials before beginning assembly.

MAINTENANCE SAFETY PRECAUTIONS

- Refer to the maintenance schedule table in this manual for when to perform maintenance.
- Check the function of your machine DAILY by verifying the following:
 - If equipped with cables, inspect cables and end fittings for any signs of wear. Replace if worn, frayed, or damaged with TRUE replacement components.
 - Verify that all adjustments are possible and carried out with ease. Make sure that each adjustment pin inserts completely into each position without binding.
 - Verify that safety catches and stops are in proper working order and engaged.
 - Verify that the exercise is performed smoothly, free of noise, and/or binding.
 - If equipped with a weight stack, verify that the proper weight selector pin is in place.
- Check the function of your machine WEEKLY by verifying the following:
 - Nuts, Bolts, and Fasteners: check tightness weekly. If any hardware has become loose, retighten it, use Loctite[®] Threadlocker 242, or both.
 - Frames and Lifting Arms: Inspect weekly for integrity and function. Replace any component at first signs of wear. Use only TRUE supplied components.
- Replace any warning label at the first sign of wear. Labels and the facility safety sign may be obtained from TRUE.

TRUE

GENERAL CARE AND MAINTENANCE

A IMPORTANT

Preventative maintenance is crucial to maintaining the function and safety of this equipment. Your facility must establish written guidelines for preventative maintenance and keep written or online records of the maintenance performed on these products. As a minimum, the items presented in the SAFETY section of this document and the items that follow here, should be included in your maintenance program.

- Cables (if equipped)—inspect end fittings daily for wear. Inspect the entire length of the cable weekly. Replace cables at the first sign of wear and on an annual basis. If the cable tension has been adjusted, be certain that the cable nut is tight.
- Nuts, bolts, and fasteners—check tightness weekly. If any hardware has become loose, retighten and/or use Loctite[®] brand Threadlocker 242. Be sure all hardware is tight before using the machine.
- Safety catches—inspect catches, stop rods and their associated fasteners. Tighten any loose hardware and replace any components at first signs of wear.
- Frames—sweat, disinfecting sprays and spills can lead to corrosion which may lead to premature failure of components. Wipe all machines down with a damp cloth and dry completely each day. This includes painted parts, chrome parts and upholstered pads.
- Painted and chrome plated parts—use Simple Green with a dilution of 32:1 or similar cleaner for light dirt and grime. Use Turtle Wax Polishing Compound or a good car polish to remove heavier dirt and grease as well as for polishing. DO NOT use solvents, lacquer thinner, acetone or finger nail polish remover. For scuffs and marks that are not removed by the above methods use a soft scrub cleanser. Make sure all parts are dry upon completion.
- Weight stack enclosures (shrouds) (if equipped)—wipe down with a damp cloth as needed.
- Exercise instruction labels-clean with soap and water as needed.
- Guide rods (if equipped)—wipe all dirt and dust from the guide rods before applying a light application of Tri-Flow[™] or other teflon spray lubricant. Spray the Tri-Flow[™] on a rag and then wipe the guide rods with the rag. **DO NOT** use oil lubricants such as WD-40.

▲CAUTION: Tri-Flow[™] will stain carpet and clothing.

- Bronze bushings-check monthly for signs of wear and replace as needed.
- Linear bearing shafts—wipe any accumulation of dust or other contaminants from the shafts on a weekly basis. Apply a thin layer of a Teflon[®] (PTFE) grease on a weekly basis. TRUE recommends Magnalube[®] brand.
- When replacing any component, use only TRUE supplied parts.
- Be sure all hardware is tight before using the machine.

Retain these instructions for future reference. If you have any questions, do not hesitate to contact your TRUE dealer or TRUE product support (service@truefitness.com // 800.883.8783).



COMMERCIAL MAINTENANCE SCHEDULE

Commercial Maintenance Schedule					
	Daily	Weekly	Monthly	6 Months	Annually
Inspect cables for wear, tension, and proper connection if equipped. Replace at the first sign of wear.	х				
Inspect cable length and cable end fittings. Replace at the first sign of wear.		x			
Inspect all nuts and bolts and tighten if needed.		X			
Inspect safety catches, stop rods, and their fasteners. Replace at the first sign of wear.	Х				
Inspect all anti-slip surfaces and replace as needed.		x			
Inspect all adjustment pins, weight stack pins, set screws, gas shocks, snap links, and pulleys if equipped.	х				
Inspect all accessory bars and handles.		Х			
Inspect all safety and instructional decals.	Х				
Inspect all weight stack shields if equipped.	Х				
Clean guide rods and lubricate with a teflon lubricant if equipped.		x			
Clean and condition upholstery.	Х				
Clean and polish frame.	Х				
Clean and polish chrome.	Х				
Lubricate pivot bearings and linear bearings.				Х	
Replace cables if equipped.					Х


COMPLIANCES


This equipment complies with all applicable codes and regulations. For a complete list of compliances, please visit www.truefitness.com.



DIMENSIONS AND WEIGHTS


 ASSEMBLED DIMENSIONS (W X D X H) 40.5" x 88.5" x 59.75" / 102.9 cm x 224.8 cm x 151.8 cm

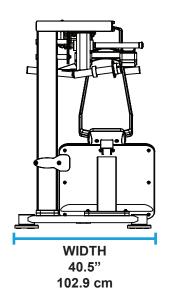

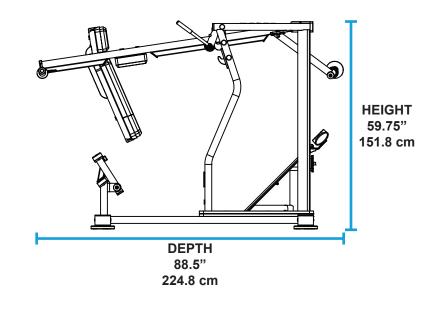

- PRODUCT WEIGHT 620 lbs / 281.2 kg
- MAXIMUM USER WEIGHT 400 lbs / 182 kg
- MAXIMUM LOAD (USER WEIGHT + WEIGHT PLATES) 940 lbs / 426.4 kg


POST CAPACITY				
Number of Active Posts	Max 45LB. Plates Per Active Post*	Number of Storage Posts	Max 45LB. Plates Per Storage Post	Total Number of Weight Plates Allowed*
3	4*	0	4	12*

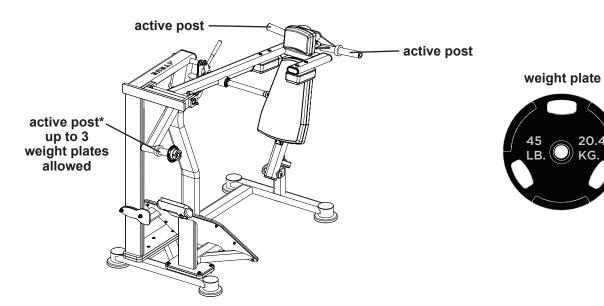



LABEL LOCATIONS

Item	Part#	Description	Qty
1	LBL-WRN-PLS003	LABEL, 4 PLATE WARNING	1
2	LBL-PLS14-ARM001	LABEL, RESISTANCE INCREASE	1
3	LBL-PLS14-ARM002	LABEL, WEIGHT INCREASE DIRECTION	1
4	LBL-PLS14-CWT003	LABEL, WEIGHT REDUCTION	1
5	LBL-PRO-PLS1400	LABEL, PLS1400 PROCEDURE	1
6	LBL-WRN-PLS001	LABEL, GENERAL WARNING	1
7	LBL-MTN-PLS001	LABEL, MAINTENANCE	1
8	SPL-00-LBLSN	LABEL, SERIAL NUMBER	1
9	LBL-LOG-010BK	LABEL, 10" NEW TRUE LOGO, WHITE	1
10	LBL-PLS14-CWT001	LABEL, PLS1400 COUNTER WEIGHT	1
11	LBL-PLS14-CWT002	LABEL, WEIGHT RESISTANCE REDUCTION	1

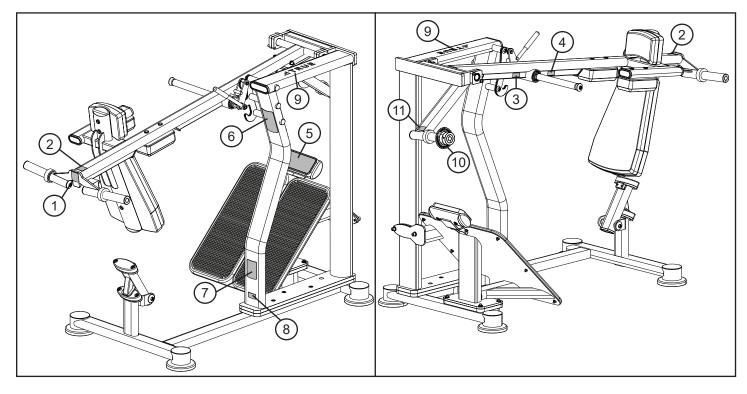

WARNING AND INTENDED USE LABELS

WARNING: Replace all labels that may be worn, damaged, or missing.

To replace any worn or missing decals contact TRUE product support (service@truefitness.com // 800.883.8783).

Part# and Description	Image
LBL-WRN-PLS003 (Plate Weight)	WARNING DO NOT EXCEED FOUR 45 LB. PLATES PER POST

TRUE

Part# and Description	Image
LBL-PLS14-ARM001 (Increase Resistance)	HEAVY STARTING RESISTANCE = 90 LBS Add weight here to increase resistance: +10 lbs = 105 lbs +25 lbs = 130 lbs +45 lbs = 160 lbs
LBL-PLS14-ARM002 (Increase Direction)	Add weight to this end to increase resistance
LBL-PLS14-CWT003 (Reduce Direction)	Add weight to this end to reduce starting resistance.
LBL-PRO-PLS1400 (Placard)	ALLADIUM SERIES PENDULUM SQUAT FOR ALLADIUM SERIES FOR ALLADIUM SERIE
LBL-WRN-PLS001 (General Warning)	<section-header><section-header></section-header></section-header>
LBL-MTN-PLS001 (Maintenance)	MAINTENANCE SCHEDULE Image: Provide Status (Balancia) Chain Chainghy and Cachang (Balancia) Image: Provide Status (Balancia) Chain Chainghy and Cachang (Balancia) Image: Provide Status (Balancia) Chain Chainghy and Cachang (Balancia) Image: Provide Status (Balancia) Chain Chainghy (Balancia) Image: Provide Status (Balancia)
SPL-00-LBLSN (Serial Number)	TRUE FINESS TECHNOLOGY, NC MICTYR ET LOB MEDGINE HABILIA MODEL N.C: PLS1400 SERIAL NC: 23-PLS140001X
LBL-LOG-010BK (Logo)	ATRUE
LBL-PLS14-CWT001	COUNTER WEIGH- IEREAR
LBL-PLS14-CWT002 (Reduce Resistance)	HEAVY STARTING RESISTANCE = 90 LBS Add weight here to reduce starting resistance: +45 lbs = 75 lbs +90 lbs = 60 lbs +135 lbs = 45 lbs HARMONIC



ASSEMBLY INSTRUCTIONS

NOTE: Supplemental video available @TRUEFitnessServiceVids: https://youtu.be/jhdJ KFv6D4

PREASSEMBLY CHECKLIST

ACAUTION:



Use caution when assembling this product.

Unpacking and assembling this product requires two or more people.



Use caution when unpacking this product. Avoid damage to the product and product pads. DO NOT use a box cutter. DO NOT slice into the packaging.

VERIFY BOX CONTENTS

IMPORTANT! Please verify all box contents. If you have questions, or if there are any missing parts, contact product support (service@truefitness.com | 800.883.8783).

TOOLS NEEDED FOR ASSEMBLY			
Wire Cutters or Scissors (used in unboxing the machine)			
#2 Phillips Screwdriver or Electric Screwdriver (both are optional in unboxing the machine)			
3/16", 7/32", 5/16", and 3/8" and " Allen Wrenches (or ratcheting socket wrench with hex bits - ball end recommended)			
9/16" and 3/4" Wrenches			
Rubber Mallet	P		



BOX CONTENTS		BOX CONTENTS				
Item	Image	Qty	Item	Image	Qty	
Base Frame Assembly		1	Lifting Arm Handle Bar and Catch Assembly Parts		1	
			Counter Weight Weight Post Assembly		1	
Side Frame Assembly			1	Active Weight Post Assemblies		2
			Head Pad Assembly (includes pad and tray)		1	
Foot Plate Assembly		1	Back Pad Assembly (includes pad and tray)		1	
Lifting Arm Assembly		1	Shoulder Pad Assemblies		2	
			Pad Kit Hardware Bag		1	
Counter Weight Assembly		1	Manual		1	




ASSEMBLY STEPS

STEP 1—ASSEMBLE SIDE AND BASE FRAME

Tools Used in this Step		
7/32" Allen Wrench (ball end recommended)		


Parts	Parts Used in this Step			
ITEM	PART#	DESCRIPTION	QTY	
1	PLS-14-SFR000X	ASSEMBLY, SIDE FRAME	1	
2	PLS-14-BFR000X	ASSEMBLY, BASE FRAME	1	
3	C 597	SHCS, 5/16"-18 X 2-1/2", BLK	4	
4	C 750B	LOCK WASHER, 1/2MED.SPLIT, BLACK BED	4	

A. Remove and set aside the preassembled socket head cap screws and lock washers from the base frame assembly.

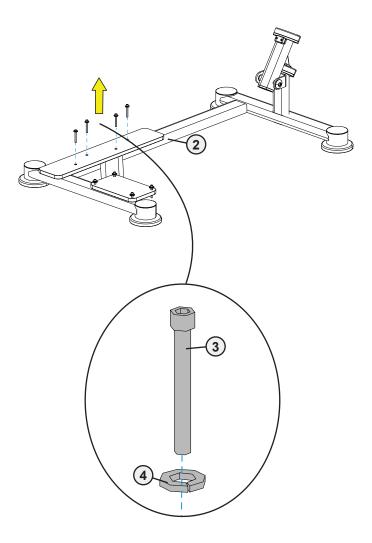

B. Using three or more people, carefully line up the side frame assembly with the base frame assembly and finger tight the previously removed socket head cap screws and lock washers.

DO NOT fully tighten the hardware until all the frame pieces have been assembled.

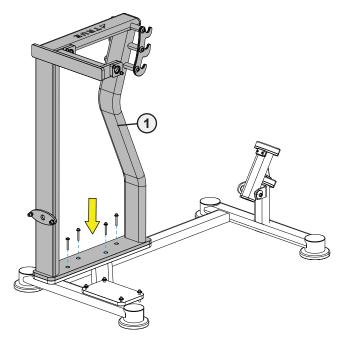



STEP 2—ASSEMBLE THE FOOT PLATE ASSEMBLY TO THE FRAME


Tools Used in this Step 7/32" and 3/8" Allen Wrench (ball end recommended)


... 41 . . -

Parts Used in this Step			
ITEM	PART#	DESCRIPTION	QTY
1	PLS-14-SFR000X	ASSEMBLY, SIDE FRAME	1
2	PLS-14-BFR000X	ASSEMBLY, BASE FRAME	1
3	PLS-14-FPT000X	ASSEMBLY, FOOT PLATFORM	1
4	C 640A	SHCS, 1/2"-13 X 1", BLK	2
5	C 597	SHCS, 5/16"-18 X 2-1/2", BLK	4
6	C 750B	LOCK WASHER, 1/2MED.SPLIT, BLACK BED	6
7	C 755C	WASHER, FLAT, 1/2", BLK ZP	6

- A. Remove and set aside the preassembled socket head cap screws, lock washers, and flat washers securing the side frame assembly and base frame assembly.
- B. Using three or more people, carefully place the foot plate assembly onto the base frame arm assembly and finger tight the previously removed socket head cap screws, lock washers, and flat washers.


DO NOT fully tighten the hardware until all the frame pieces have been assembled.

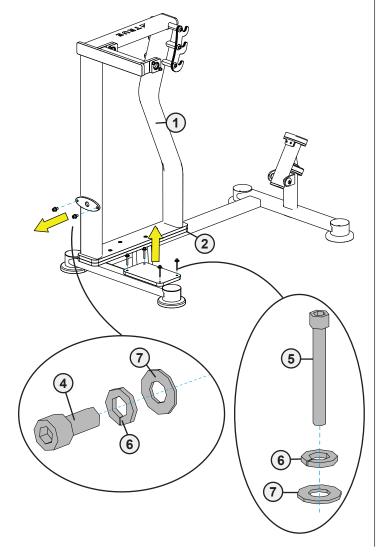

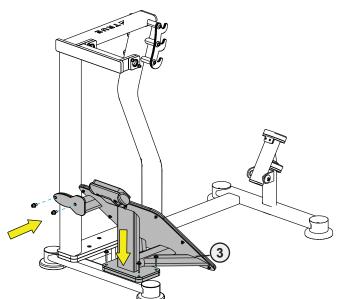




STEP 3—ASSEMBLE THE LIFTING ARM ASSEMBLY TO THE SIDE FRAME

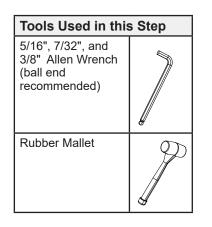

Parts	Parts Used in this Step			
ITEM	PART#	DESCRIPTION	QTY	
1	PLS-14-SFR000X	ASSEMBLY, SIDE FRAME	1	
2	PLS-14-ARM000X	ASSEMBLY, LIFTING ARM PLS1400	1	
3	PLS-14-BRG000X	ASSEMBLY, BEARING HOUSING	2	
4	C 754B	WASHER, FLAT, 3/8" X 13/16 OD X .07 THK BLACK	4	
5	C 749B	LOCK WASHER, 3/8", BLK ZP	4	
6	C 626A	SHCS, 3/8"-16, 1-3/4", BLK	4	


A. Remove and set aside the four preassembled socket head cap screws, lock washers, and flat washers securing the two bearing assemblies to the side frame assembly.

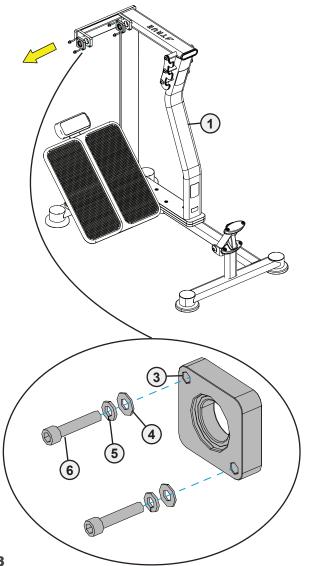

B. Using three or more people, carefully slide one bearing assembly onto the lifting arm assembly and then place the lifting arm assembly into the side frame assembly.

NOTES:


- Note the orientation of the bearing assembly, the concave side is pressed onto the lifting arm assembly.
 - You might need a rubber mallet to tap the pieces in place.

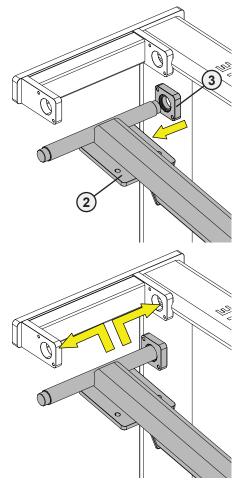



STEP 3—ASSEMBLE THE LIFTING ARM ASSEMBLY TO THE SIDE FRAME CONTINUED

- C. Using three or more people, secure the lifting arm assembly to the side frame assembly by finger tightening the previously removed socket head cap screws, lock washers, flat washers, and bearing assemblies.
- D. When all hardware is finger tight, use the appropriate size allen wrench, fully tighten the base frame, side frame, and foot plate hardware at this time.

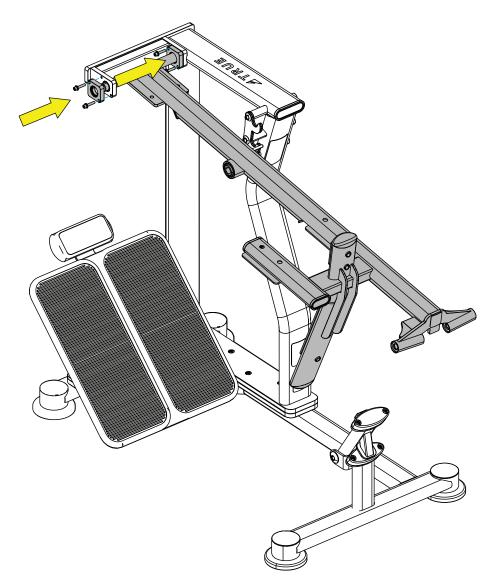




STEP 4—ATTACH COUNTER WEIGHT ASSEMBLY TO LIFTING ARM ASSEMBLY




Parts	Parts Used in this Step			
ITEM	PART#	DESCRIPTION	QTY	
1	PLS-14-CWT000X	ASSEMBLY, COUNTER WEIGHT	1	
2	PLS-14-ARM000X	ASSEMBLY, LIFTING ARM PLS1400	1	
3	C 643A	SHCS, 1/2"-13, 1-3/4" BLK BED	2	
4	C 743B	LOCK NUT, 1/2"-13 NYL INS BLK	2	
5	C 755C	WASHER, FLAT, 1/2", BLK ZP	4	
6	N/A	COUNTER WEIGHT - WEIGHT HORN	1	
7	PLS-00-CAP005	ARM BOLT CAP	1	
8	C 749B	LOCK WASHER, 3/8", BLK ZP	1	
9	C 622A	SHCS, 3/8"-16 X 3/4"	1	


A. Remove and set aside the preassembled socket head cap screws, flat washers, and nuts from the lifting arm assembly.

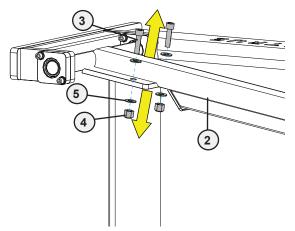


B. Using two people, carefully attach the counter weight assembly to the lifting arm assembly and secure in place using the previously removed socket head cap screws, flat washers, and nuts.

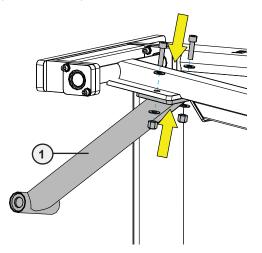

C. Using a 5/16" allen wrench, remove and set aside the socket head cap screw, lock washer, and cap from the counter weight post assembly.

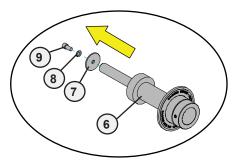

- D. Attach the counter weight post assembly to the counter weight assembly:
 - a. Line up flat edge of the weight post axle with the flat edge of the shaft and using a rubber mallet, lightly tap the weight post axle into the shaft.
 - b. Using a 5/16" allen wrench, attach the socket head cap screw, lock washer, and cap to secure the counter weight post assembly to the counter weight assembly.

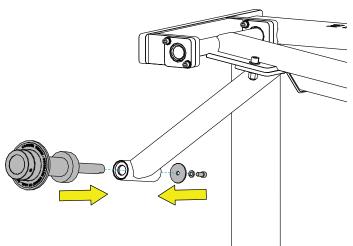




STEP 5—ATTACH HANDLE BAR AND CATCH ASSEMBLY

Tools Used in this Step		
3/16" and 7/32" Allen Wrench (ball end recommended)		
9/16" Wrench		

Parts	Parts Used in this Step			
ITEM	PART#	DESCRIPTION	QTY	
1	PLS-14-ARM000X	ASSEMBLY, LIFTING ARM PLS1400	1	
2	PLS-14-CPL000X	ASSEMBLY, CATCH	1	
3	PLS-14-HND000X	ASSEMBLY, HANDLE BAR	1	
4	C1268	SHOULDER BOLT, 10X35XM8	1	
5	C 753A	WASHER, FLAT, 5/16" USS, BLK	2	
6	PLS-14-HND010X	ASSEMBLY, CATCH ASSIST	1	
7	C 758B	LOCK WASHER, 5/16" SPLIT, BLK	1	
8	C 615A	SHCS, 5/16"-18 X 3/4", BLK	1	
9	VC90141	LOCK NUT, M8-1.25, 8T, BLK ZP	1	


Overview of handle bar parts. See the steps on the following page for how to assemble the handle bar to the lifting arm assembly.

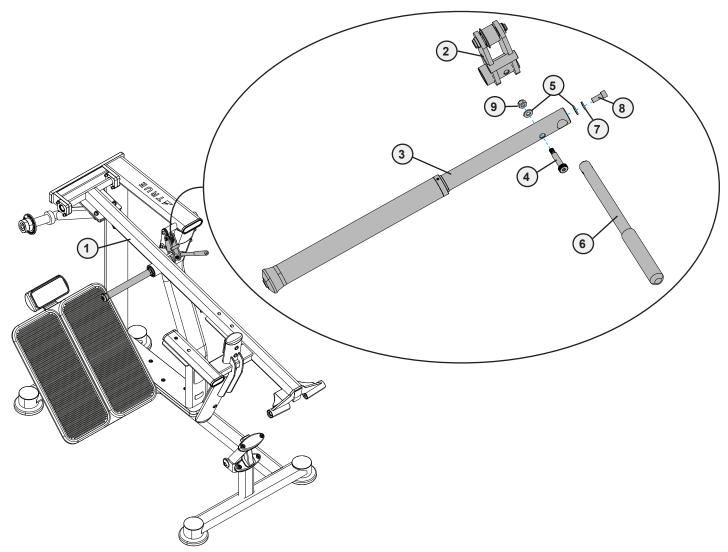




STEP 5—ATTACH HANDLE BAR AND CATCH ASSEMBLY CONTINUED


A. Slide the handle bar assembly into the shaft of the lifting arm assembly.

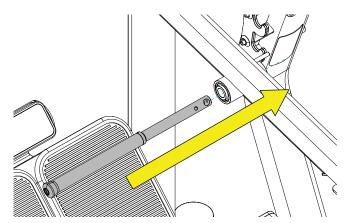


B. Slide the catch assembly onto the handle bar and align with range limiting rod on the lifting arm assembly.

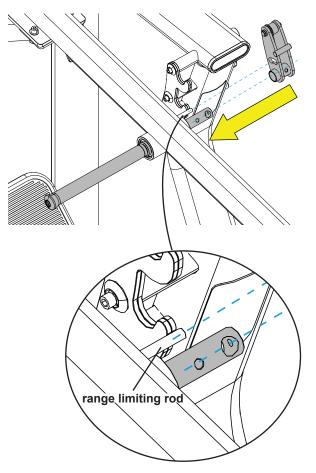

C. Slide the catch assist assembly into the hole of the handle bar.

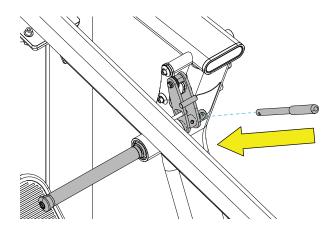

D. Attach the catch assembly and catch assist assembly to the handle bar using the shoulder screw, socket head cap screw, lock washer, flat washers, and nut.

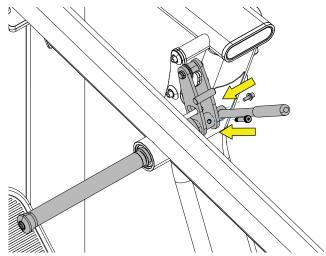




STEP 6—ATTACH WEIGHT POST ASSEMBLIES




Parts	Parts Used in this Step			
ITEM	PART#	DESCRIPTION	QTY	
1	PLS-00-PST030X	ASSEMBLY, WEIGHT HORN (ACTIVE)	2	
2	PLS-00-CAP005	ARM BOLT CAP	2	
3	C 749B	LOCK WASHER, 3/8", BLK ZP	2	
4	C 622A	SHCS, 3/8"-16 X 3/4"	2	

A. Using a 5/16" allen wrench, remove and set aside the socket head cap screws, lock washers, and caps from the active weight post assemblies.




- B. Attach the active weight post assemblies to the arm assembly:
 - a. Line up flat edges of the weight post axles with the flat edges of the shafts and using a rubber mallet, lightly tap the weight post axles into the shafts.
 - b. Using a 5/16" allen wrench, attach the socket head cap screws, lock washers, and caps to secure the weight post assemblies to the arm.

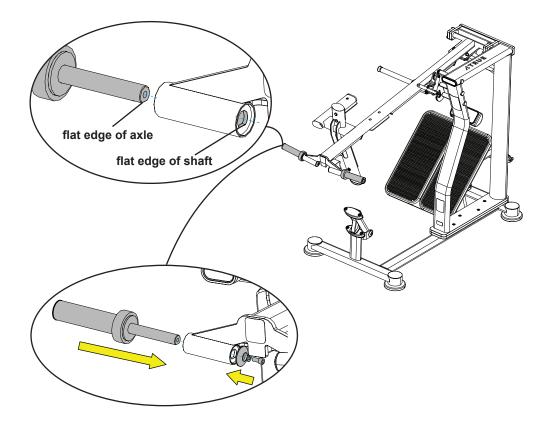




STEP 7—ATTACH PADS TO LIFTING ARM ASSEMBLY

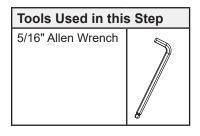


Parts	Parts Used in this Step			
ITEM	PART#	DESCRIPTION	QTY	
N/A	PLS1400 PAD KIT	PAD KIT PLS	1	
PAD K	PAD KIT HARDWARE			
1	C 749B	LOCK WASHER, 3/8", BLK ZP	4	
2	C 631A	SHCS, 3/8"-16 X 3" BLK	4	
3	SPL-02-PAR110	SLEEVE, PAD BOLT	4	
4	C 629A	SHCS, 3/8"-16 X 2-1/2", BLK	4	

A. Using a 5/16" allen wrench, attach the four socket head cap screws and lock washers to secure the head and back pad assemblies to the lifting arm assembly.

ACAUTION: Avoid damage to the pads. Verify the head and back pad assemblies include both the pads and the plastic trays.

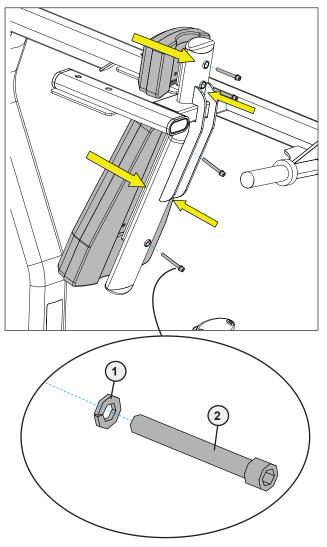


B. Using a 5/16" allen wrench, attach the four socket head cap screws and sleeves to secure the shoulder pads to the lifting arm assembly.

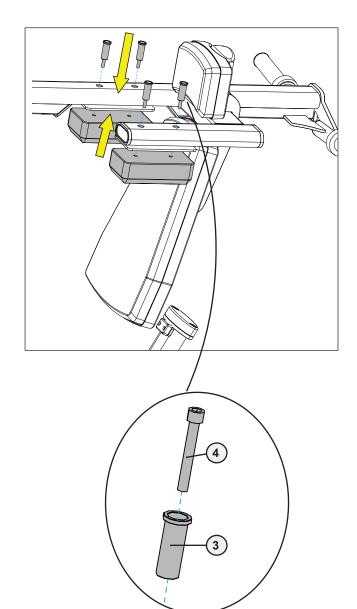



STEP 8—VERIFY ADJUSTMENTS FUNCTION AS INTENDED


Place the handle bar catch assembly into each notch on the catch plate. Verify the handle bar catch assembly rests securely on the catch plate before and after exercising.

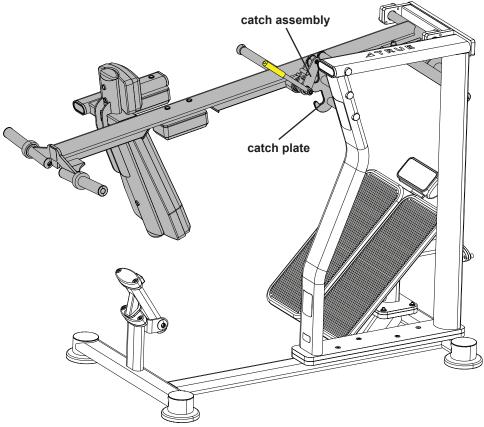

If any of the adjustments are not functioning as intended, contact TRUE product support:

- service@truefitness.com
- 800.883.8783

Monday - Friday 8:30am - 5:00pm (CST)

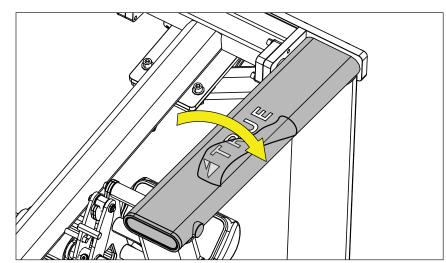

STEP 9—REMOVE PROTECTIVE FILM FROM LOGO



PREVENTATIVE MAINTENANCE

Preventative maintenance is crucial to maintaining the function and safety of this equipment. Your facility must establish written guidelines for preventative maintenance and keep written or online records of the maintenance performed on these products. As a minimum, the items presented in the Safety Instructions section of this document and the items that follow here, should be included in your maintenance program.

IMPORTANT! Always purchase replacement parts from TRUE. Many parts are tested and manufactured specifically for TRUE equipment. Use of unapproved parts may cause serious injury and/or void the limited warranty.

DAILY INSPECTION AND MAINTENANCE

The following items are critical to the safety of users and maintenance staff as well as ensuring the optimum performance of the machines. These inspections should be performed each day before the equipment is subject to use. TRUE is not responsible for performing or scheduling regular maintenance or inspections.

- Inspect for cleanliness. Wipe and dry the upholstery, frame, and chrome. (See cleaning the equipment.)
- Inspect all adjustment pins, weight stack pins, set screws, gas shocks, snap links, and pulleys if equipped.
- Inspect all safety and instructional decals.
- Inspect all weight stack shields if equipped.
- Verify that rubber hand grips are intact and secure.
- Verify that anti-skid foot grips are intact and secure.

WEEKLY INSPECTION AND MAINTENANCE

The following items are critical to the safety of users and maintenance staff as well as ensuring the optimum performance of the machines. These inspections should be performed each week. TRUE is not responsible for performing or scheduling regular maintenance or inspections.

- Verify that the adjustment pop pins retract easily and fully engage (when released) into each adjustment disc hole/slot. The pop pins are spring loaded so they should return to the engaged position when you release the knob.
- Verify that the adjustment pin disengages and engages freely when actuating the adjustment mechanism. Be sure that the adjustment pin inserts fully into the adjustment disc.
- Verify that all hardware is tight and that associated frame members are secure. Apply a few small drops of a thread locking compound such as Loctite[®] on any loose bolts.
- Inspect frame for integrity and function. Replace any components at the first sign of wear with only TRUE supplied parts.

OTHER SCHEDULED PREVENTATIVE MAINTENANCE

TRUE recommends that scheduled maintenance be performed by a qualified service technician. Please contact your dealer or visit www.truefitness.com to contact a local TRUE authorized service technician.

Monthly

Clean guide rods and lubricate with a Teflon grease if equipped with guide rods.

Every 6 Months

Lubricate pivot bearing and linear bearings with lithium grease.

TRUE[®]

CLEANING THE EQUIPMENT

Daily Cleaning

Wipe all machines with a water dampened cloth and dry completely. This includes painted parts, chrome plated parts (except guide rods), plastic parts, and upholstered pads. It is important not to leave parts damp. This will increase the potential for corrosion to occur.

ACAUTION: Certain anti-bacterial cleaners and other harsh cleaning agents can induce corrosion on the machine components. These solutions can also dry out and cause cracking and splitting on the upholstery.

Heavy Duty Cleaning

- Guide Rods (if equipped)—Clean and lubricate with a Teflon Spray. Be sure to coat the entire guide rod. Spraying lubricant into the cap plate bushings is also recommended.
- Chromed Adjustment Tubes—Wipe away dust and dirt before applying a Teflon spray lubricant. TRUE recommends using Tri-Flow[™] or a similar brand.
- Linear Bearings—Clean the linear shaft and lubricate (as required) with Teflon based grease. Keeping linear bearings clean and lubricated is critical to long life and good performance.
- Painted Frames—If you have scuff marks, grease or a heavy dirt buildup on frame components, start with a mild soap solution or a diluted solution of a product such as Simple Green with a dilution of 32:1. If you cannot remove the marks using those methods, use a car polish/cleaner. **DO NOT** use solvents such as lacquer thinner, mineral spirits or acetone. For deeper scuff marks, use an automobile finish rubbing compound.
- Upholstery—For heavy duty cleaning, use a mild soap solution. This method should be sufficient in the majority of instances. In severe stain cases, you can use a solution of 5-10% household bleach diluted with water. Be sure to test an inconspicuous area first. **DO NOT** use chemical cleaners on the vinyl upholstery. You can also use a lanolin based hand cleaner to clean your upholstery. Wipe off after cleaning with a damp cloth and thoroughly dry.
- Plastic Parts—Use a mild soap solution to clean dirt and grease marks.
- Labels—Use a mild soap solution to clean dirt and grease marks.
- Shrouds—Use a mild soap solution to clean dirt and grease marks.

ACAUTION: Do not use any acidic cleaners. Doing so will weaken the paint or powder coatings and may void the TRUE Warranty. Never pour or spray liquids on any part of the equipment. Allow the equipment to dry completely before using.

ACAUTION: If you determine that the equipment needs service, make sure that the equipment cannot be used inadvertently and ensure other users know that the machine needs service.

To order parts or to contact a TRUE authorized service representative, please visit www.truefitness.com.



WARRANTY INFORMATION PLS1400 LIMITED WARRANTY

SAVE TIME AND REGISTER ONLINE! https://truefitness.com/support/warranty-registration/

All TRUE® Fitness products are distributed by TRUE and are warranted to the original registered product purchaser and the parts of the TRUE product (the "Product") listed below, under normal use and service, shall be free of manufacturing defects in workmanship and materials only for the period of time beginning from the original date of purchase set forth below.

WARRANTY ITEM	DURATION
Frame* Frame components and welds excluding coatings	10 Years
Parts Bushings, sealed rotating bearings, pulleys, weight plates and guide rods excluding coatings	5 Years
Cables, linear bearings and shafts and all other components not mentioned elsewhere in this warranty	1 Year
Wear items; normal wear parts including but not limited to labels, upholstered pads, and grips	90 Days
Labor Frame	1 Year
Parts Wear Items	1 Year 90 Days

NOTES:

- Warranty valid for USA and Canada only.
- Failure to register this product will result in no servicing or authorization of parts to be shipped.
- Buying after-market products from a 3rd party will result in voided warranty.
- This product is intended for commercial use which includes non-dues paying facilities where usage exceeds 8 hours per day. If this product will not be used in this particular setting, please contact TRUE as this warranty is void.

DO NOT RETURN TO THE RETAILER

TRUE limited warranty service may be obtained by contacting the authorized TRUE dealer from whom the Product was purchased. If the dealer from whom the Product was purchased, is no longer an authorized TRUE dealer, TRUE limited warranty may be obtained by contacting TRUE Product Support:

- service@truefitness.com
- 800.883.8783

Monday - Friday 8:30am - 5:00pm (CST)

FRAME

*This limited warranty on the structural frame does not include paint or coatings. The frame is defined as the serialized base of the unit and does not include any parts that can be removed. Warranty applies to the value of the frame only and does not cover labor, shipping, or other costs associated with removal or replacement of the covered unit. Frame warranty shall not exceed seven years after discontinuation of this specific model.

PARTS

The parts are warranted for defects in material and workmanship for five years with one year labor warranty. Cables, linear bearings and shafts, and all other components not mentioned elsewhere in this warranty have have one year parts warranty and one year labor warranty. This limited warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, failure to follow instructions and warnings in the owner's manual, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance.

WEAR ITEMS

The cosmetic parts, coatings, grips and upholstery are warranted for defects in material and workmanship for 90 days with labor warranty to match the parts warranty period. This limited warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, failure to follow instructions and warnings in the owner's manual, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance. This limited warranty will apply to, but may not be limited to, plastic covers, shrouds, caps, badges, overlays, paint, coatings, labels, upholstered pads, and grips.

LABOR

Labor is covered for the specified period of time from the date of purchase, unless otherwise expressed within this limited warranty as long as a TRUE authorized service provider performs the service. Service that requires over 50 miles of travel may be subject to additional charges.

REASONABLE AND NECESSARY MAINTENANCE

Failure to perform proper maintenance as specified in the owner's manual will void this limited warranty. Proof/ receipts of necessary maintenance may be required within 30 days of requested warranty part or service.



SAVE TIME AND REGISTER ONLINE! https://truefitness.com/support/warranty-registration/

THE TRUE LIMITED WARRANTY IS SUBJECT TO AND WILL BE IN ACCORDANCE WITH THE CONDITIONS SET FORTH BELOW:

- 1. This limited warranty is valid for the United States and Canada only.
- 2. This product is intended for specified use. If this product will not be used in the specified setting, please contact TRUE as this warranty is void, unless otherwise stated and within this warranty.
- 3. This limited warranty gives you specific legal rights, and your rights may vary from state to state.
- 4. This limited warranty is in lieu of all other warranties of any kind either expressed or including but not limited to implied warranties of merchant.
- 5. This limited warranty can be processed only if the warranty registration form is completed on-line; or if the attached form is filled in, signed by the original purchaser, and mailed to TRUE within 30 days of purchaser's receipt of this Product. The serial number must be intact on the Product for this limited warranty to be valid.
- 6. TRUE will neither assume nor authorize any person to assure for us any other obligation or liability concerning the sale of this Product. Under no circumstances shall TRUE be liable under this warranty, or otherwise, of any damage to any person or property, including any lost profits or lost savings, for any special, indirect, secondary, incidental, or consequential damages arising out of the use of or inability to use this Product.
- 7. Failure to register this product within 30 days of purchase will result in no servicing or authorization of parts to be shipped.
- 8. Installation or download of any 3rd party or after-market products will result in voided warranty. Includes but not limited to electrical and mechanical parts, software, or applications.
- TRUE will ship to any authorized service provider any new or rebuilt replacement part or component, or at our option, replace or refund the Product. Replacement parts are warranted for the remaining portion of the original warranty period.
- 10. No one is authorized to change, modify, or extend the terms of this limited warranty.
- 11. This limited warranty applies to the Product only while the Product remains in the possession of the original purchaser and is not transferable.
- 12. This limited warranty becomes VALID ONLY if the Product is initially assembled/installed by a TRUE authorized dealer/technician (if anyone other than a TRUE authorized dealer/technician initially assembles and installs the Product, this limited warranty will be void unless the written authorization of TRUE is first obtained).

- 13. This limited warranty does not cover damage or equipment failure resulting from or caused by improper assembly/ installation, failure to follow instructions and warnings in owner's manual, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance (as referenced in the owner's manual). Proof/receipts of necessary maintenance may be required within 30 days of requested warranty part or service.
- 14. This limited warranty applies only to the cost of repair or replacement of parts and does not include labor (beyond the above warranty period), transportation, service, return, and freight charges associated there with except as expressly specified herein.
- 15. This limited warranty shall not apply to: Service calls to correct installation of the equipment or instruction to owners on how to use the equipment; or any labor costs incurred beyond the applicable labor warranty period.
- This limited warranty, which is given expressly and in lieu of all other express warranties, constitutes the only warranty made by TRUE.
- 17. ANY IMPLIED WARRANTY, INCLUDING WITHOUT LIMITATION THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED IN DURATION AND REMEDY TO THE TIME PERIOD COVERED BY THE LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.
- 18. THE REMEDIES DESCRIBED HEREIN ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND TRUE'S ENTIRE LIABILITY FOR ANY BREACH OF THIS LIMITED WARRANTY. TRUE'S LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE PRODUCT, NOR SHALL TRUE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

NOTE TO AUTHORIZED WARRANTY LABOR

PROVIDERS—Warranty labor reimbursement or warranty parts rights may not be transferred to, or reassigned to, a third party without the express written consent of TRUE. Even jobbing out warranty labor requires TRUE's written approval.



SAVE TIME AND REGISTER ONLINE!


https://truefitness.com/support/warranty-registration/

PLATE LOADED STRENGTH SERIAL NUMBER:

The PLS1400 comes with one serial number on the base of the machine. Please write down your serial number below and keep for your records.

PLEASE KEEP THIS FOR YOUR RECORDS

RETAIN THIS PORTION BASE SERIAL NUMBER:

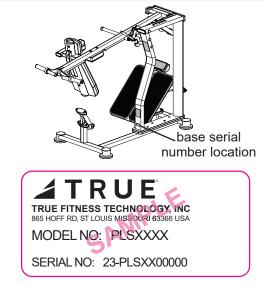

Thank you for purchasing a TRUE product. To validate the TRUE product warranty the fast and easy way, please go online now to truefitness.com and register your product. The information you provide will never be distributed to any other individuals or agencies for any purpose. If you prefer to mail your warranty card, have the owner of the product complete the information below and return it to TRUE Fitness within 30 days from the date of equipment installation.

IMPORTANT! Failure to register this product will result in no servicing or authorization of parts to be shipped.

To mail your warranty information, please fill in the information below and mail to: Service Dept., TRUE Fitness, 865 Hoff Road, St. Louis, MO 63366 (or save postage and register online at www.truefitness.com).



Warranty Registration

Base Serial Number

Purchase Date

Company (if applicable)

Customer Name (First and Last)

Email Address
Phone Number

Street Address
City

Street Address
City

Operation
State



TRUE FITNESS

CONTACT US service@truefitness.com 1.800.883.8783

865 Hoff Road St. Louis, MO 63366

TRUEFITNESS.COM

🛅 🞯 f 💥 🕒

MAN-PLS1400 Owner's Manual, Assembly Guide, and Warranty Card REV02 © 2024 TRUE Fitness All Rights Reserved.