

 TRUE

XFW8200 Olympic 3-Way Bench



OWNER'S
MANUAL

Model # XFW8200
Revision 012720

A MESSAGE TO OUR CUSTOMERS

Thank you for purchasing products from the Paramount XFW line. Because of the many unique features included in these machines, this manual was created to provide you with information on how to properly install and maintain your equipment. Proper maintenance will ensure that your new equipment will last for years.

*For your convenience, product questions can be answered by an Authorized Paramount Dealer or by contacting a TRUE Fitness Customer Service Representative at:
1-800-883-8783 or 1-800-721-2121*

*Office hours are Monday-Friday, 8:00 am - 5:00 pm CST
Or email us at service@truefitness.com or paramountservice@truefitness.com*

Thank You for your patronage.

*TRUE Fitness
865 Hoff Road
O'Fallon, MO 63366*



WARNING

SERIOUS INJURIES TO USERS, BYSTANDERS OR INSTALLERS CAN OCCUR IF THE INSTRUCTIONS AND WARNINGS CONTAINED IN THIS MANUAL ARE NOT FOLLOWED. TO MINIMIZE THIS RISK, READ THE MANUAL BEFORE BEGINNING THE INSTALLATION TO FAMILIARIZE YOURSELF WITH ITS CONTENTS AND THEN BE CERTAIN TO FOLLOW EACH OF THE STEPS AND PRACTICES DESCRIBED. IN ADDITION, REVIEW THE GENERAL MAINTENANCE MANUAL, FACILITY SIGN AND OTHER DOCUMENTS THAT MAY ACCOMPANY EACH MACHINE, FOR IMPORTANT SAFETY AND MAINTENANCE TIPS. THE MANUAL HAS BEEN INCLUDED WITH YOUR MACHINE ORDER AND CAN ALSO BE DOWNLOADED FROM OUR WEBSITE AT: <http://www.truefitness.com>

PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE.

TABLE OF CONTENTS

SAFETY..... 4

GENERAL CARE AND MAINTENANCE..... 7

MACHINE DIMENSIONS & WEIGHTS..... 8

ASSEMBLY..... 9

ADJUSTMENT CHECK..... 15

PARTS DIAGRAMS..... 16

INTENDED USE & WARNING LABELS..... 20

WARRANTY..... 22

SAFETY



FACILITY AND USER SAFETY PRECAUTIONS

1. Review and understand all of the warning labels affixed to this machine and on the facility safety sign.
2. Be certain that the machine operation is understood before it is used. Refer to the instructional Procedure Label affixed to the machine.
3. Make sure all users are properly trained on how to use this equipment. If this machine is being used in a commercial setting, end users may not have access to this Owners Manual. It is the responsibility of the facility to instruct users as to the proper usage of the equipment as well as making them aware of potential hazards. Maximum user weight is 300 lbs (136 kg).
4. Use each machine only for the intended exercise. Do not allow anyone to invent exercises not included on the Instructional Procedure Label or the Intended Use Label.
5. Do not modify the machine.
6. This equipment meets industry safety standards for stability when used for the intended exercise. Do not allow straps, resistance bands or other means to be attached to the framework of this machine to perform stretching or body weight exercises. This can result in machine instability and lead to serious crushing injuries.
7. Keep children away from this equipment. Adults should closely supervise use by teenagers.
8. It is recommended that users receive a thorough medical exam before commencing an exercise program. All medical issues should be reviewed to ensure that weight training will not aggravate pre-existing medical conditions.
9. If the machine appears damaged or inoperable, contact a facility staff member to place an “OUT OF ORDER, DO NOT USE” sign on the machine until it is repaired. Only use Paramount supplied replacement components to service this machine.
10. Instruct users not to wear loose or dangling clothes or have headphone wires hanging when using this equipment.
11. Do not attempt to free any jammed assemblies by yourself as this may cause injury.
12. On Plate Loaded and Free Weight machines:
 - 12a. Use of spotter(s). Instruct users to seek the advice of the facility staff as to the appropriate use of spotters when lifting. More than one spotter may be required depending upon the amount of weight being lifted.
 - 12b. Instruct users to load weight plates evenly and carefully (one side and then the other) to avoid tipping equipment and crushing injuries.
 - 12c. If the machine is equipped with safety stops or catches, inspect them and verify their proper operation before use and make sure they are securely in place before using or exiting the machine. Be certain members are instructed on how to operate and adjust all safety mechanisms.

- 12d. This equipment is designed for standard olympic size weight plates with a 50mm bore (1.9").
- 12e. Do not exceed the maximum weight capacity of the machine. Maximum plate size is 45 lbs. (25 kg.).
13. On Selectorized and Cable equipped machines:
- 13a. Do not allow users to perform any exercise by holding the end of the cable and/or the cable end fitting. Use only appropriate handles or attachments properly connected to the cable end.
- 13b. Do not high-pin or double-pin the weight stack. Do not allow the machine to be used if the top plate or weight stack is pinned in a raised position. Use an assistant and carefully return the machine to the proper position with the cap plate resting on the top weight. Inspect the entire length of the cable to ensure that it is properly seated in all of the pulley grooves.
- 13c. Do not allow the use of weight plates or dumbbells to be used as a means to add additional weight to the weight stacks. Use only the Paramount adder weight system specifically designed for the machine.



INSTALLATION SAFETY PRECAUTIONS

1. Read this Installation Manual entirely before assembling this equipment.
2. Verify that there is adequate space surrounding this piece of equipment for safe access and operation. Installation must meet ADA requirements for accessibility.
3. Install this piece of equipment on a solid level surface that does not deviate more than 1/8" over a 10' distance (or as defined and required by local building and architectural codes.
4. Paramount strongly recommends that all equipment be anchored to the floor to prevent movement and increase stability.
 - Due to the wide variation of flooring on which the unit can be installed, contact a qualified contractor to determine an appropriate fastening system for your floor.
 - Use 3/8" diameter hardware (10 mm) to anchor the machine. Anchors should have a minimum pull out force of 220 lbs (110 kgs) for each position.
 - When attaching the machine to the floor, if there is a gap between the machine foot and the floor, do not use the anchor to remove the gap as this can cause the machine frame to deform. Instead, place a shim between the bottom of the foot and the floor, then tighten the anchor.
 - Anchoring holes are provided on the feet of the frame. All anchoring locations must be used when anchoring the equipment to the floor.
5. DO NOT install any fitness equipment near a pool, hot tub or other damp locations. Corrosion caused by installation in these locations can lead to premature failure of components.
6. Be sure all hardware is tight before using this machine.


SAFETY



MAINTENANCE SAFETY PRECAUTIONS

1. Refer to Maintenance Schedule label on the machine as well as this manual for when to perform maintenance.
2. Check the function of your machine **DAILY** by verifying the following:
 - Inspect cables and end fittings for any signs of wear. Replace if worn, frayed or damaged with original Paramount replacement components.
 - Verify that all adjustments are possible and carried out with ease. Make sure that each adjustment pin inserts completely into each position without binding.
 - Verify that safety catches and stops are in proper working order and engaged.
 - Verify that the exercise is performed smoothly, free of noise and/or binding.
 - If equipped with a weight stack, verify that the proper weight selector pin is in place.
3. Check the function of your machine **WEEKLY** by verifying the following:
 - **Nuts, Bolts, and Fasteners:** Check tightness weekly. If any hardware has become loose, retighten and/or use Loctite™ Threadlocker 242.
 - **Frames and Lifting Arms:** Inspect weekly for integrity and function. Replace any component at first signs of wear. Use only Paramount supplied components.
4. Replace any warning label at first sign of wear. Labels and the Facility Safety Sign may be obtained from Paramount free of charge.

BOLT LENGTH MEASURING GUIDE

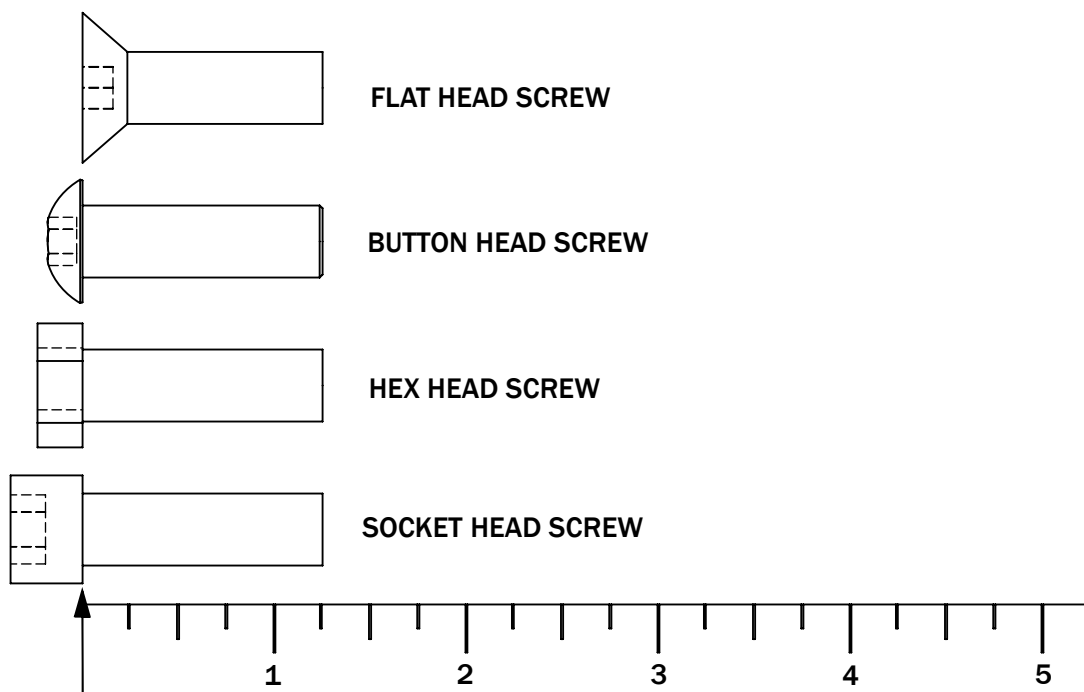

GENERAL CARE AND MAINTENANCE



IMPORTANT


Preventative maintenance is crucial to maintaining the function and safety of this equipment. Your facility must establish written guidelines for preventative maintenance and keep written or online records of the maintenance performed on these products. As a minimum, the items presented in the SAFETY section of this document and the items that follow here, should be included in your maintenance program.

1. **Cables:** Inspect end fittings daily for wear. Inspect the entire length of the cable weekly. Replace cables at the first sign of wear and on an annual basis. If the cable tension has been adjusted, be certain that the cable nut is tight.
2. **Nuts, Bolts, and Fasteners:** Check tightness weekly. If any hardware has become loose, retighten and/or use Loctite™ brand Threadlocker 242. Be sure all hardware is tight before using the machine.
3. **Safety Catches:** Inspect catches, stop rods and their associated fasteners weekly. Tighten any loose hardware and replace any components at first signs of wear.
4. **Frames:** Wipe all machines down with a damp cloth and dry completely each day. This includes painted parts, chrome parts and upholstered pads.
5. **Painted and chrome plated parts:** Use Simple Green or similar cleaner for light dirt and grime. Use Turtle Wax Polishing Compound or a good car polish to remove heavier dirt and grease as well as for polishing. DO NOT use solvents, lacquer thinner, acetone or finger nail polish remover. For scuffs and marks that are not removed by the above methods use a soft scrub cleanser. Make sure all parts are dry upon completion.
6. **Weight stack enclosures (shrouds):** Wipe down with a damp cloth as needed.
7. **Exercise instruction labels:** Clean with soap and water as needed.
8. **Guide rods:** Wipe all dirt and dust from the guide rods before applying a light application of Tri-Flow™ or other teflon spray lubricant. Spray the Tri-Flow™ on a rag and then wipe the guide rods with the rag. DO NOT use oil lubricants such as WD-40. Caution: Tri-Flow™ will stain carpet and clothing.
9. **Bronze bushings:** Check monthly for signs of wear and replace as needed.
10. **Linear Bearing Shafts:** Wipe any accumulation of dust or other contaminants from the shafts on a weekly basis. Apply a thin layer of a Teflon® (PTFE) grease on a weekly basis. Paramount recommends Magnalube® brand.
11. When replacing any component, use only Paramount supplied parts.
12. Please refer to the General Maintenance Manual (part number: AM-GMM) for other important safety and maintenance information.
13. Be sure all hardware is tight before using the machine.

Retain these instructions for future reference.

If you have any questions, do not hesitate to contact your Paramount dealer or TRUE Fitness at (800) 883-8783 or (800)721-2121 or service@truefitness.com or paramountservice@truefitness.com

DIMENSIONS AND WEIGHTS

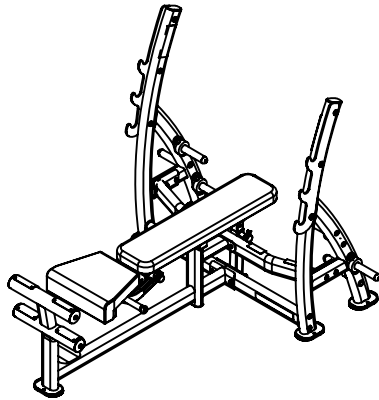

Carton Size:

61" X 29" X 20"

154 cm x 74 cm x 50 cm


Carton Weight (as shipped) = 271 lbs (123 kg.)

Assembled Weight (as shown) = 236 lbs (107 kg)


Maximum User Weight = 300 lbs. (136 kg.)

Maximum Load Capacity:





(user + lifted weight) = 795 LBS. (361 KG.)

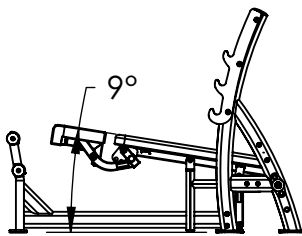

9°

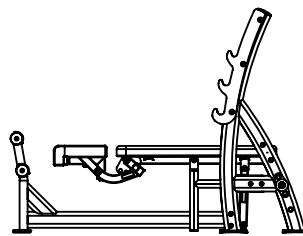

26°

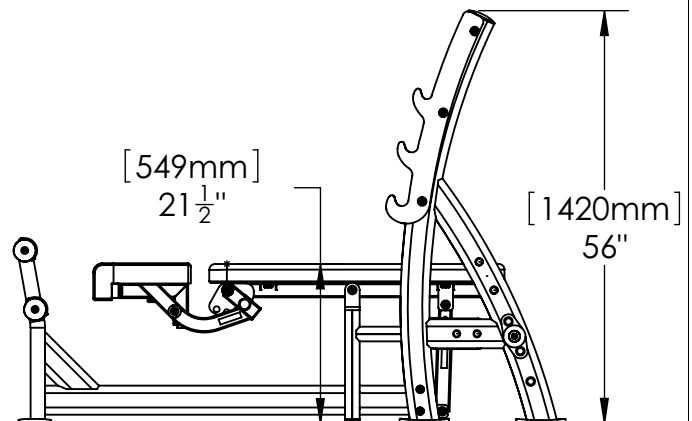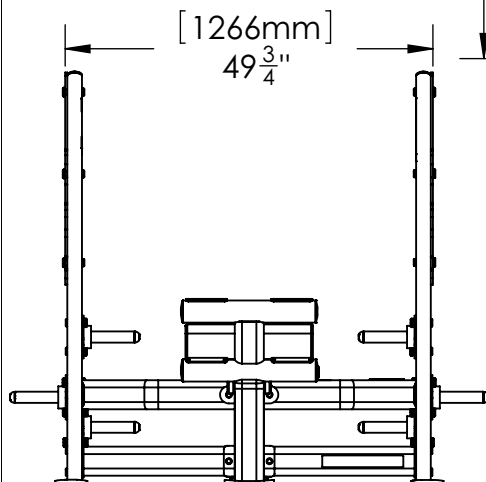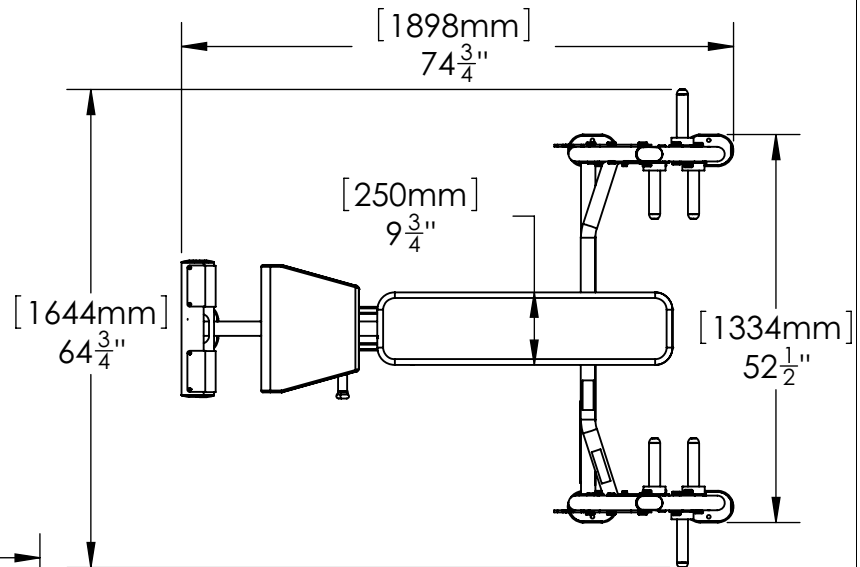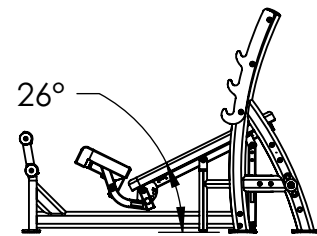

Tools Required:

14mm (9/16") socket wrench

Ratchet Handle


14mm (9/16") box/open end wrench

3/32" hex (allen) wrench

3/16" hex (allen) wrench


7/32" hex (allen) wrench

1/4" hex (allen) wrench

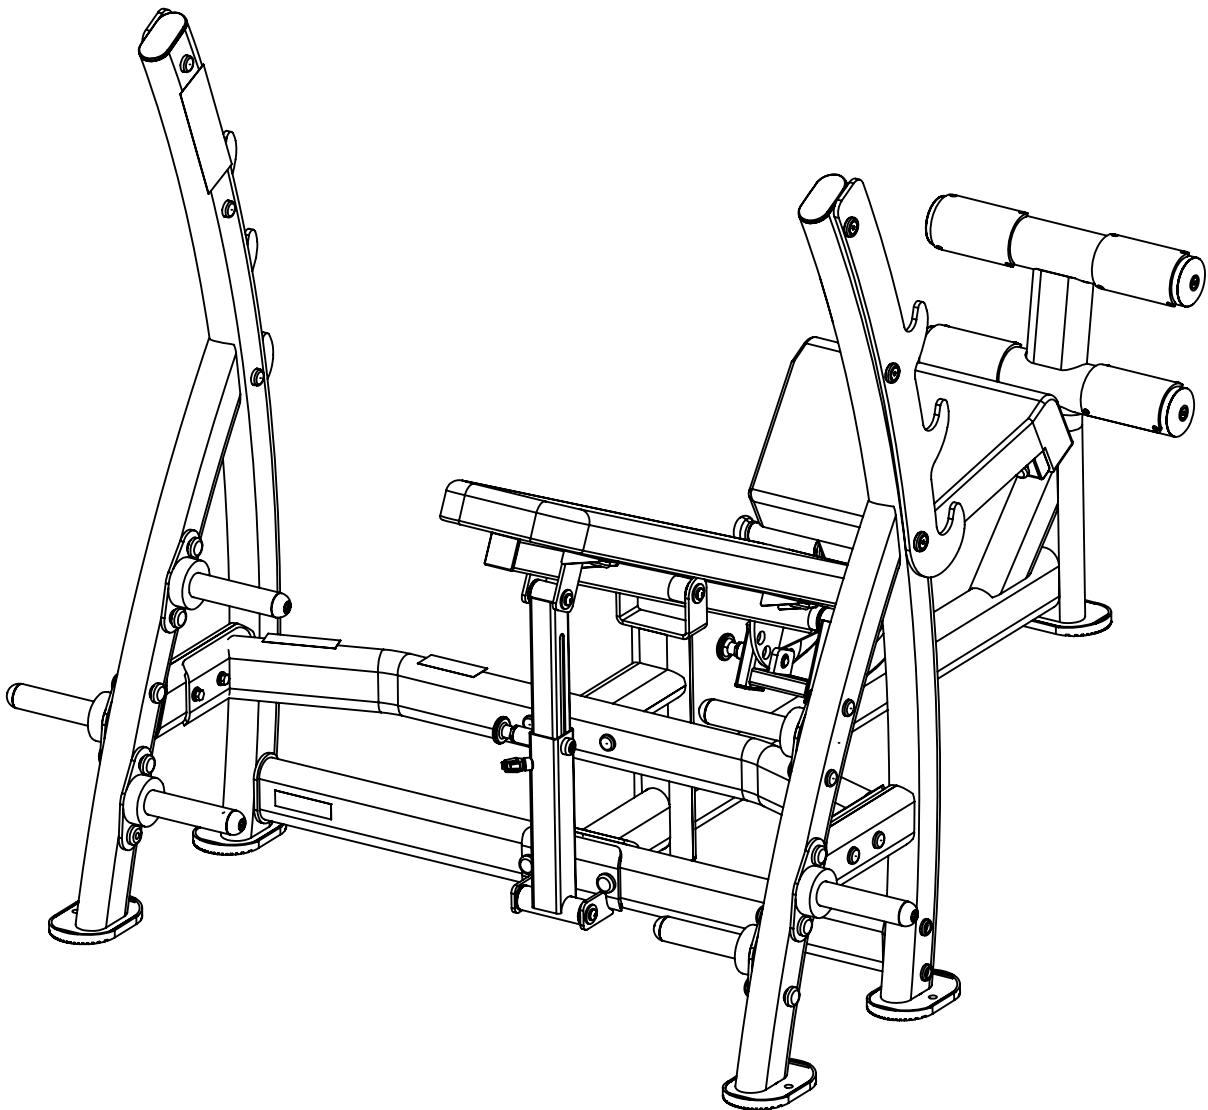


ASSEMBLY

STEP 1. MAIN FRAME ASSEMBLY			
ITEM	PART NUMBER	DESCRIPTION	QTY
1	C 955A	BASE WASHER FOR PLASTIC CAP, 3/8" BOLT	18
2	C 955BK	CAP, BOLT, PLASTIC, BLACK	18
3	C-446LP	HH SCREW, 3/8"-16, 1-1/4", LOCKING PATCH	10
4	C-451	HH SCREW, 3/8"-16, 2-3/4"	4
5	C-452	HH SCREW, 3/8"-16, 3"	4
6	C-628UC	SH SCREW, 3/8"-16, 2-1/4" ZINC	4
7	C-749	WASHER, LOCK, 3/8", ZP	12
8	C-754C	WASHER, FLAT, 3/8" SAE, ZP	26
9	C-766A	LOCK NUT, 3/8"-16, NYL INS JAM NUT	8
10	XFW00-PH040X	WEIGHT STORAGE HORN ASSEMBLY	6
11	XFW82-MF000XBK	MAIN FRAME ASSEMBLY	1
12	XFW82-MF020XBK	LOWER CROSS BRACE ASSEMBLY	1
13	XFW82-MF050XBK	UPPER CROSS BRACE ASSEMBLY	1
14	XFW82-SF000XBK	UPRIGHT FRAME ASSEMBLY, LEFT	1
15	XFW82-SF010XBK	UPRIGHT FRAME ASSEMBLY, RIGHT	1

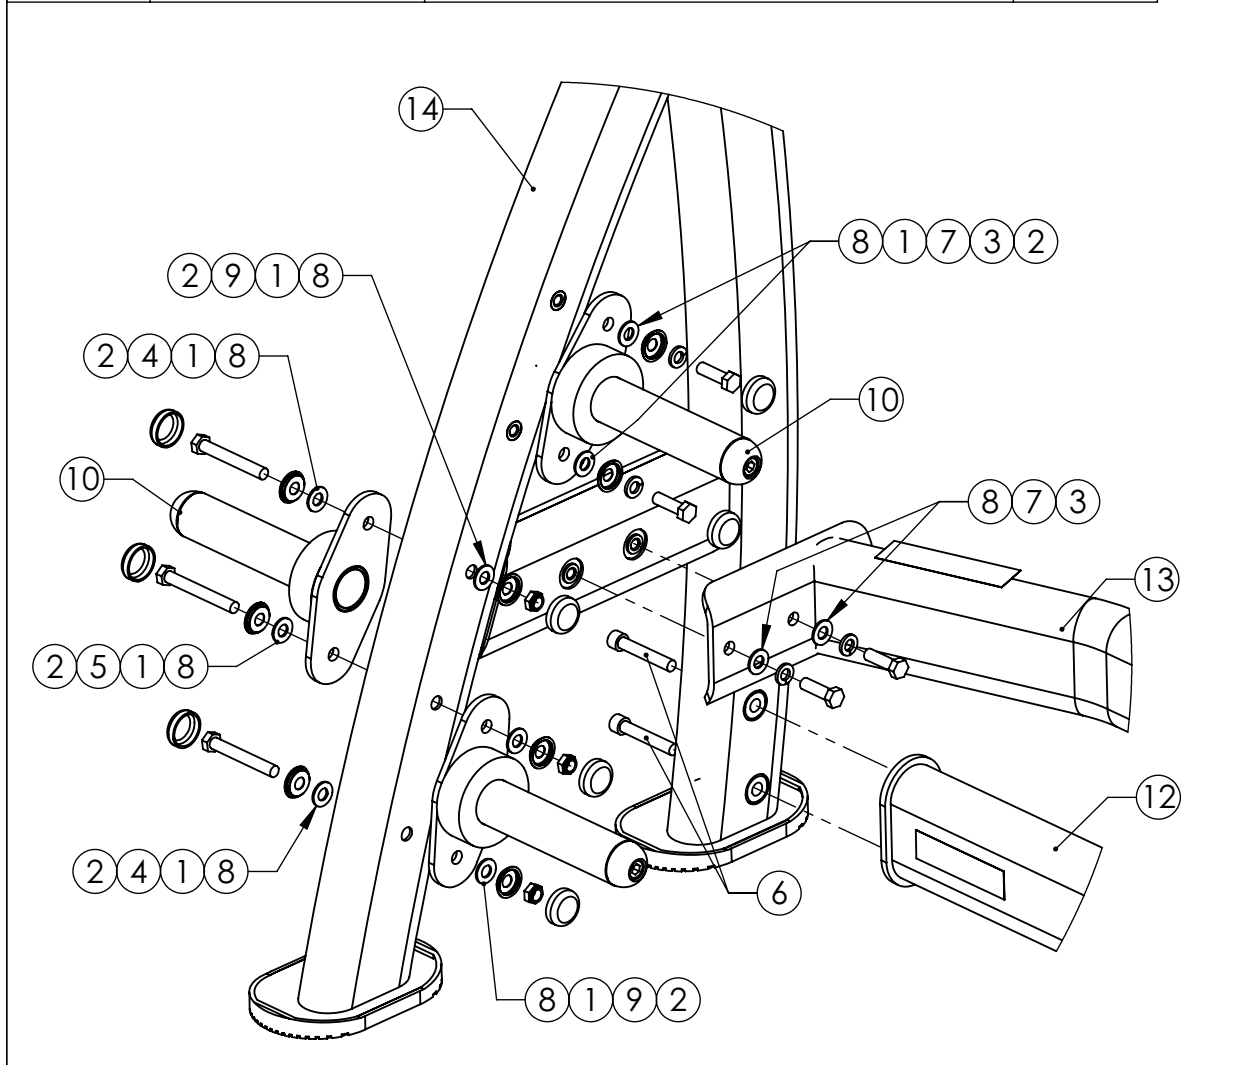


ASSEMBLY

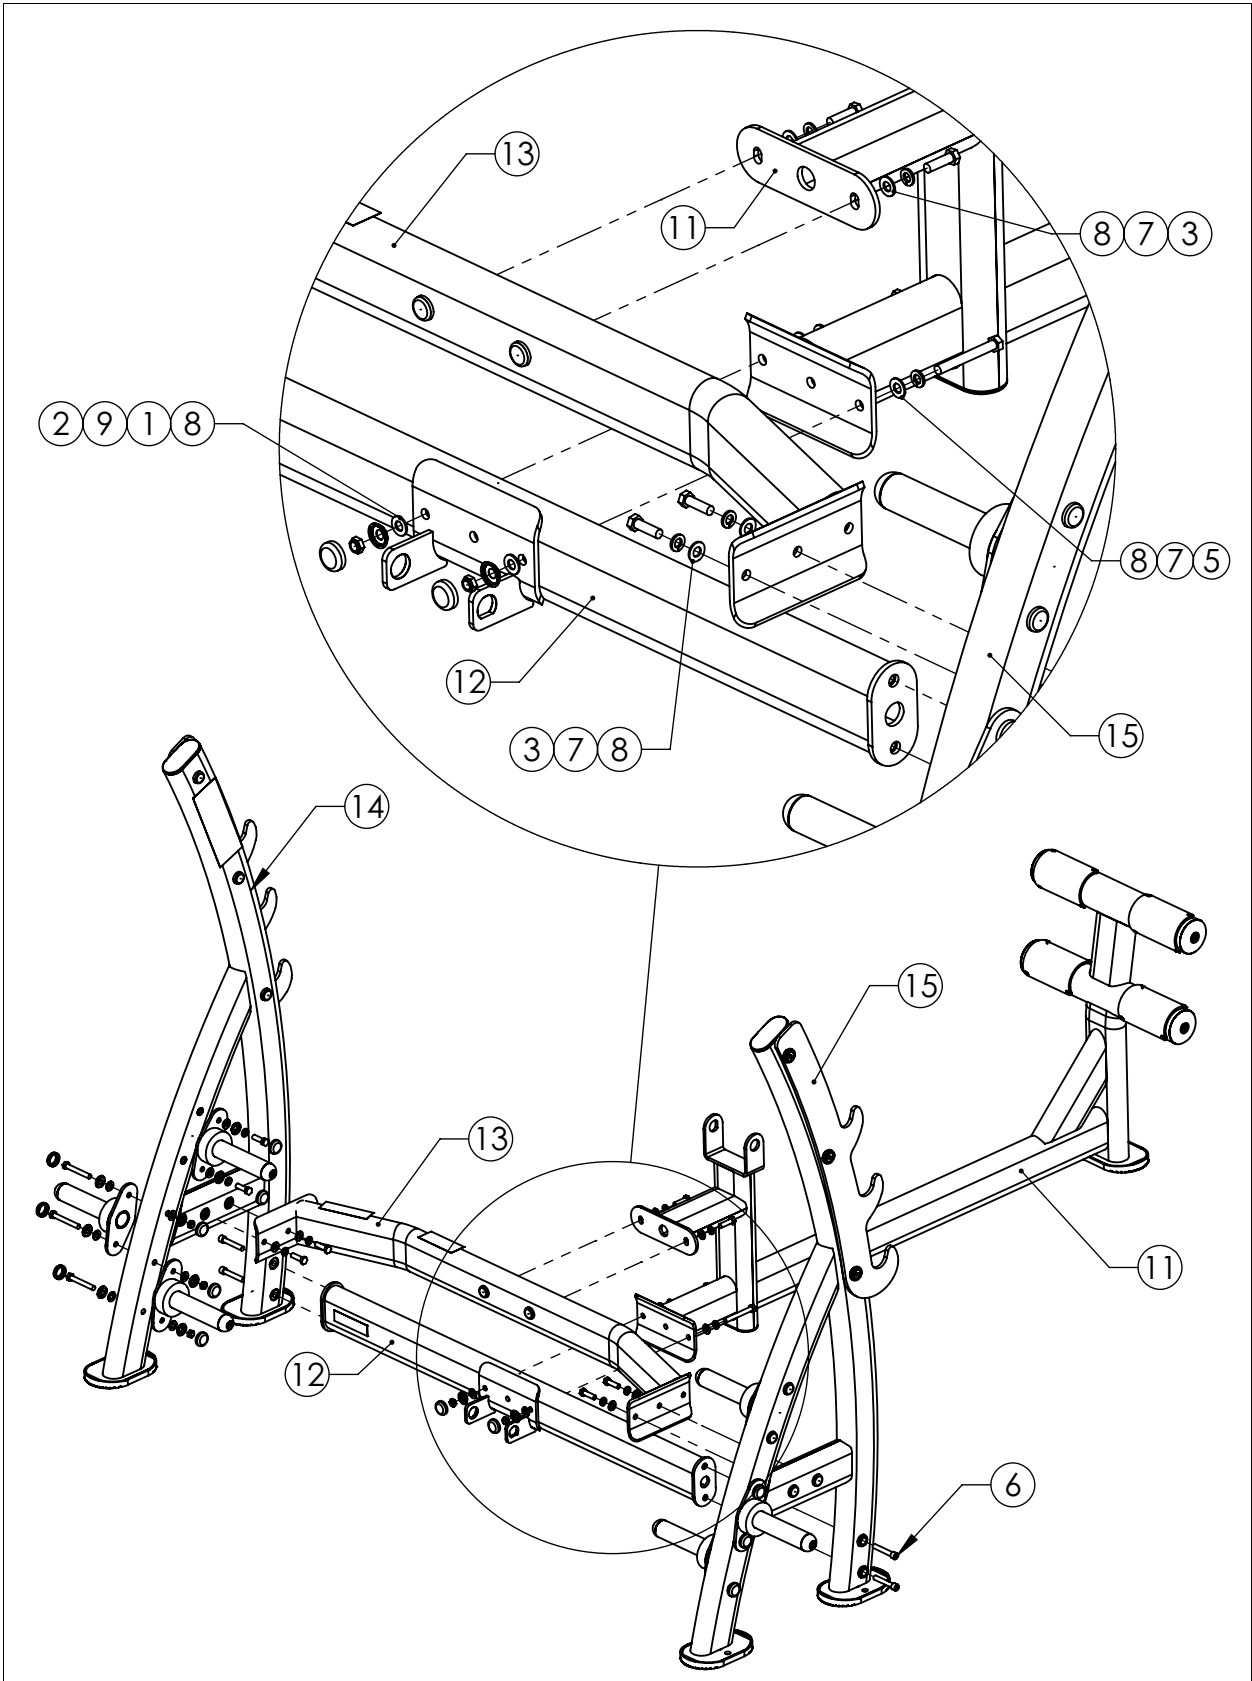


ASSEMBLY

STEP 2. ASSEMBLE BACK PAD FRAME & ADJUSTMENT			
ITEM	PART NUMBER	DESCRIPTION	STEP 2 QTY.
105	C-616	SH SCREW, 5/16"-18, 1"	1
107	C-678	BH SCREW, 3/8"-16, 1"	6
108	C-749	WASHER, LOCK, 3/8", ZP	6
111	C-966	WASHER, FLAT, 0.413" ID, 1.18 OD, 0.091 THK	6
113	XFW82-AD020XBK	BACK PAD ADJUSTMENT TUBE ASSEMBLY, LOWER	1
114	XFW82-AD030XBK	CHROME ADJUSTMENT TUBE ASSEMBLY	1
115	XFW82-AX001	AXLE, 1" OD X 5-1/8" LONG	2
116	XFW82-AX003	AXLE, 1" OD X 2.5" LONG	1
120	XFW82-PF000XBK	BACK PAD FRAME ASSEMBLY	1

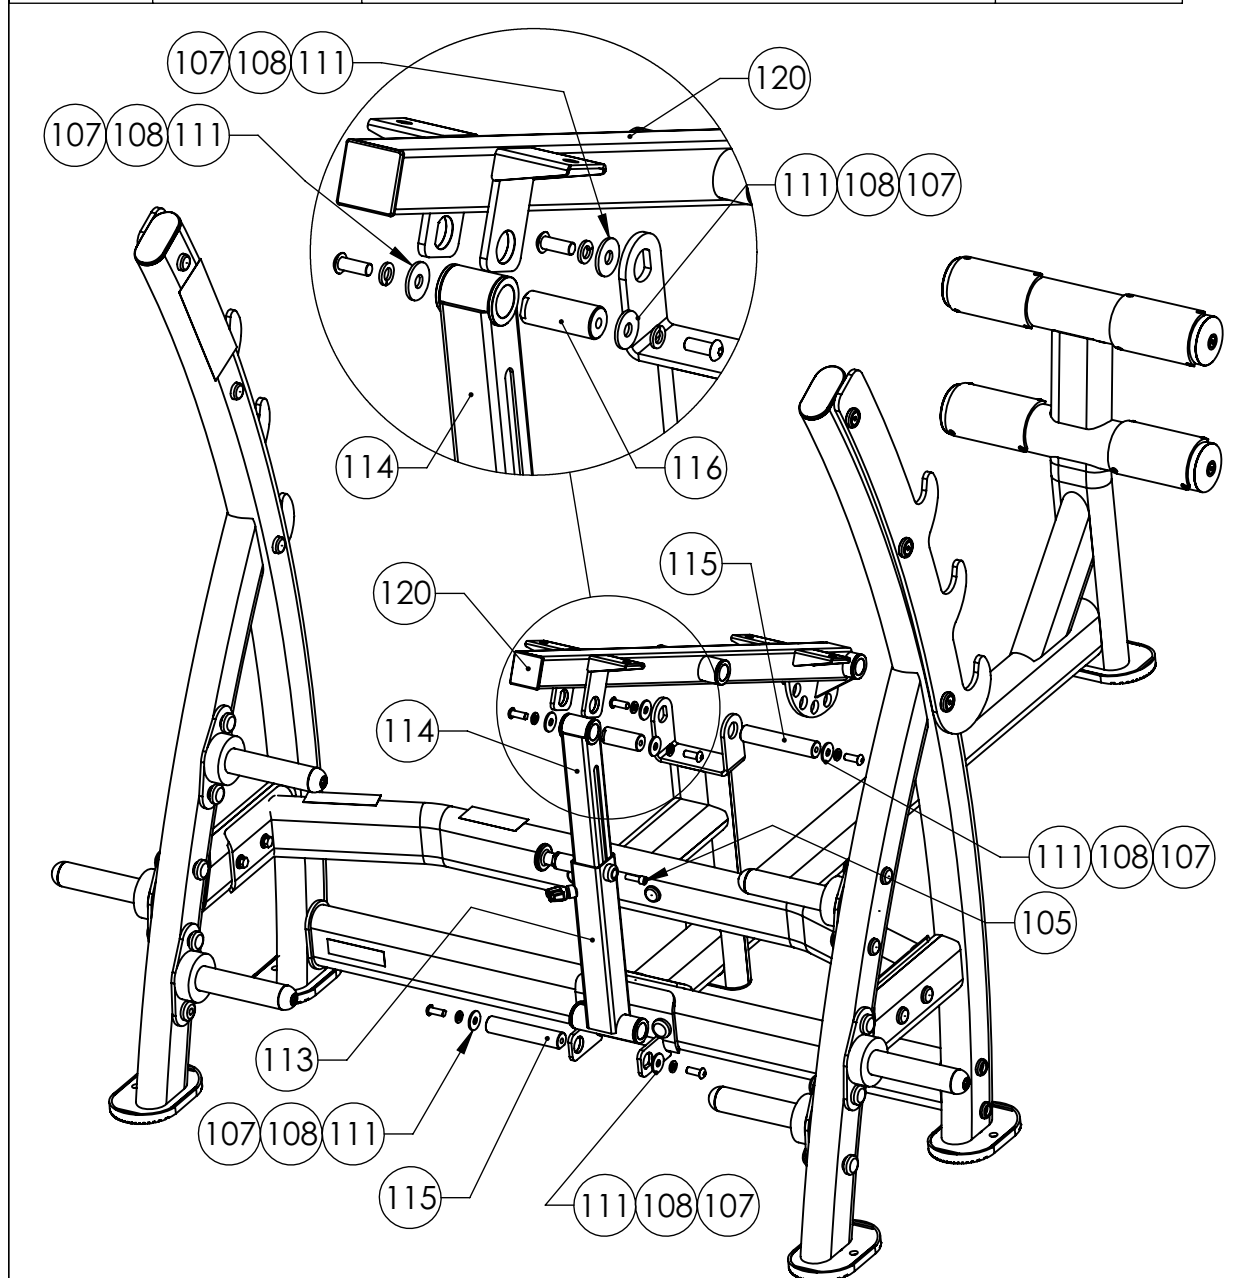


ASSEMBLY

STEP 3. ASSEMBLE THE SEAT FRAME			
ITEM	PART NUMBER	DESCRIPTION	Step 3 QTY.
207	C-678	BH SCREW, 3/8"-16, 1"	2
208	C-749	WASHER, LOCK, 3/8", ZP	2
211	C-966	WASHER, FLAT, 0.413" ID, 1.18 OD, 0.091 THK	2
217	XFW82-AX004	AXLE, 1" OD X 6.2" LONG	1
221	XFW82-PF000XBK	BACK PAD FRAME ASSEMBLY	1
222	XFW82-PF010XBK	SEAT FRAME ASSEMBLY	1

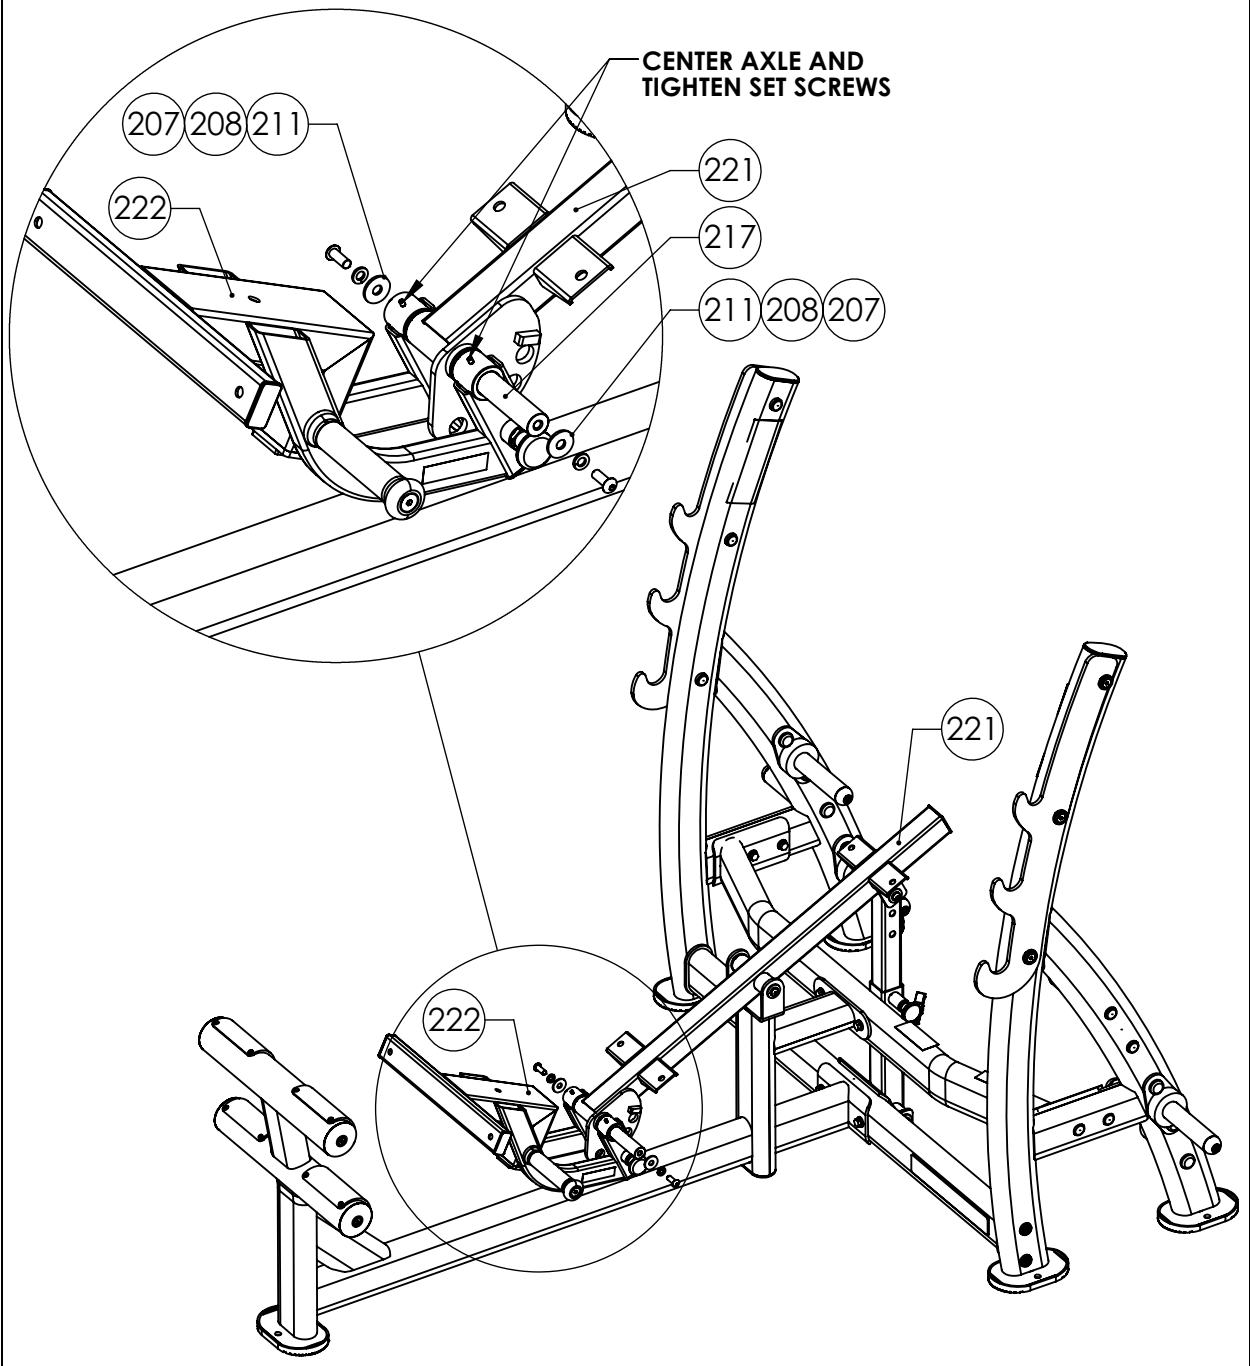

ASSEMBLY


STEP 4. ASSEMBLE THE PADS			
ITEM	PART NUMBER	DESCRIPTION	STEP QTY.
300	C 955A	BASE WASHER FOR PLASTIC CAP, 3/8" BOLT	7
301	C 955BK	CAP, BOLT, PLASTIC, BLACK	7
302	C-446LP	HH SCREW, 3/8"-16, 1-1/4", LOCKING PATCH	4
303	C-449	HH SCREW, 3/8"-16, 2-1/4"	2
305	C-452	HH SCREW, 3/8"-16, 3"	1
309	C-749	WASHER, LOCK, 3/8", ZP	7
310	C-754C	WASHER, FLAT, 3/8" SAE, ZP	7
313	PAD-BK072-00X	ASSY, BACK PAD	1
314	PAD-ST082-00X	SEAT PAD	1

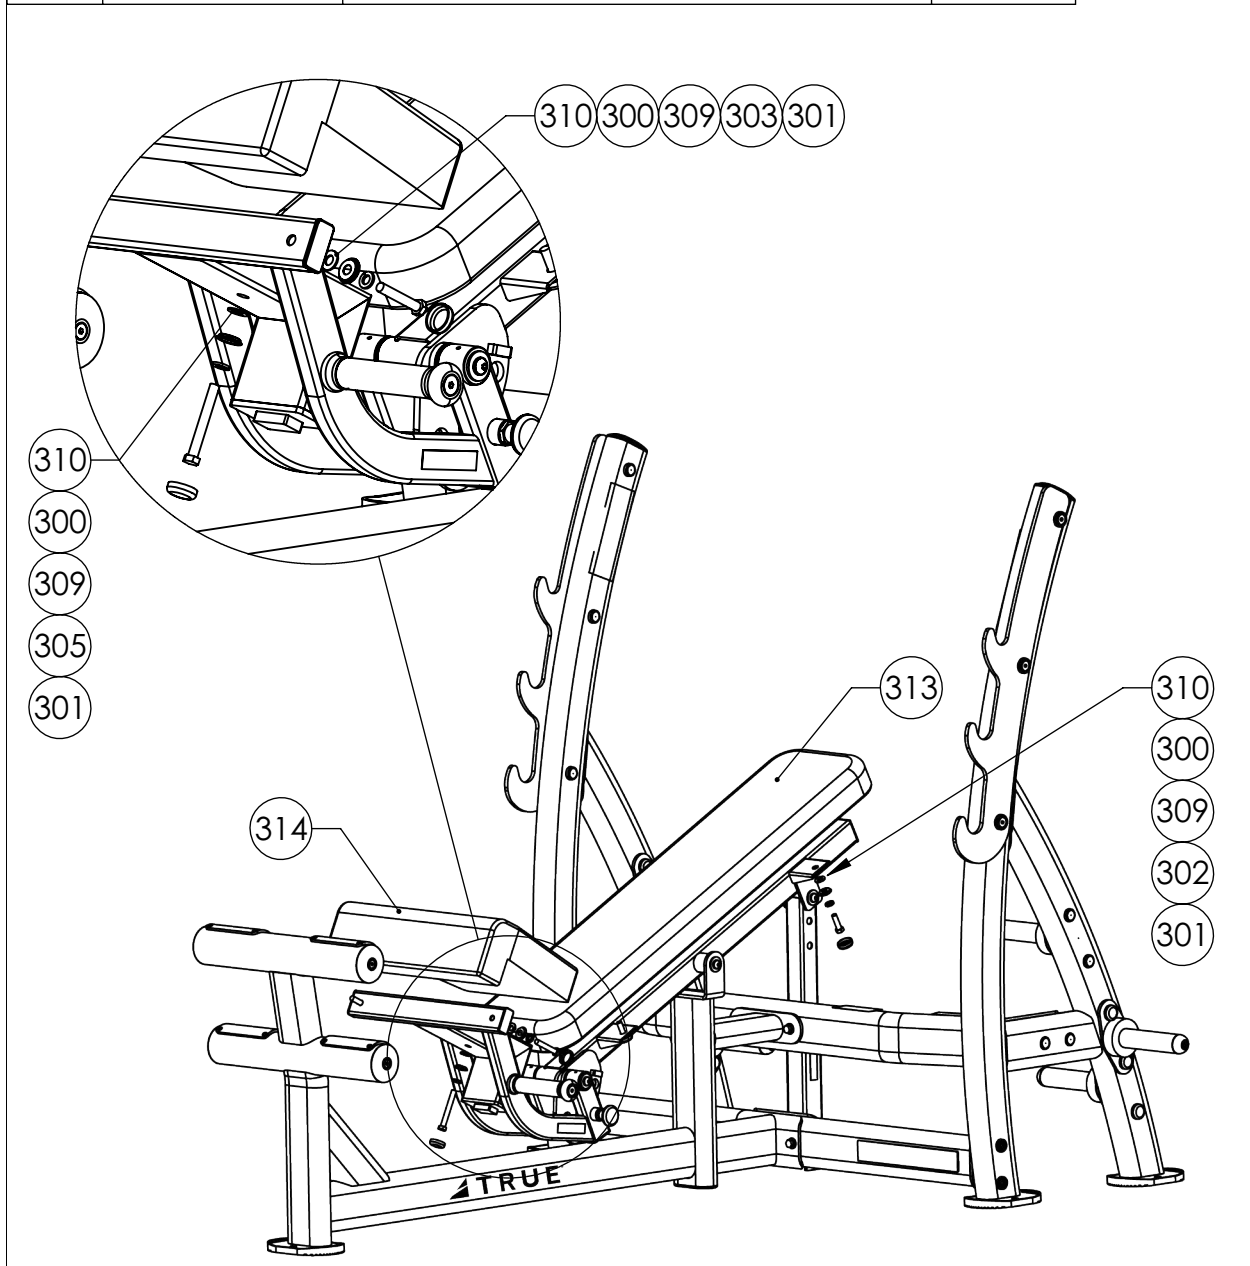

ADJUSTMENT CHECK

After completing the assembly of the bench, check the operation of the adjustments making note of the the following items:


- Adjust the seat pad to each of the positions. Make sure that the adjustment pin (with the yellow knob) enters each hole in the adjustment disc completely.
- Adjust the back pad to each position (Incline, Supine and Decline). Make sure that the adjustment pin with the yellow knob enters each hole in the adjustment tube completely.
- Fully tighten the T-Knob on the back pad adjustment. Verify that it locks the adjustment tube into position.
- Lubricate the chrome back pad adjustment tube with a Teflon (PTFE) spray lubricant. Paramount recommends TriFlow Brand.

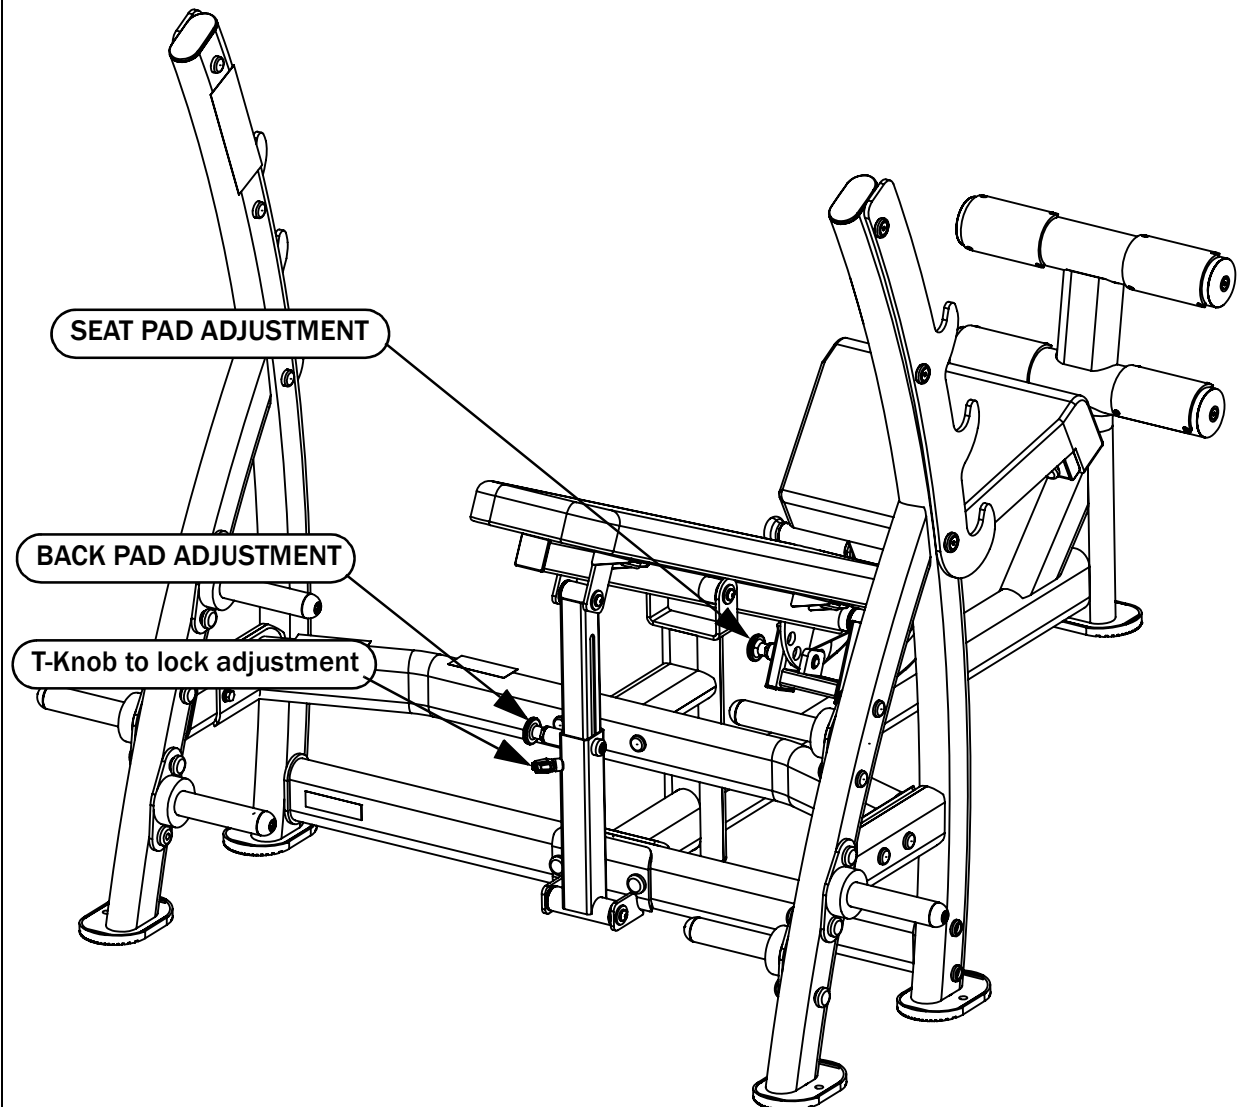

PARTS DIAGRAMS


XFW72-MF050XBK, UPPER CROSS BRACE ASSEMBLY

ITEM	PART NUMBER	DESCRIPTION	QTY.
400	B2066	LABEL, USE SPOTTER	1
401	LBL-WRN-0015	LABEL, HEAVY SEAT WARNING	1
402	XFW72-MF050BK	WELDMENT, UPRIGHT SPACER FRAME, UPPER	1

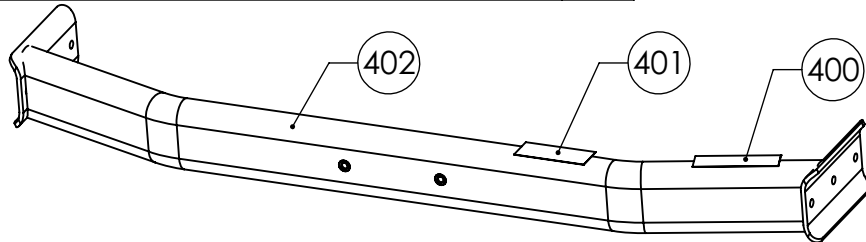


XFW82-MF020XBK, LOWER CROSS BRACE ASSEMBLY

ITEM	PART NUMBER	DESCRIPTION	QTY.
411	SERIAL TAG	LABEL, SERIAL NUMBER	1
412	XFW82-MF020BK	WELDMENT, CROSS BRACE, LOWER	1

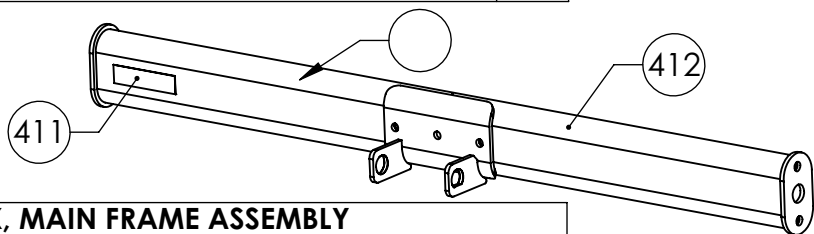

XFW82-MF000X, MAIN FRAME ASSEMBLY


ITEM	PART NUMBER	DESCRIPTION	QTY.
420	C 880	SELF TAPPING SCREW, ST4.8 X 19MM, PAN HD.	16
421	CC-34-004	SCREW, FLAT HEAD, M8 x 1.25 x 19	4
422	H2-A095	TUBE END PLUG, FLAT, 50 X 100	1
423	IT60031600V1	FOOT, DOUBLE OVAL, 62 X 102	1
424	S 574BK	FOOT GRIP, RUBBER	4
425	XFW82-CV001	TUBE END CAP, 3" OD	4
426	XFW82-MF000BK	WELDMENT, MAIN FRAME	1

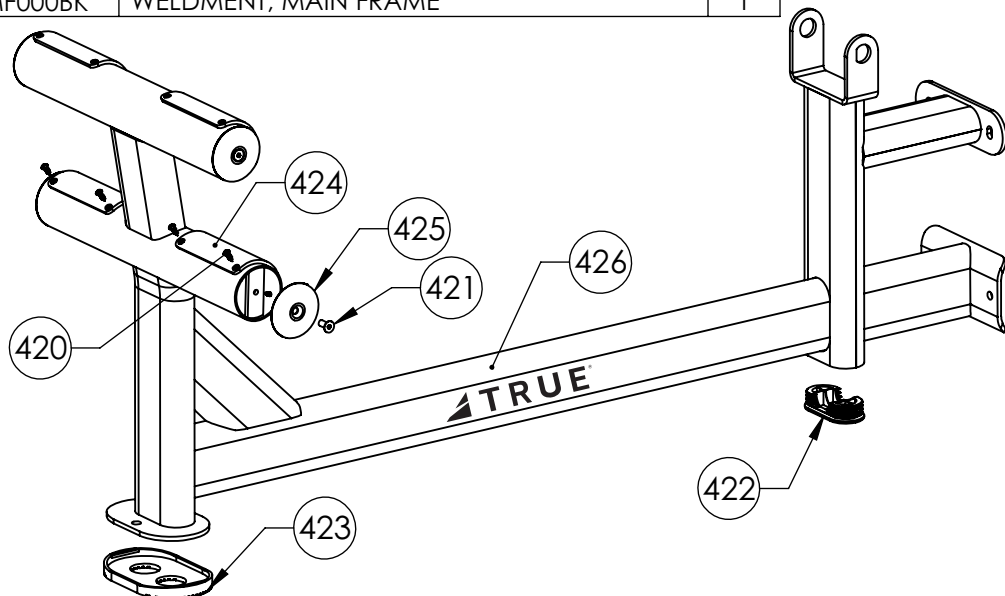

PARTS DIAGRAMS

XFW82-PF000XBK, BACK PAD FRAME ASSEMBLY			
ITEM	PART NUMBER	DESCRIPTION	QTY.
430	B 682	END PLUG, 2" X 2", BLACK	1
431	D-575	BUSHING, FL, 1" ID X 3/4" LG,	4
432	XFW82-PF000BK	WELDMNT, BACK PAD FRAME	1


XFW82-PF010XBK, SEAT FRAME ASSEMBLY			
ITEM	PART NUMBER	DESCRIPTION	QTY.
440	83004700	RUBBER BUMPER	1
441	B2065	LABEL, WARNING, COMPLETELY INSERT PIN	1
442	b_1080	END PLUG, 1" X 2", BLACK	4
443	C 715B	10-32 X 1/4" CUP POINT SET SCREW	2
444	C-659ZP	FH SCREW, 3/8"-16, 1-1/4", ZP, LOCK PATCH	1
445	C-715C	10-32 X 1/8" CUP POINT SET SCREW, SS	2
446	IT90102100	ALUMINUM GRIP CAP, 1" DIAMETER	1
447	IT90102200	ALUMINUM GRIP SLEEVE, 1" DIAMETER	1
448	XFW-5380-00XBK	ASSY, POP PIN	1
449	XFW-5740-99	GRIP, 1" X 4-3/4" LONG	1
450	XFW82-PF010BK	WELDMNT, SEAT FRAME	1

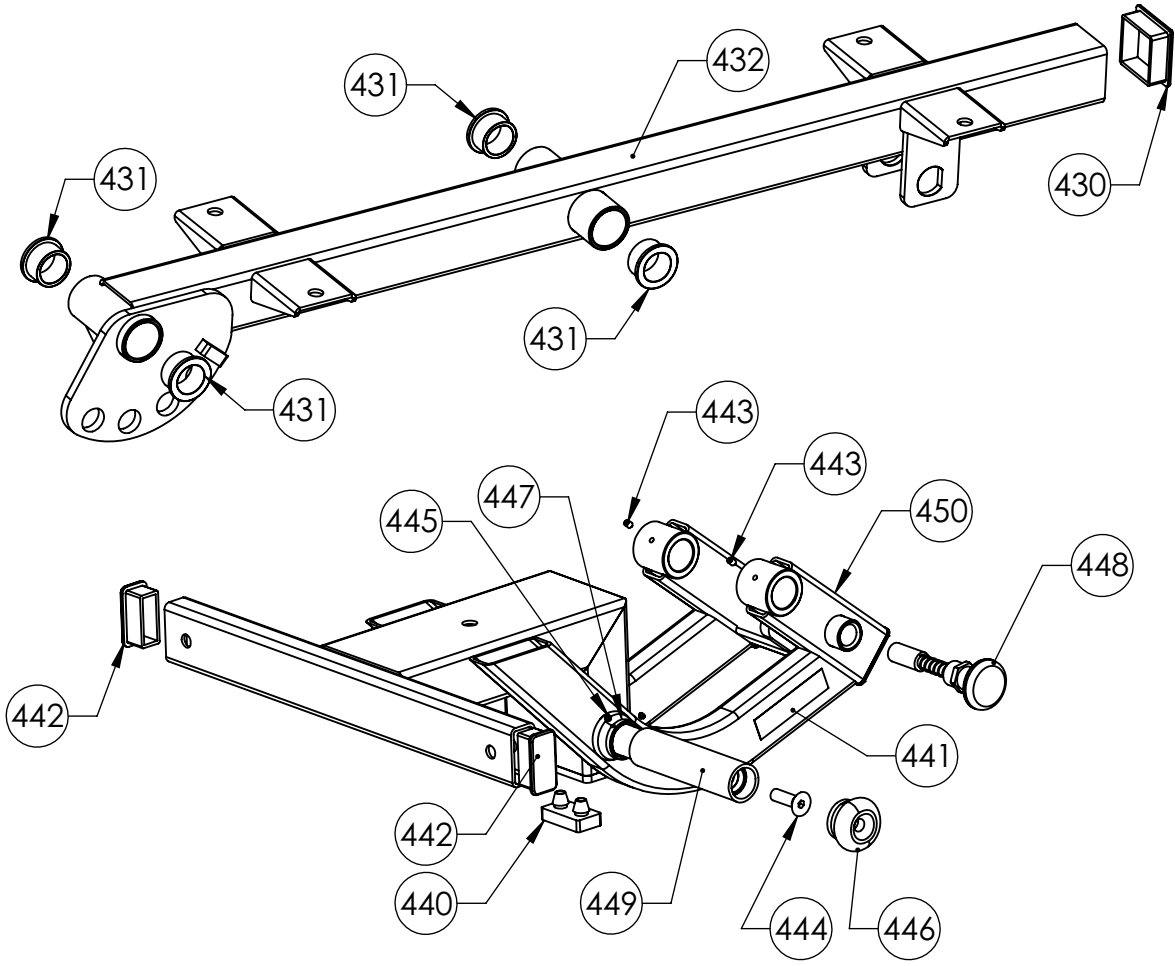

PARTS DIAGRAMS


XFW82-SF010XBK, UPRIGHT FRAME ASSEMBLY, RIGHT			
ITEM	PART NUMBER	DESCRIPTION	QTY.
460	C-661LP	FH SCREW, 3/8"-16, 1-3/4", LOCK PATCH	3
461	IT60031600V1	FOOT, DOUBLE OVAL, 62 X 102	2
462	IT90013800	END PLUG, 50X100 RACETRACK OVAL	1
463	LBL-PR-XFW82	LABEL, INTENDED USE	1
464	XFW00-CP032	BUSHING, CATCH HOOK MOUNT	3
465	XFW82-CP001	CATCH HOOK, 3-POSITION	1
466	XFW82-SF010BK	WELDMENT, UPRIGHT FRAME, RIGHT	1

XFW82-SF000XBK, UPRIGHT FRAME ASSEMBLY, LEFT			
ITEM	PART NUMBER	DESCRIPTION	QTY.
470	C-661LP	FH SCREW, 3/8"-16, 1-3/4", LOCK PATCH	3
471	IT60031600V1	FOOT, DOUBLE OVAL, 62 X 102	2
472	IT90013800	END PLUG, 50X100 RACETRACK OVAL	1
473	LBL-WRN-0010	LABEL, XFW GENERAL WARNING	1
474	XFW00-CP032	BUSHING, CATCH HOOK MOUNT	3
475	XFW82-CP001	CATCH HOOK, 3-POSITION	1
476	XFW82-SF000BK	WELDMENT, UPRIGHT FRAME, LEFT	1

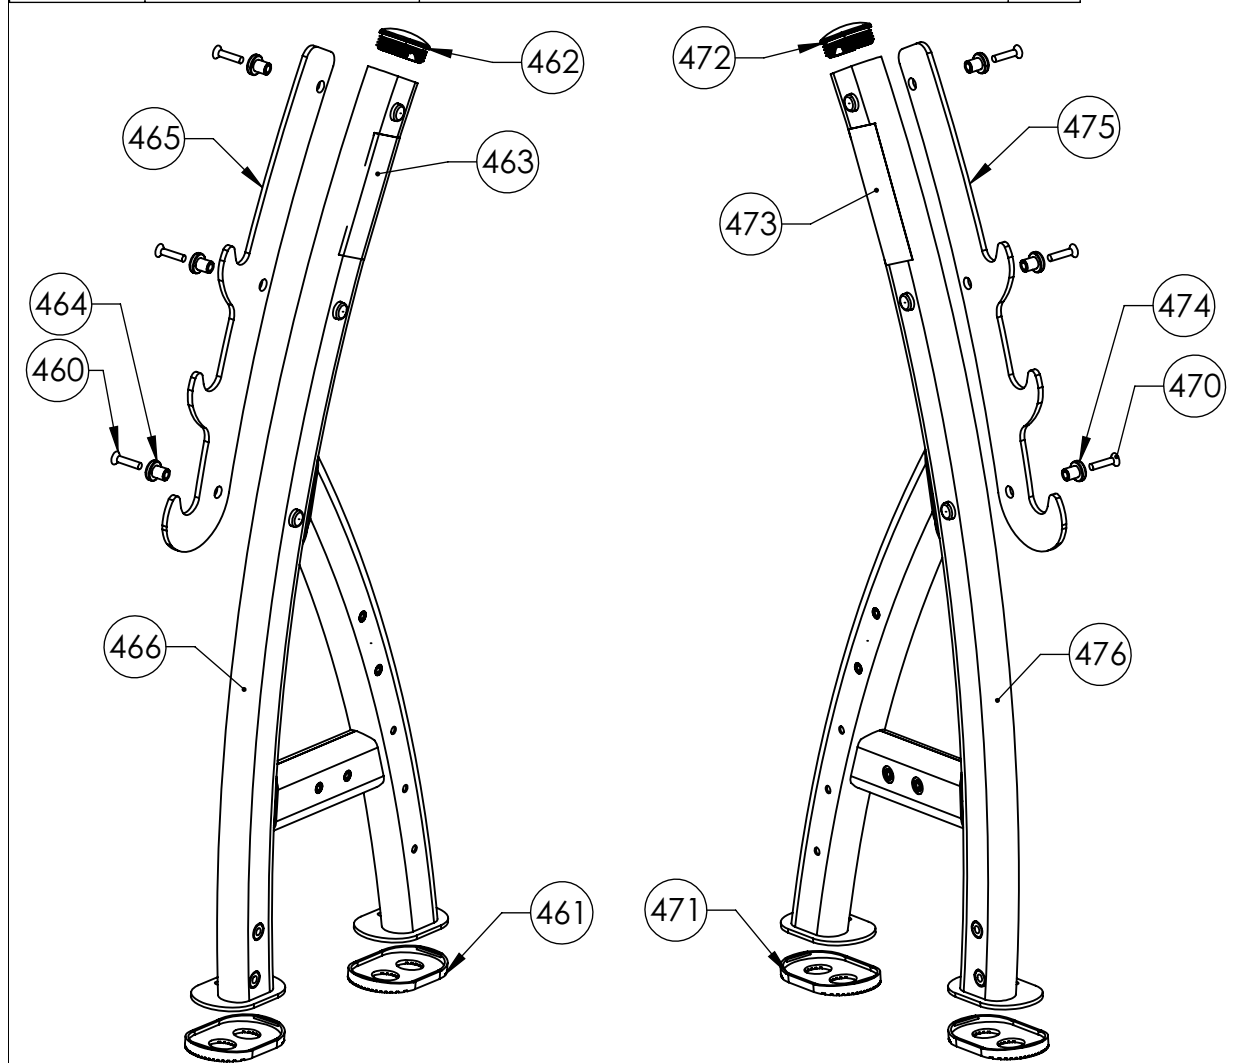


PARTS DIAGRAMS


XFW82-AD030X, CHROME ADJUSTMENT TUBE ASSEMBLY			
ITEM	PART NUMBER	DESCRIPTION	QTY.
480	D-575	BUSHING, FL, 1" ID X 3/4" LG,	2
481	XFW82-AD030	WELDMNT, CHROME ADJUSTMENT TUBE	1

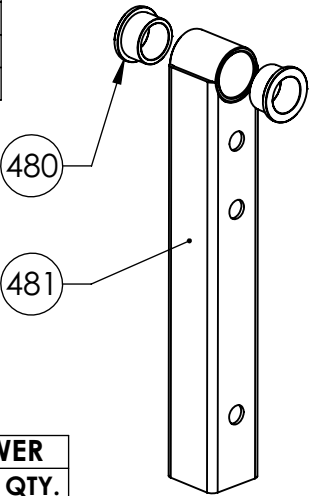

XFW82-AD020XBK, BACK PAD ADJUSTMENT ASSEMBLY, LOWER			
ITEM	PART NUMBER	DESCRIPTION	QTY.
490	B2065	LABEL, WARNING, COMPLETELY INSERT PIN	1
491	D-575	BUSHING, FL, 1" ID X 3/4" LG,	2
492	PBD30201YBK	T-KNOB, M10	1
493	XFT100-PIN000XBK	ASSY, POP PIN	1
494	XFW82-AD020BK	WELDMNT, BACK PAD ADJ. TUBE, LOWER	1

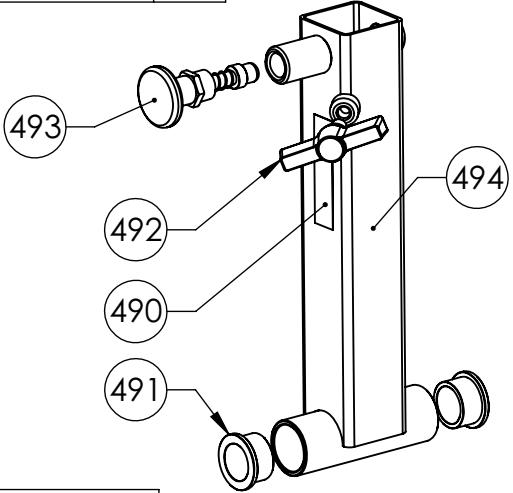

XFW00-PH040XBK, WEIGHT STORAGE HORN ASSEMBLY			
ITEM	PART NUMBER	DESCRIPTION	QTY.
500	C-624	SH SCREW, 3/8"-16, 1-1/4"	1
501	IT70140900	END CAP, 1-1/2" DIAMETER HORN	1
502	RPL54034700	BUMPER, ROUND, 1-1/2" ID X 3" OD X 1"	1
503	XFW00-PH040BK	WELDMNT, WEIGHT STORAGE HORN	1

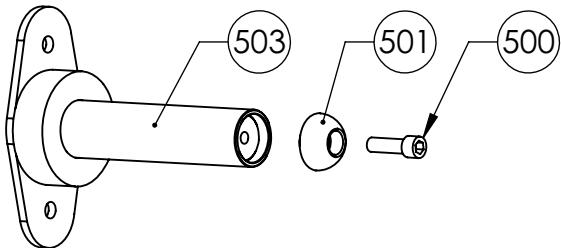

INTENDED USE & WARNING LABELS

INTENDED USE

1. This multi-purpose bench is intended to support the user in a incline, supine or decline position while performing bench press exercises.
2. The bench assembly is heavy. Be certain to use two hands and grasp the handle under the seat to balance and support the assembly when making adjustments. Adjust the bench to either the flat, incline or decline position. For the flat and decline exercises, the seat pad must be in line with the bench pad. When performing the incline press movement, adjust the seat position so that the bar can be lifted easily from the catch plates. Be certain that the adjustment pins are fully engaged. Check seat position without weight on the bar. Use either the upper or lower foot tubes for support during the exercise.
3. Spotters must be used when using this bench. More than one spotter may be required depending on the amount of weight being lifted.
4. Load and unload plates evenly onto the bar placing or removing one plate from one side and then the other.
5. Return the bar to the engaged catch position in a controlled manner. Be certain that the bar is fully engaged in the catch plates before releasing the load and exiting the machine.
6. DO NOT stand on this bench when doing exercises.
7. DO NOT use bands or chains with this bench.
8. DO NOT exceed the load limit of 795 pounds (361 kg). This rating is based on a maximum user weight of 300 pounds (136 kg) and a bar weight of 495 pounds (225 kg).

WARNING LABELS

The following are the warning labels required for this product. If any of these labels are missing or become damaged contact Paramount. Note: these labels are not to scale.

XFWR-8200
Olympic Multi-Press Bench

1. This bench is intended to support the user in a incline, supine, or decline position while performing bench press exercises.
2. The bench assembly is heavy. Be certain to use two hands and grasp the handle under the seat to balance and support the assembly when making adjustments. Adjust the bench to either the flat, incline or decline position. For the flat and decline exercises the seat pad must be in line with the bench pad. When performing the incline press movement, adjust the seat position so that the bar can be lifted easily from the catch plates. Be certain that the adjustment pins are fully engaged. Check seat position without weight on the bar. Use either upper or lower foot tubes for support during the exercise.
3. Spotters must be used when using this bench. More than one spotter may be required depending on the amount of weight being lifted.
4. Load and unload plates evenly onto the bar placing or removing one plate from one side and then the other.
5. Return the bar to the engaged catch position in a controlled manner. Be certain that the bar is fully engaged in the catch plates before releasing the load and exiting the machine.
6. DO NOT stand on this bench when doing exercises.
7. DO NOT use bands or chains with this bench.
8. DO NOT exceed the load limit of 795 pounds (361 kg). This rating is based on a maximum user weight of 300 pounds (136 kg) and a maximum bar weight of 495 pounds (225kg).

LBL-PR-XFW82

LBL-PR-XFW82

WARNING

**BENCH ASSEMBLY IS HEAVY
GRASP THE HANDLE UNDER THE SEAT TO
SUPPORT AND BALANCE THE BENCH BEFORE
MAKING THIS HEIGHT ADJUSTMENT**

LBL-WRN-0015

LBL-WRN-0015

WARNING

**SERIOUS INJURY CAN OCCUR ON THIS EQUIPMENT IF
THE PIN IS NOT COMPLETELY INSERTED BEFORE USE.**

P/N B2065 ASTM F1749

B 2065

WARNING

**TO REDUCE THE POTENTIAL FOR INJURY
A SPOTTER MUST BE USED WHEN
WORKING OUT ON THIS BENCH.**

P/N B2066

B 2066

WARNING

**SERIOUS INJURY CAN OCCUR ON THIS
EQUIPMENT. FOLLOW THESE
PRECAUTIONS TO HELP AVOID INJURY.**

1. BEFORE USING: Read and understand all of the warnings and labels and obtain instruction on the use of this machine.
2. Set stops or catches to the proper position for the exercise.
3. Before exiting the machine, visually check and be certain that the bar is completely seated in its catch.
4. Use only for the intended exercise. If you are unsure of the intended exercise seek instruction before using.
5. DO NOT attach straps or other devices to the frame. DO NOT use for stretching. DO NOT modify the machine.
6. Get a medical exam before beginning an exercise program.
7. NEVER allow children near this machine. Adults must supervise teenagers.
8. Keep body and clothing clear of all moving parts. DO NOT wear anything loose or dangling.
9. Inspect the machine before use.
10. Use spotters. More than one may be needed depending on the amount of weight being lifted.
11. Load weight plates on to and off of bars or lifting arms evenly, alternating from left to right side of the machine.
12. DO NOT exceed maximum lifting weight for the machine. Maximum plate size is 45 lbs or 25 kg.
13. Inspect machine daily for loose, worn or damaged parts. Inspect stops and catch assemblies. Replace any part or label at first signs of wear. If you are in doubt about any part, DO NOT use the machine until the part is replaced. Use only Paramount supplied parts.
14. Inspect all cables and connections before using this machine. DO NOT use this machine if any part appears worn or damaged.
15. DO NOT remove this label. Replace if damaged.

ASTM F1749 LBL-WRN-0010

LBL-WRN-0010

CHAPTER 5: WARRANTY INFORMATION

Save Time and Register Online!
Activate Multiple Warranties at truefitness.com

All TRUE® Fitness products are distributed by TRUE and are warranted to the original registered product purchaser and the parts of the TRUE product (the “Product”) listed below, under normal use and service, shall be free of manufacturing defects in workmanship and materials only for the period of time beginning from the original date of purchase set forth below:

Frame*	10 Years
Parts	
Bearings, Bushings, and Weight Plates	5 Years
Guide Rods and Pulleys	5 Years
Cables and Belts	1 Year
Cosmetics, Coatings, Grips, and Upholstery	3 Months
Labor	
Frame	1 Year
Bearings, Bushings, Weight Plates	1 Year
Guide Rods and Pulleys	1 Year
Cables and Belts	1 Year
Cosmetics, Coatings, Grips, and Upholstery	3 Months

NOTE: Warranty valid for USA and Canada only.
NOTE: Failure to register this product will result in no servicing or authorization of parts to be shipped.
NOTE: Buying after-market products from a 3rd party will result in voided warranty.
NOTE: This product is intended for Commercial use. If this product will not be used in this particular setting, please contact TRUE as is warranty is void.

Frame: The frame is warranted for defects in material and workmanship for a 10 years. The frame is warranted for labor and freight (for parts shipped from TRUE) for one year from date of purchase. * This limited warranty on structural frame does not include paint or coatings.

Parts: The XFW Strength Line’s mechanical parts are warranted for defects in material and workmanship for five years with one year labor warranty. Cables and belts are warranted for defects in material and workmanship for one year with one year labor warranty. This limited warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, failure to follow instructions and warnings in owner’s manual, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance.

Cosmetics: The XFW Strength Line’s cosmetic parts, coatings, grips and upholstery are warranted for defects in material and workmanship for three months with labor warranty to match the parts warranty period. This limited warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, failure to follow instructions and warnings in owner’s manual, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance. This limited warranty will apply to, but may not be limited to, plastic covers, shrouds, caps, badges, overlays, paint, coatings, soft step inserts, and grips.

Labor: Labor is covered for a period of one year from the date of purchase unless otherwise expressed within this limited warranty as long as a TRUE authorized service provider performs the service. Service that requires over 50 miles of travel may be subject to additional charges. Reasonable and necessary maintenance guidelines can be found in the owner’s manual.

Claims Procedure: TRUE Limited Warranty service may be obtained by contacting the authorized TRUE dealer from whom the Product was purchased. If the dealer from whom the Product was purchased is no longer an authorized TRUE dealer, then TRUE Limited Warranty service may be obtained by contacting TRUE directly using the following contact information:

TRUE Fitness, Service Department
 865 Hoff Road, St. Louis, MO 63366
 1.800.883.8783
 Hours of operation 8:30am - 5:00 pm CST

CHAPTER 5: WARRANTY INFORMATION

Save Time and Register Online!
Activate Multiple Warranties at truefitness.com

The above Limited Warranty is subject to and will be in accordance with the conditions set forth below:

- 1. THIS LIMITED WARRANTY GIVES YOU SPECIAL LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.**
2. This Limited Warranty can be processed only if the Warranty Registration Form is completed online, or if the attached form is filled in, signed by the original purchaser, and mailed to TRUE within 30 days of purchaser's receipt of this Product. The serial number must be intact on the Product for this Limited Warranty to be valid.
3. This Limited Warranty applies to the product only while the Product remains in the possession of the original purchaser and is not transferable
4. This Limited Warranty becomes VALID ONLY if the Product is initially assembled/installed by a TRUE authorized dealer/technician (if anyone other than a TRUE authorized dealer/technician initially assembles and installs the Product, this Limited Warranty will be void unless the written authorization of TRUE is first obtained).
5. This Limited Warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, failure to follow instructions and warnings in owner's manual, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance (as referenced in the owner's manual.)
6. This Limited Warranty applies only to the cost of repair or replacement of parts and does not include labor (beyond the above warranty period), transportation, service, return and freight charges associated therewith except as expressly specified herein.
7. This Limited Warranty shall not apply to: Service calls to correct installation of the equipment or instruction to owners on how to use the equipment; or any labor costs incurred beyond the applicable labor warranty period.
8. This Limited Warranty, which is given expressly and in lieu of all other express warranties, constitutes the only warranty made by TRUE.
- 9. ANY IMPLIED WARRANTY, INCLUDING WITHOUT LIMITATION THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED IN DURATION AND REMEDY TO THE TIME PERIOD COVERED BY THE LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.**
- 10. THE REMEDIES DESCRIBED ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND TRUE'S ENTIRE LIABILITY**

FOR ANY BREACH OF THIS LIMITED WARRANTY. TRUE'S LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE PRODUCT, NOR SHALL TRUE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL, OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

NOTE TO AUTHORIZED WARRANTY LABOR PROVIDERS:
Warranty labor reimbursement or warranty parts rights may not be transferred to, reassigned to, a third party without the express written consent of TRUE. Even jobbing out warranty labor requires TRUE's written approval.

COMPOSITE STRENGTH LINE SERIAL NUMBER:

The XFW 8200 comes with one serial number on the base of the machine. Please write down your serial number below and keep for your records.

SERIAL NUMBER:

SAMPLE SERIAL NUMBER STICKER:



Keep this page for your records

CHAPTER 5: WARRANTY INFORMATION

Thank you for purchasing a TRUE product. To validate the TRUE product warranty the fast and easy way, please go on-line now to truefitness.com/support and register your product. The information you provide will never be distributed to any other individuals or agencies for any purpose. If you prefer to mail your warranty card, have the owner of the product complete the information below and return it to TRUE Fitness within 30 days from the date of equipment installation.

To mail your warranty information, please fill in the information below and mail to: Service Dept., TRUE Fitness, 865 Hoff Road, St. Louis, MO 63366 (or save postage and register online at truefitness.com)

Commercial Warranty Registration

**PLEASE PROVIDE YOUR SERIAL NUMBER BELOW.
REQUIRED FOR WARRANTY REGISTRATION:**

SERIAL NUMBER:

Model Type _____

Date of Purchase _____

Your Company Name _____

Contact First Name _____

Contact Last Name _____

Address _____

City _____ State _____ ZIP _____

Email Address _____ Website _____

Phone _____ Fax _____

1. Where did you first learn about TRUE?

- a. Dealer b. Website
 c. Advertisement d. Referral
 e. Current Customer f. Other _____

2. Why did you purchase a TRUE product?

- a. Design/Appearance b. Dealer Suggestion
 c. Price/Value d. Quality Construction
 e. Performance f. TRUE Reputation
 g. Other _____

3. Please indicate your type of facility:

- a. Apartment/Condo b. Corporate Fitness Center
 c. Municipality d. Health Club/Gym/Spa
 e. Hotel/Resort f. Military Base
 g. Student Rec Center h. Other

4. What other types of equipment does your company own?

- a. Treadmill Brand _____
 b. Bike Brand _____
 c. Elliptical Brand _____
 d. Free Weights/Gym Brand _____

5. How many people use your facility on a daily basis?

- a. <25 b. 25-75
 c. 76-150 d. 150+

6. Do you plan to purchase more fitness equipment in the next 6-12 months?

- Yes No

7. If you answered "yes" to question 6, what type do you plan to purchase?

- a. Treadmill b. Elliptical
 c. Stationary Bike d. Free Weights
 e. Gym f. Other _____

8. Would you recommend TRUE to other club owners?

- Yes No

9. You are a valued TRUE customer and your suggestions allow us to continually improve your experience. Is there anything else you would like us to know? Please explain: