



GRAVITY RECUMBENT ELLIPTICAL

OWNER'S MANUAL AND ASSEMBLY GUIDE

IMPORTANT—PLEASE READ

All products shown are prototype. Actual product delivered may vary. Product specifications, features, and software are subject to change without notice.

For the most up-to-date version of this manual, please see our website: <https://truefitness.com/services-support/user-manuals/>

CONTACTING OUR SUPPORT TEAM

To contact TRUE for any of your pre or post installation questions, please call our toll-free numbers Monday – Friday 8:30am – 5:00pm (CST):

- Commercial Direct Customers and Corporate Accounts | 800.868.8783
- Retail Customers and Distributors | 800.883.8783

Or email us:

- Commercial Direct Customers and Corporate Accounts | service.direct@truefitness.com
- Retail Customers and Distributors | service@truefitness.com
- Service International | int.service@truefitness.com

When contacting TRUE, please have the following information ready:

- Serial Number of Unit
- Contact Information—Full Name, Email, and Phone Number
- Address of Facility or Residence
- Detailed Description Regarding Symptom of the Unit (along with pictures or video if applicable)

NOTE: Authorized service providers, dealers, and distributors may also use TRUE's online resource | portal.truefitness.com.

CONTACTING OUR SALES TEAM

Interested in owning more TRUE products? Please contact us with any product inquiries so that we may direct you to the appropriate sales representative to help answer your questions.

- Phone | 800.426.6570
- Email | sales@truefitness.com
- Hours | Monday – Friday 8:30am – 5:00pm (CST)

REPORTING FREIGHT CLAIMS OR PARTS DAMAGE

Unfortunately, sometimes materials can be damaged during shipment. If materials are damaged during shipment, please follow the guidelines below to determine the appropriate process for you to follow.

Severe Damage—Obvious damage to external packaging and internal product.

Please refuse the shipment and it will be returned to TRUE by the carrier. Contact TRUE product support by calling 800.883.8783 or sales support by calling 800.426.6570 Monday–Friday during normal business hours to notify us that the shipment has been refused. Once we have received the damaged shipment, a replacement shipment will be sent to you. If the shipment comes in multiple boxes, only refuse boxes with damage.

Slight Damage—Minimal damage to external packaging with unknown internal damage to product.

If the shipment has minimal damages and you are not sure if the actual product is damaged, you must sign the bill of lading as damaged when accepting the shipment. Once you have opened the box and you have determined something is indeed damaged, please gather the serial number, model number, description of damage, and photos of damage. Please make sure the photos include the damaged product as well as the damaged box the product arrived in. Contact TRUE product support (service@truefitness.com | 800.883.8783) or TRUE sales support (sales@truefitness.com | 800.426.6570) Monday–Friday during normal business hours.

Concealed Damage—No damage to external packaging but internal damage to product.

You may receive a shipment that looks intact and discover once the box has been opened that there are hidden damages. Please notify the carrier immediately. TRUE will not be able to file a claim if the carrier is not notified in a timely manner. Once you have called the carrier you will need to gather the serial number, model number, description of damage, and photos of damage. Contact TRUE product support (service@truefitness.com | 800.883.8783) or TRUE sales support (sales@truefitness.com | 800.426.6570) Monday–Friday during normal business hours.

TABLE OF CONTENTS

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS—SAVE THESE INSTRUCTIONS.....5

POWER REQUIREMENTS.....7

SPACE REQUIREMENTS.....8

SPECIFICATIONS.....8

WARNING DECALS.....9

COMPLIANCES.....9

PROPER USE.....10

ASSEMBLY INSTRUCTIONS

PREASSEMBLY CHECKLIST.....11

ASSEMBLY STEPS.....14

PRODUCT FEATURES

BASE OVERVIEW.....27

CONSOLE OVERVIEW.....28

CARE AND MAINTENANCE

INSPECTION.....30

CLEANING THE EQUIPMENT.....30

LEVELING THE MACHINE.....30

PREVENTATIVE MAINTENANCE.....31

LONG TERM STORAGE.....31

ADDITIONAL INFORMATION

TROUBLESHOOTING.....32

WARRANTY INFORMATION

COMMERCIAL WARRANTY34

LIMITED-USE COMMERCIAL WARRANTY.....35

IN-HOME USE WARRANTY.....36

WARRANTY DETAILS.....37

WARRANTY REGISTRATION.....38

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS—SAVE THESE INSTRUCTIONS

This equipment is intended for a commercial or institutional setting. This owner's manual should be accessible to all personal trainers, faculty, and members.

- Read and understand all instructions and warnings prior to use.
- Obtain a medical exam before beginning any exercise program. If at any time during exercise you feel faint, dizzy, or experience pain, stop and consult your physician.
- Obtain proper instruction prior to use.
- This unit is intended for commercial use only. Usage class: SC.
- This unit is intended for indoor use only.
- Inspect the unit for incorrect, worn, or loose components and do not use until corrected, replaced, or tightened prior to use.
- Do not wear loose or dangling clothing while using the unit.
- Care should be used when mounting or dismounting the unit.
- Read, understand, and test the emergency stop procedures before use.
- Disconnect all power before servicing the unit.
- Do not exceed maximum user weight of 400 lbs / 181 kg.
- Keep the top side of the moving surface clean and dry.
- Keep children and animals away.
- Use caution when moving and assembling unit.
- All exercise equipment is potentially hazardous. If attention is not paid to the conditions of equipment usage, death, or serious injury could occur.

⚠ WARNING: To reduce the risk of burns, fire, and electric shock or injury to persons, follow these instructions:

- Heart rate monitoring systems may be inaccurate. Over-exercising may result in serious injury or death. If you feel faint, dizzy, or experience pain, stop exercising immediately.
- Health related injuries may result from incorrect or excessive use of exercise equipment.
- TRUE STRONGLY recommends seeing a physician for a complete medical exam before undertaking an exercise program, particularly if the user has a family history of high blood pressure or heart disease, is over the age of 45, smokes, has high cholesterol, is obese or has not exercised regularly in the past year. Additionally, TRUE recommends consulting a fitness professional on the correct use of this product.
- Equipment should be immediately taken out of use if it fails to work properly or when a warning is presented electronically.
- When using this exercise machine, basic precautions should always be followed.
- Use this equipment only for its intended use as described in this manual.
- This stationary training equipment is not suitable for high accuracy purposes.
- Do not move the equipment by lifting the console. Do not use the console as a handlebar during a workout.
- This product can expose you to chemicals including Toluene and Acrylamide which are known to the State of California to cause Cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.
- Keep equipment stable on flat ground.
- Risk of personal injury-crushing hazard when equipment is in operation. Keep feet, hands, and fingers away from moving parts.
- Replace warning labels that may be worn, damaged, or missing.
- Replace any non-working or damaged components, remove the unit from service until repair is performed.
- Do not operate the equipment while being covered with a blanket, pillow, plastic, or anything that insulates or stops airflow. Keep air openings free of lint, hair or any obstructing material.
- Any changes or modifications to this equipment could void the product warranty.
- Do not use this product in areas where aerosol spray products are being used or where oxygen is being administered. Such substances create the danger of combustion and explosion.
- Do not use this product outdoors, near water, while wet, or in areas of high humidity including extreme temperature changes.
- Close supervision is necessary when used near children under the age of 15, or disabled persons.

- Wear shoes with rubber or high traction soles. Do not use shoes with heels, leather soles, cleats or spikes. Make sure no stones are embedded in the soles. Do not use this product in bare feet. Keep all loose clothing, shoelaces and towels away from moving parts.
- Use upper exercise arms to maintain balance when mounting and dismounting the machine and for additional stability while exercising.
- Avoid the possibility of bystanders being struck or caught between moving parts by making sure that they are out of reach of the equipment while it is in motion.
- Always ensure that all adjustment devices are fully retracted or secured in their proper position before starting to use the equipment.
- If any of the adjustment devices are left projecting, they could interfere with the user's movement.
- Do not use typing or web surfing features at excessive speeds. Always stabilize yourself when using typing or web surfing features. (Varies by console option.)
- Never place liquids of any type directly on the unit except in the accessory tray or bottle holders. Containers with lids are recommended.
- Always follow the console instructions for proper operation.
- Use correct ergonomic positioning while operating this equipment.
- Allow only one person at a time on the equipment while it's operating.
- Do not allow animals on or near the equipment while in operation.
- Do not reach into or underneath the unit, or tip it on its side during operation.
- Do not use if you have a cold or fever.
- This equipment is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the equipment by a person responsible for their safety.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not use attachments not recommended by the manufacturer.
- Allow only trained personnel to service this equipment.
- It is the sole responsibility of the owner/operator to ensure regular and scheduled maintenance is performed.
- This machine is self-generated and does not require the use of an electrical outlet with the LED console. Optional touch screen or PVS consoles require 110V AC input and 9V DC 1.5 amp output for console operation only.
- The batteries within self-generated equipment contain materials that are considered hazardous to the environment. Federal law requires proper disposal of these batteries.

⚠ DANGER: To reduce the risk of electric shock, always unplug this product when not in use, before cleaning, or attempting any maintenance activity. Do not handle the plug with wet hands.

- To disconnect, turn power OFF at the ON/OFF switch if applicable, then remove plug from electrical outlet.
- Use a TRUE AC power cord.
- Position this product so the power cord plug is accessible to the user.
- Keep the power cord away from heated surfaces. Do not pull the equipment by the power cord or use the cord as a handle. Do not run the power cord along the side or under the equipment.
- If the electrical supply cord is damaged it must be replaced by the manufacturer, an authorized service agent, or a similarly qualified person to avoid a hazard.
- This product must be connected to a properly grounded electrical outlet.
- Never insert objects into any openings in this product. If an object should drop inside, turn off the power, unplug the power cord from the outlet and carefully retrieve it. If the item cannot be reached, contact TRUE product support.
- To avoid serious injury, remove and store the power cord when the machine is not in use.
- This appliance should never be left unattended when plugged in.
- Do not use any type of extension cord with this product.
- Never operate a TRUE product if it has a damaged power cord or electrical plug, or if it has been dropped, damaged, or even partially immersed in water.

NOTE: Power warnings, grounding instructions, and power requirements are only applicable when this product is being used with the optional power supply. Non-LED consoles require the optional power supply.

POWER REQUIREMENTS

Read and understand all instructions before plugging any TRUE power cord into an electrical outlet.

DEDICATED LINE

This product does not require a dedicated line.


GROUNDING INSTRUCTIONS



This product must be grounded. If the product malfunctions or breakdowns, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

⚠️ DANGER:

- Improper connection of the equipment grounding conductor can result in risk of electrical shock.
- Check with a qualified electrician or service provider if you are in doubt as to whether the equipment is properly grounded or installed on a dedicated line.
- Seek a qualified electrician to perform any modifications to the cord or plug. TRUE is not responsible for injuries or damages as a result of cord or plug modification.

- To reduce the risk of burns, fire, electric shock, or injury, it is imperative to connect each product to a properly grounded 110V or 220V electrical outlet. The voltage required for your unit is located on the serial number decal (usually on the front of the unit). Depending on where you live voltage requirements differ.
- Some TRUE products require a circuit rated 110V, 60 Hz, and 20 amps. In the United States, most residential homes have circuits rated 110V, 60 Hz, and 15 amps. If your unit requires a 20 amp outlet, contact an electrician to install a dedicated 20 amp circuit prior to use.
- **110 Volt**—This model is for use on a nominal 110V circuit and has a grounding plug that looks like the plug illustrated in figure A. Make sure the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.
- **220 Volt**—This model is for use on a circuit having a nominal rating no less than 208V and more than 240V and is factory equipped with a specific electric cord and has a grounding plug that looks like the plug illustrated in figure B. Make sure that the product is connected to an outlet having the same configuration as the plug in figure B. No adapter should be used with this product. If the product must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel.

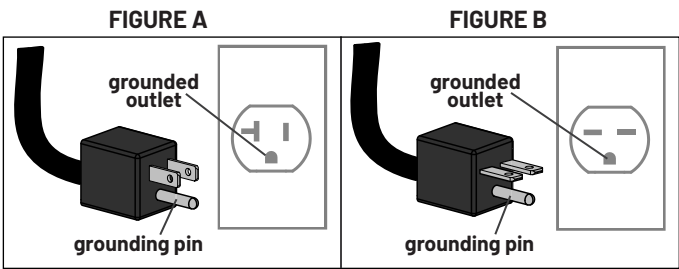


Power Information						
Model	Line Voltage (V)	Frequency (Hz)	Rated Current (Amps)	Number of Units per Circuit	Plug/Outlet	Max Power Dissipation (Watt)
XC2-RA-35	110	50/60Hz	20	Up to 5 units per circuit—DO NOT exceed	NEMA 5-20 	350 watts per machine
	220	50/60Hz	8	Up to 5 units per circuit—DO NOT exceed	NEMA 6-15 	350 watts per machine

NOTES:

- The plug configuration for the power adapter may vary by country.
- Power warnings, grounding instructions, and power requirements are only applicable when this product is being used with the optional power supply. Non-LED consoles require the optional power supply.

SPACE REQUIREMENTS

TRUE recommends leaving a minimum of 24" (61cm) at the front and rear of the equipment and 39" (99cm) on each side of the equipment. The free area also includes the area for emergency dismount. Where equipment is positioned adjacent to each other, the value of the free area may be shared.

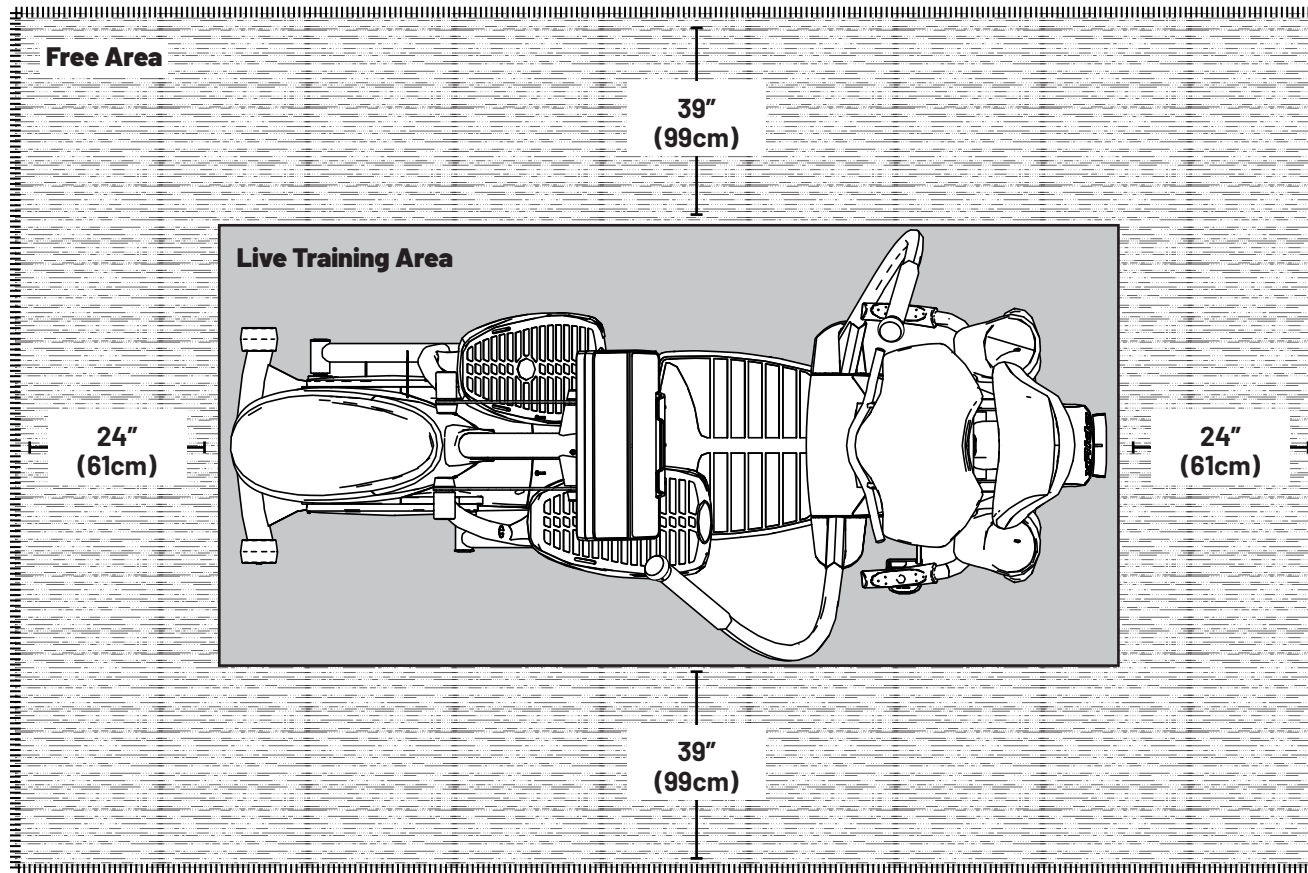

SPECIFICATIONS

- **DIMENSIONS (L X W X H)**
 - **Footprint**
71" x 35" x 57" (180.3cm x 88.9cm x 143.9cm)
 - **Active Footprint**
71" x 35" x 57" (180.3cm x 88.9cm x 143.9cm)
- **MACHINE WEIGHT**
268 lbs / 122 kg
- **MAXIMUM USER WEIGHT**
400 lbs / 181 kg

WARNING DECALS

⚠ WARNING: Replace warning labels that may be worn, damaged, or missing.

To replace any worn or missing decals contact TRUE product support (service@truefitness.com | 800.883.8783).



COMPLIANCES

This equipment complies with all applicable codes and regulations. For a complete list of compliances, please visit www.truefitness.com.

PROPER USE

PROPER TRAINING POSITION

- Users should keep both feet on the pedals (A) during the workout.
- During a workout the user's hand should grasp the upper exercise arms (B) or stationary handlebars (C).
- Users should remain seated (D) throughout the workout.

ENTRY AND EXIT SAFETY

To Enter:

- Enter the machine from either side and sit on the seat.
- Grip the upper exercise arms or stationary handlebars.
- Place both feet on the pedals.

To Exit:

- Stop pedaling by slowing leg motion and applying slight resistance to the upper exercise arms.
- Remove feet from pedals and place on the floor.
- Exit the machine from either side.

NOTE: The elliptical trainer is not equipped with a free wheel, therefore the moving parts are unable to stop immediately.



ASSEMBLY INSTRUCTIONS



NOTE: Supplemental video available @TRUEFitnessservicevids: <https://www.youtube.com/watch?v=f1mfx55MqPw>

PREASSEMBLY CHECKLIST

BASIC GUIDELINES FOR SETTING UP THE EQUIPMENT

After removing the equipment from the packaging, place the equipment on a clean, level surface. Make sure the electrical cord easily reaches a grounded three-pronged outlet.

⚠ DANGER: Do not use an extension cord or ungrounded outlet. The ground helps prevent electrical damage to your equipment and enhances your safety by helping to prevent shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the equipment is properly grounded. Do not modify the plug provided with the unit if it will not fit the outlet. Have a proper outlet installed by a qualified electrician.

⚠ CAUTION:



Use caution when assembling this product.
Unpacking and assembling of this product is a two person task.



Use caution when unpacking this product. Avoid damage to the product.
DO NOT use a box cutter. **DO NOT** slice into the packaging.



Avoid damage to the product.
NEVER use an electric screwdriver to fasten the plastic shroud pieces.

TOOLS NEEDED FOR ASSEMBLY		INCLUDED IN BOX
#2 Phillips Screwdriver		NO
6mm Allen Wrench		YES
Ratchet Wrench with 6mm Socket Bit and Extension (optional but recommended)		NO
13mm and 17mm Wrench		NO


TOOLS NEEDED FOR ASSEMBLY		INCLUDED IN BOX
Ratchet Wrench with 13mm Socket		NO
Wire Cutters		NO
Torque Wrench (optional but recommended)		NO

VERIFY BOX CONTENTS

IMPORTANT! Please verify box contents. If you have questions, or if there are any missing parts, contact product support (service@truefitness.com | 800.883.8783).


BOX CONTENTS

ITEM	DESCRIPTION	QTY
1	Base	1
2	Console Mast	1
3	Seat Back Assembly	1
4	Seat Pad	1
5	Stationary Handlebar	1
6	Left Cup Holder	1
7	Right Cup Holder	1
8	Left Moving Handlebar	1
9	Right Moving Handlebar	1
10	Moving Handlebar Covers	2
11	Leveler Covers	2
12	Mast Boot	1
13	Top Shroud	1
14	Left Pedal	1
15	Right Pedal	1
16	Hardware Kit	1
17	Manual	1

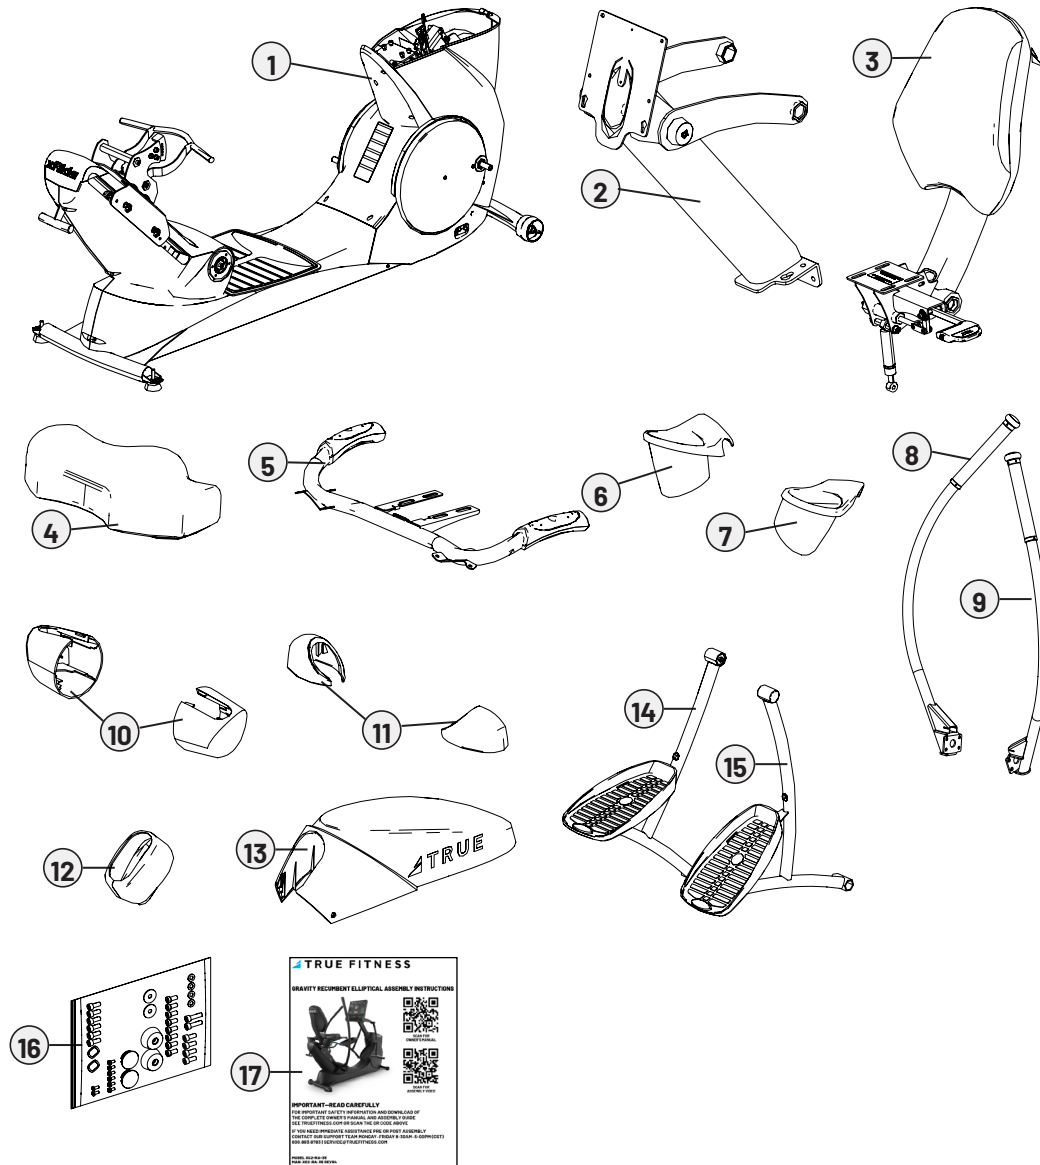

HARDWARE KIT CONTENTS

8100605 HARDWARE KIT			
ITEM	PART NUMBER	DESCRIPTION	QTY
1	101295-001	SCREW, M8 X 1.25 X 20.0L SHCS, BLACK ZINC, 12.9 STL	4
2	101354-001	SCREW, M5 X 0.8 X 12, PAN HEAD, TYPE 1 CROSS RECESSED, BZ, SPRING WSHR-FLAT WSHR	6
3	103210-001	SCREW, M8 X 1.25 X 20.0L SHCS, STAINLESS STEEL	6
4	103212-001	WASHER, M8, 8.3 X 16.0 X 1.6, STAINLESS STEEL	4
5	100754-001	SCREW, M8x1.25x16 SHCS, STL, BZ	8
6	100780-001	SCREW, M5 X 0.8 X 12, PAN HEAD, TYPE 1 CROSS RECESSED, STAINLESS STEEL	2
7	900004-001	WASHER, WAVE, 19.3 X 26.0 X .35	2
8	103213-001	WASHER, 8.5 X 30 X 2, STAINLESS STEEL	2
9	105717-001	SCREW, M8 X 1.25 X 30.0L SHCS, STAINLESS STEEL	2
10	8100355	CAP, XR650 PEDAL HUB, BLACK	2
11	8100251	CAP, UPPER LINK, BLACK	2
12	8008949	ALLEN KEY, 6MM, HEX	1

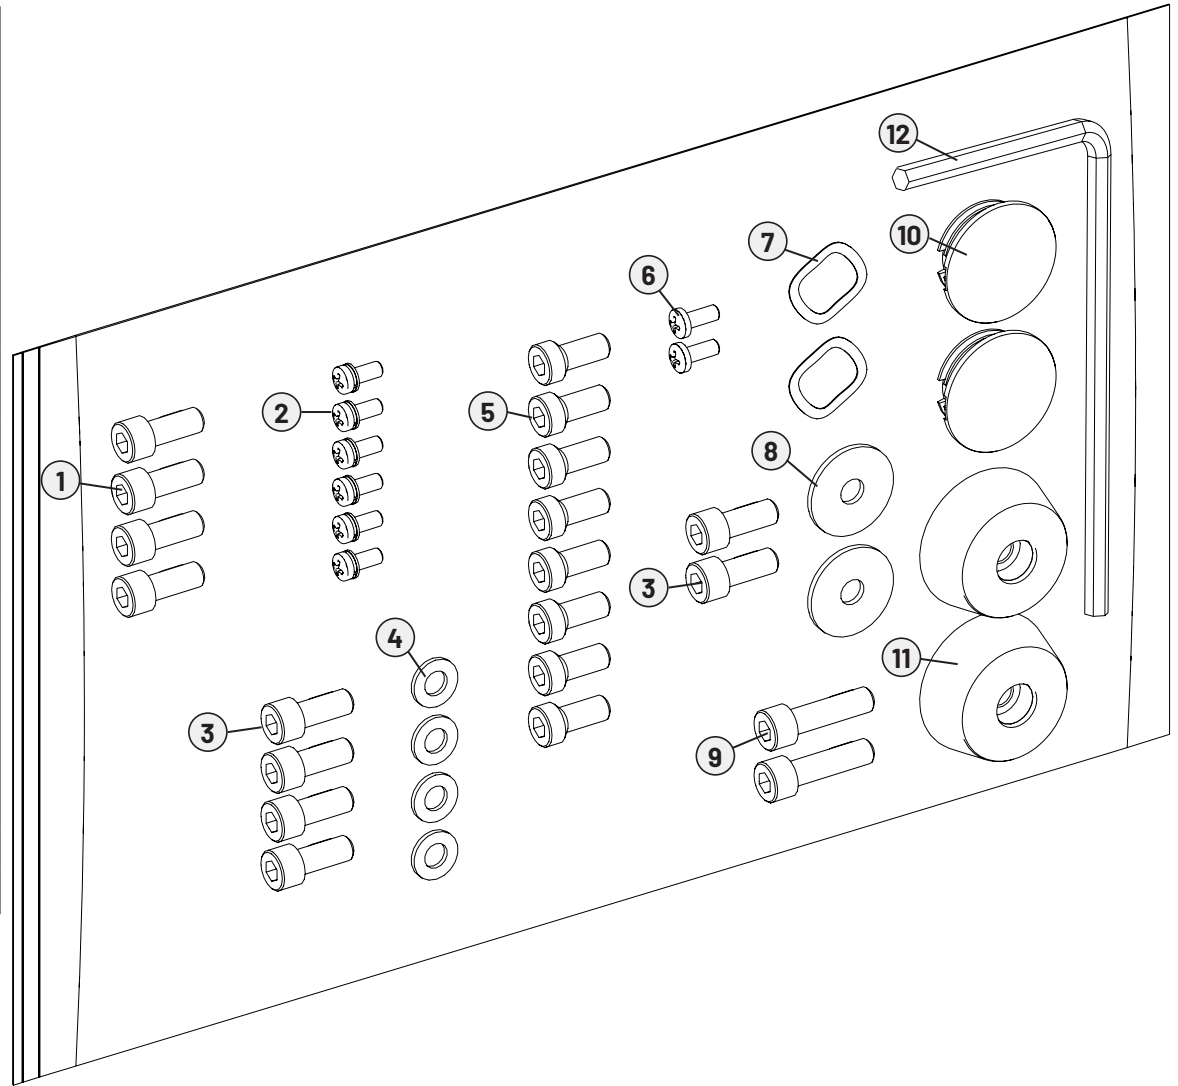


ASSEMBLY STEPS

Step 1—Attach the Console Mast to Base

Tools Used in this Step	
6mm Allen Wrench	
Ratchet Wrench with 6mm Socket Bit and Extension (optional but recommended)	


- A. Remove wire tie securing cable bundle in base and carefully route cables up through the console mast.

IMPORTANT! DO NOT pinch or damage cables.

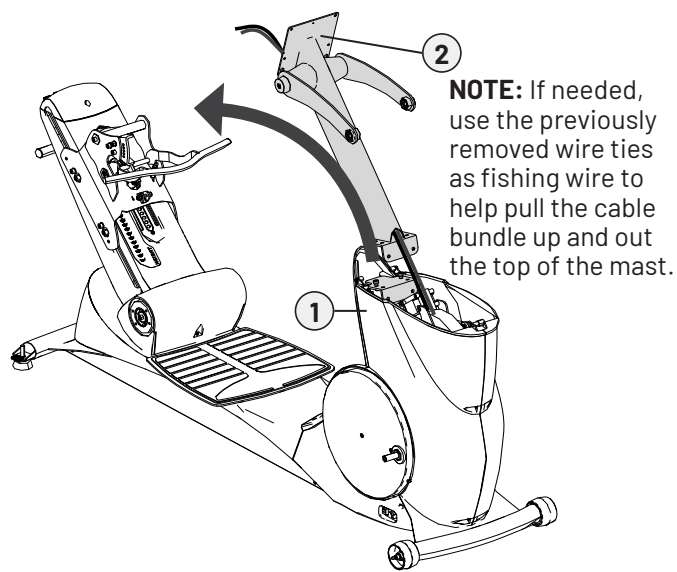

Parts Used in this Step			
Item	Part	Description	Qty
1	N/A	BASE	1
2	N/A	CONSOLE MAST ASSEMBLY	1
3	101295-001	SCREW, M8 X 1.25 X 20L SHCS, BLACK ZINC, 12.9 STL	4

- B. Slide the console mast over the two hex screws on the base and then insert two M8 hex screws to the top and two M8 hex screws to the front of the mast plate to secure the console mast to the base.

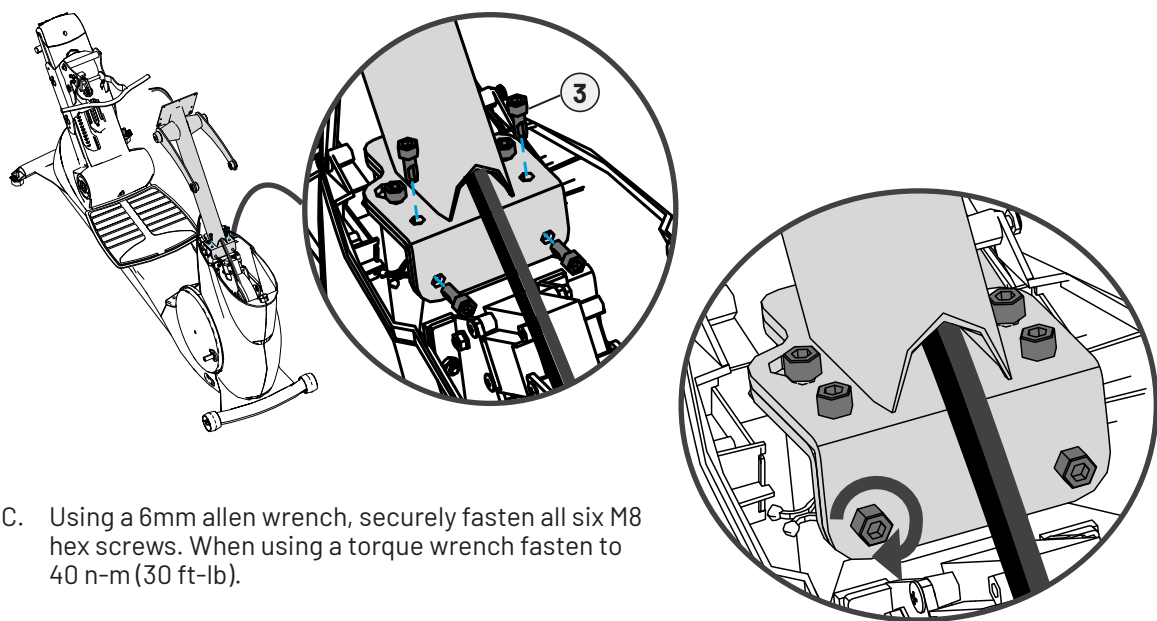

- C. Using a 6mm allen wrench, securely fasten all six M8 hex screws. When using a torque wrench fasten to 40 n-m (30 ft-lb).




when using a torque wrench
 $\tau = 40 \text{ N-M (30 FT-LB)}$

Step 2—Assemble and Attach Seat Assembly to Base


Tools Used in this Step	
#2 Phillips Screwdriver	
6mm Allen Wrench	
Ratchet Wrench with 6mm Socket Bit (optional but recommended)	
13mm Wrench	

Parts Used in this Step			
Item	Part	Description	Qty
1	N/A	BASE	1
2	N/A	SEAT BACK ASSEMBLY	1
3	8100376	SUB ASSY, HR STATIONARY HANDLE, BLACK	1
4	104465-001	SEAT PAD, CONSUMER	1
5	8100381	CUP, ACCESSORY, LH BLACK	1
6	8100378	CUP, ACCESSORY, RH, BLACK	1
7	103210-001	SCREW, M8 X 1.25 X 20L SHCS, STAINLESS STEEL	6
8	103212-001	WASHER, M8, 8.3 X 16.0 X 1.6, STAINLESS STEEL	6
9	101354-001	SCREW, M5 X 0.8 X 12, PAN HEAD, TYPE 1 CROSS RECESSED, BZ, SPRING WSHR-FLAT WSHR	6
10	102100-001	AXLE, SEAT PIVOT	1
11	103213-001	WASHER, 8.5 X 30 X 2, STAINLESS STEEL	2
12	103140-001	SCREW, M8 X 1.25 X 35L SHCS, STAINLESS	1
13	103214-001	NUT, HEX, NYLON INSERT, M8 X 1.25, CZ	1

- A. Attach the left and right cup holders to the stationary handlebar assembly using six Phillips head screws (three per side).

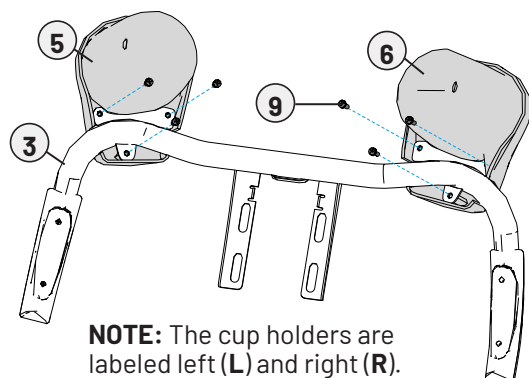


- B. On the right side of the machine, using a 6mm allen wrench, remove and set aside the socket head cap screw and washer holding the axle in the seat carriage. Slide the axle out the left side of the machine.

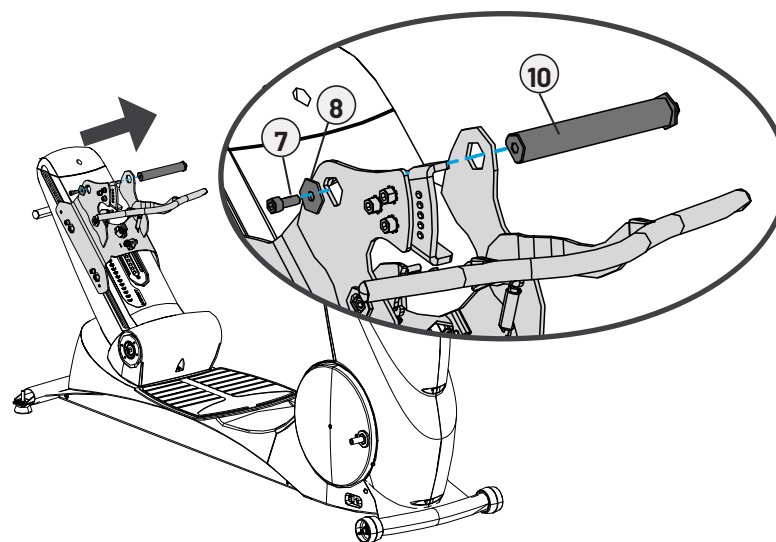


Step 2—Assemble and Attach Seat Assembly to Base Continued

- C. Attach the seat back assembly to the seat carriage:
- Verify the damper is pushed down in the vertical position.
 - Lift the tilt handle and slide the seat back assembly onto the carriage.
 - From the left side of the machine, reinsert the axle, making sure the flat edge of the right side is flush with the frame.
 - Reinsert the socket head cap screw and washer and using a 6mm allen wrench, securely fasten. When using a torque wrench fasten to 23 n-m (17 ft-lb).

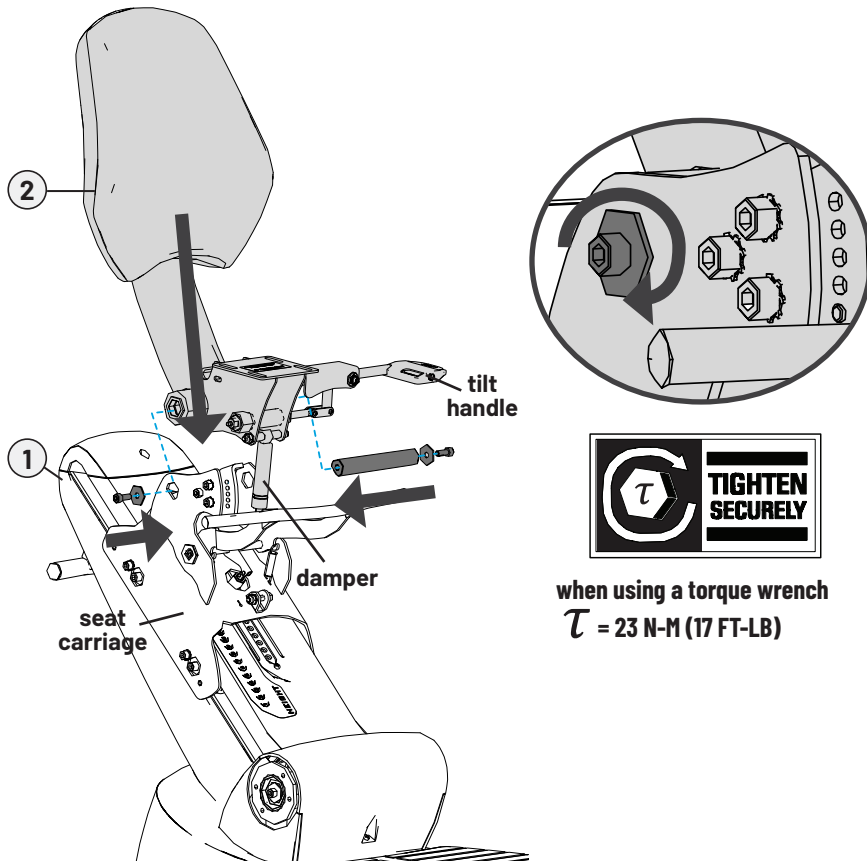


- D. Place the stationary handlebar on top of the seat back assembly and connect the heart rate cable from the stationary handlebar to the heart rate cable in the base.

NOTE: If needed, use the seat height adjust handle to lower the seat down and make connecting the cables easier.

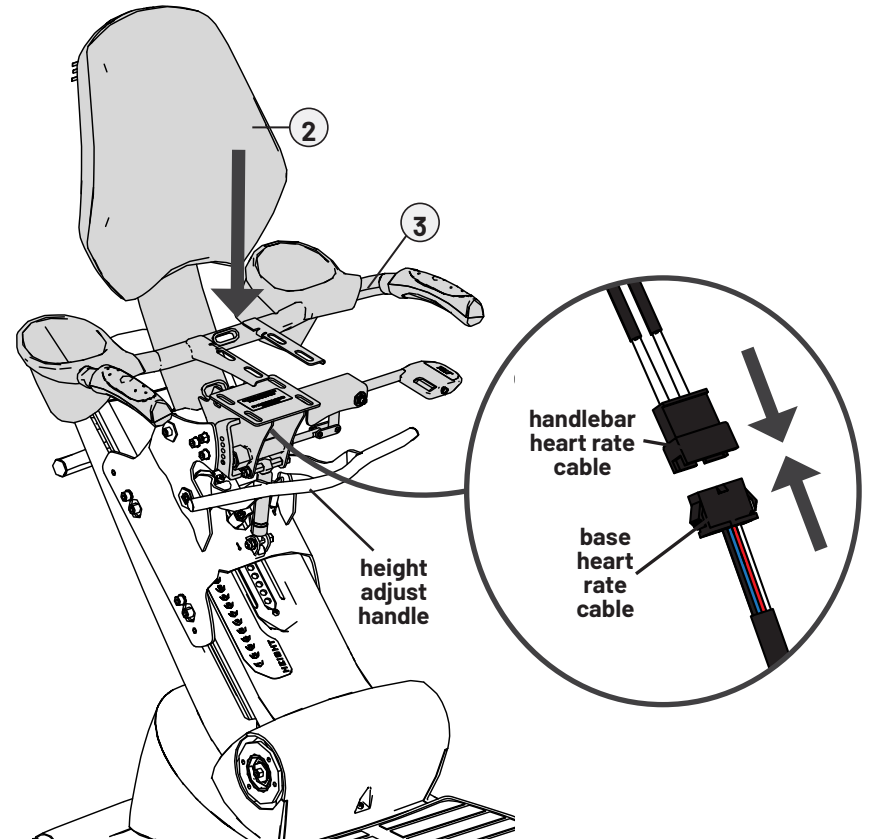


Step 2—Assemble and Attach Seat Assembly to Base Continued

- E. Place the seat pad onto the stationary handlebar and seat back assembly. Secure in place using four M8 hex screws and four M8 washers. Use a 6mm allen wrench to fully tighten.

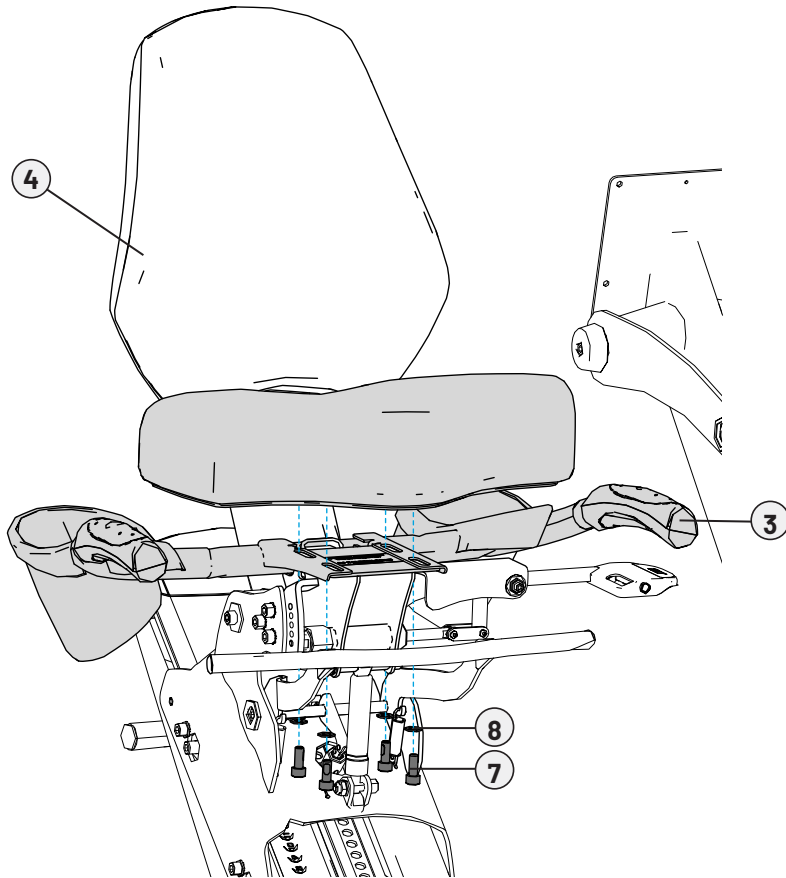


- F. Tilt the seat forward so you can attach the tilt control cable. Place the tilt control cable into the hole on seat carriage and slide up to secure in place.

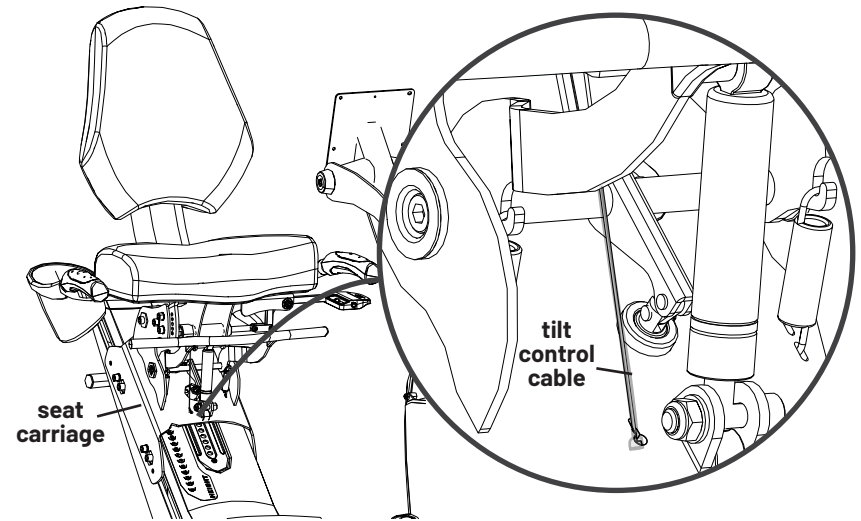

- G. Using a 6mm hex wrench and 13mm wrench remove and set aside the M8 hex screw, washers, and nut from the bracket on the seat carriage.

Place the damper from the seat assembly in between the bracket on the seat carriage.

Using the previously removed M8 hex screw, washers, and nut, securely fasten the damper to the seat carriage.

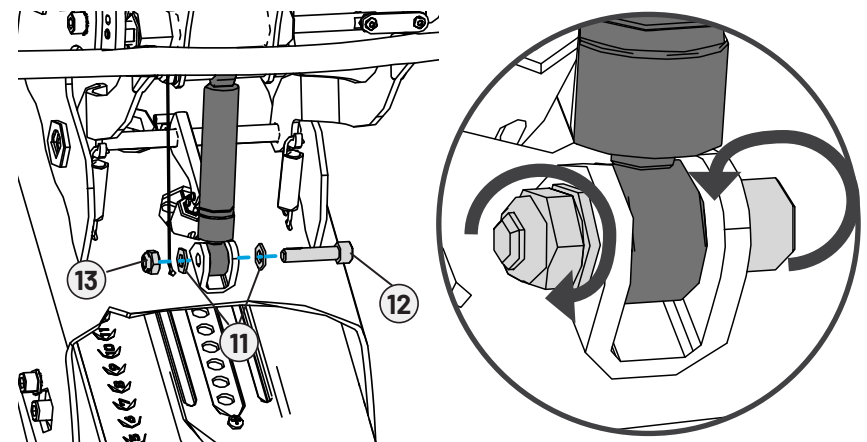


Step 3—Attach Moving Handlebars and Moving Handlebar Covers

Tools Used in this Step	
6mm Allen Wrench	
Ratchet Wrench with 6mm Socket Bit (optional but recommended)	


Parts Used in this Step			
Item	Part	Description	Qty
1	N/A	BASE	1
2	8100334	SUB ASSEMBLY, MOVING HANDLE, RH, BLACK	1
3	8100335	SUB ASSEMBLY, MOVING HANDLE, LH, BLACK	1
4	100754-001	SCREW, M8x1.25x16 SHCS, STL, BZ	8
5	8100337	CAP, ARM PIVOT, BLACK	2

- A. Attach the left and right moving handlebars to the base using eight M8 hex screws (four per side).
- B. Using a 6mm allen wrench, securely fasten the hardware. When using a torque wrench fasten to 40 n-m (30 ft-lb).

- C. Attach the moving handlebar covers.
- NOTE:** The moving handlebars have notches in them that the covers slide into.

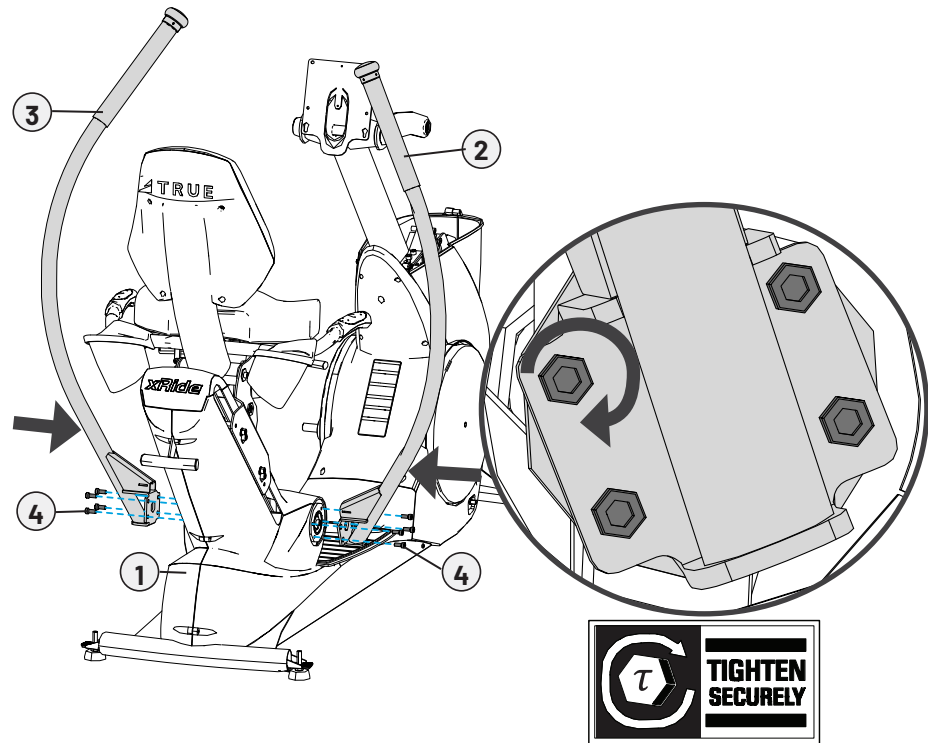

when using a torque wrench
 $\tau = 40 \text{ N-M (30 FT-LB)}$

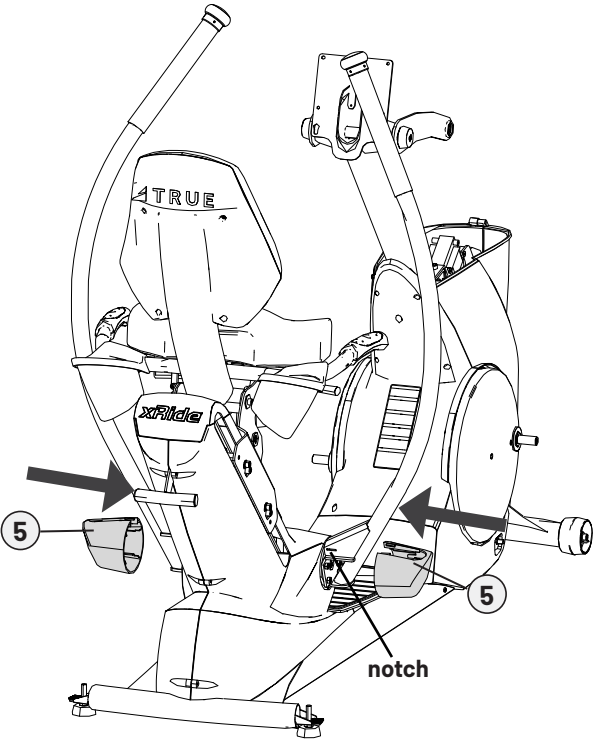

Step 4—Optional—Adjust Moving Handlebar Reach


Tools Used in this Step	
#2 Phillips Screwdriver	
Ratchet Wrench with 13mm Socket	
13mm Wrench	

Parts Used in this Step			
Item	Part	Description	Qty
1	8100307	PANEL, RIGHT ARM LINK, BLACK	1
2	8100306	PANEL, LEFT ARM LINK, BLACK	1
3	100780-001	SCREW, M5 X 0.8 X 12, PAN HEAD, TYPE 1 CROSS RECESSED, STAINLESS STEEL	4
4	103393-001	NUT, HEX, NYLON INSERT, M8 X 1.25, CZ CLASS 10	2
5	103256-001	SCREW, M8 X 1.25 X 52 HHCS, 8.8 ST, CZ	2
6	102281-001	ASSEMBLY, ARM LINK, RH	1
7	102285-001	ASSEMBLY, ARM LINK, LH	1

The moving handlebars can be adjusted for a 1" (2.54cm) longer or shorter reach. To adjust the handlebars:

- A. On the lower left side of the machine, remove and set aside the two M5 Phillips screws and the lower left panel.
- B. While holding onto the left handlebar, remove the nut and bolt to reposition the link to the preferred hole.
- C. Replace the nut and bolt and securely fasten. When using a torque wrench fasten to 40 n-m (30 ft-lb).
- D. Repeat for right handlebar.

IMPORTANT! Handlebars must be set to the same position for proper function.

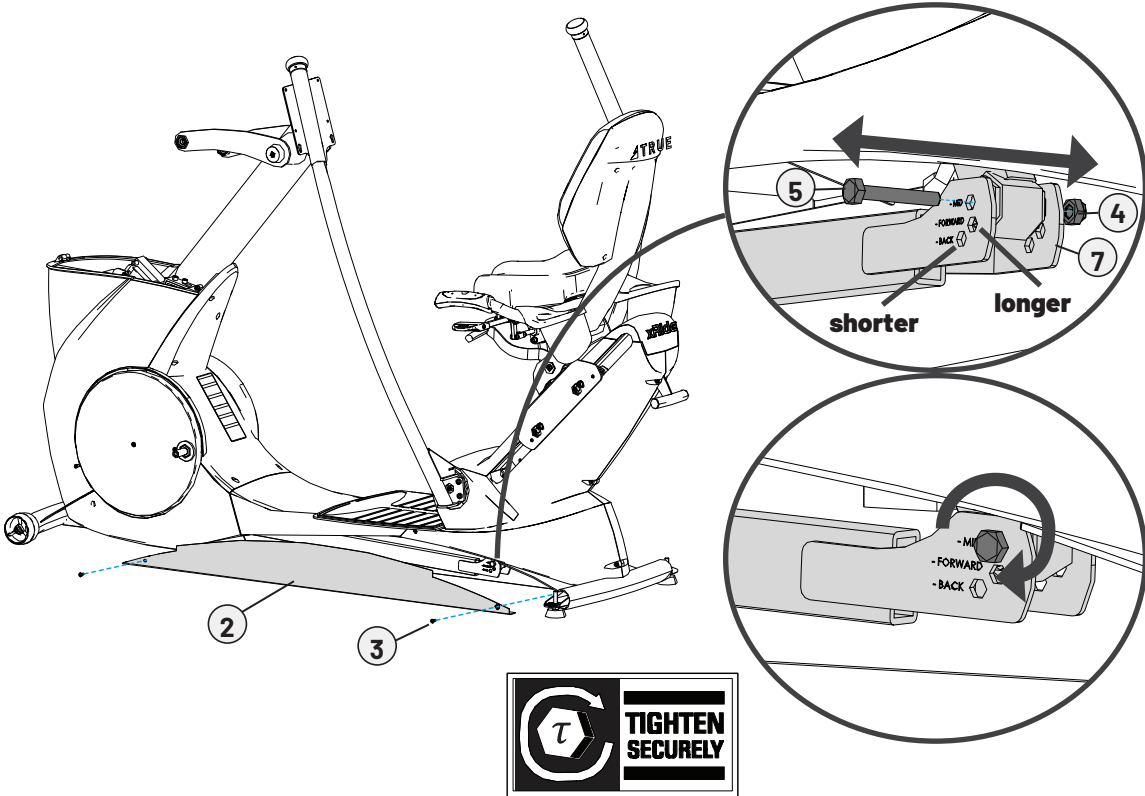

when using a torque wrench
 $\tau = 40 \text{ N-M (30 FT-LB)}$

Step 5—Attach Console and Connect Power Cord (if applicable)

Tools Used in this Step	
#2 Phillips Screwdriver	


Parts Used in this Step			
Item	Part	Description	Qty
1	N/A	CONSOLE MAST ASSEMBLY	1
2	N/A	CONSOLE	1
3	00595500	FUYANG POWER SUPPLY 12V 6AMP	1
4	00560402	POWER CORD- 110V AC - 12'	1

- A. Remove and set aside the screws preassembled to the console.
- B. Connect the console and base cables: heart rate, coaxial, I/O data, network, power, and ground.

NOTE: The LED console does not use the coaxial or network cables. Those cables can be tucked back down the console mast. However, if a Personal Viewing Station (PVS) is being used, you will use the coaxial cable. See the PVS owner’s manual for more information.

Ensure all cables are routed inside the console mast to avoid pinching the cables.

- C. Using a #2 Phillips screwdriver, secure the console to the console mast using two of the previously removed screws (00567800) and two of the previously removed screws (00567700).

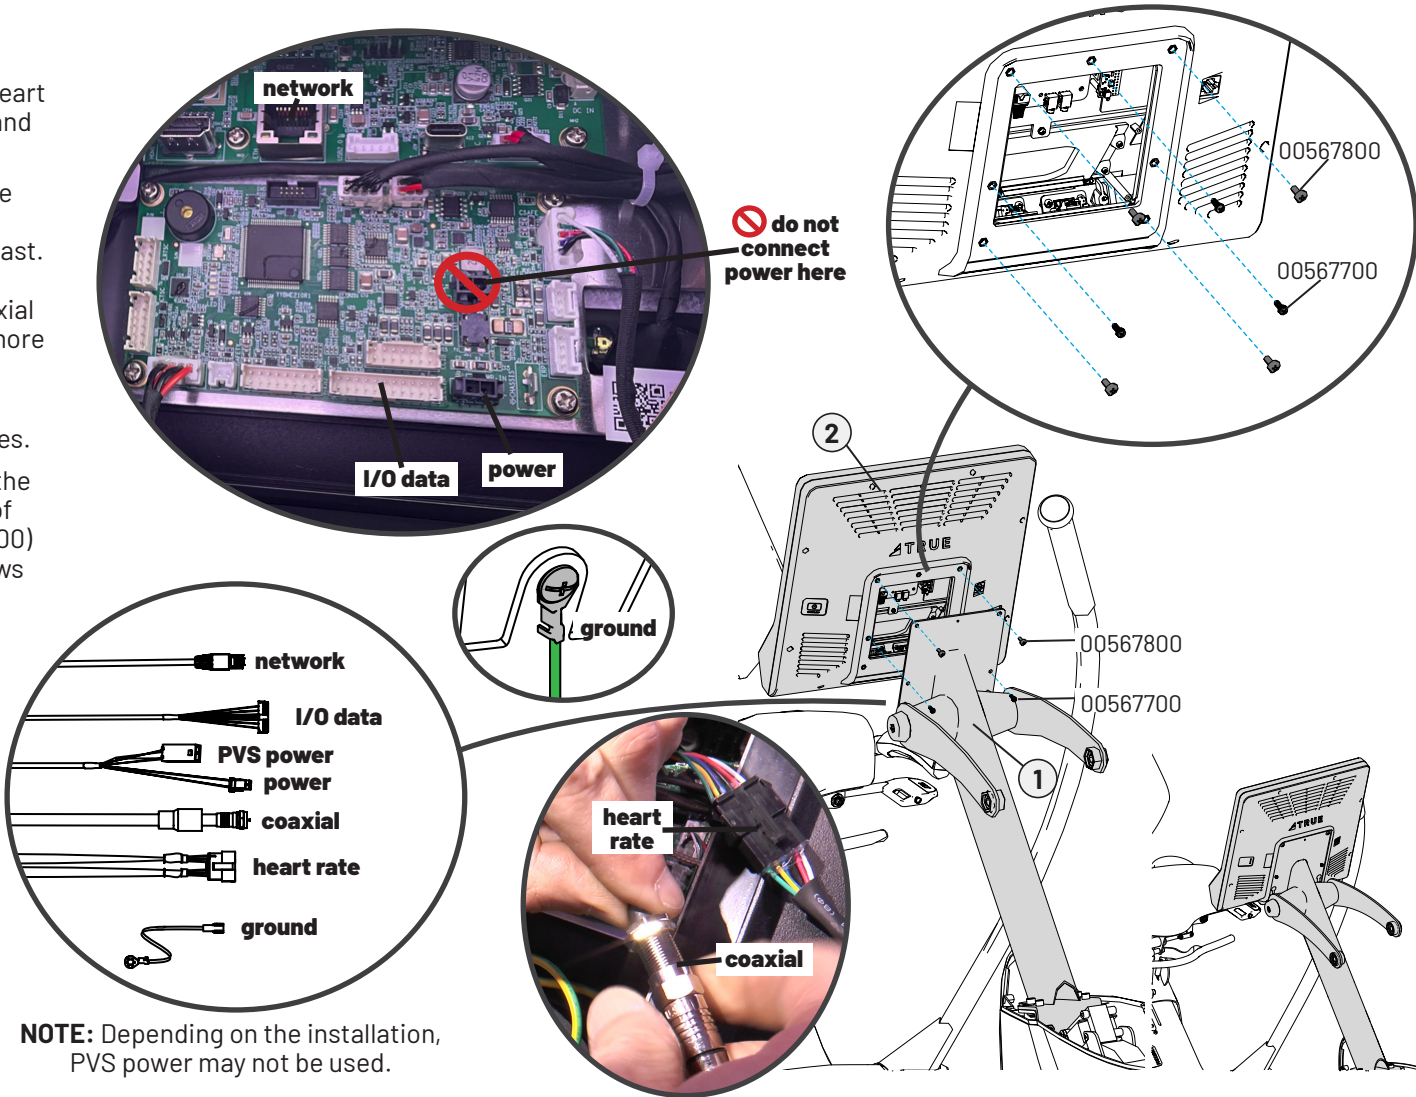


NOTE: Depending on the installation, PVS power may not be used.

Step 5—Attach Console and Connect Power Cord (if applicable) Continued

- D. Make the correct power connections for the base, console, and optional PVS:
- If the console is a touchscreen, connect the power supply to the base.
 - If a PVS is being used, connect the power supply to the base.
 - If the console is an LED only, switch the power connection in the base to self-gen.

NOTE: The base power cables come configured for a touchscreen console or PVS. If an LED console is being used without a PVS, switch the power connection in the base to self-gen.

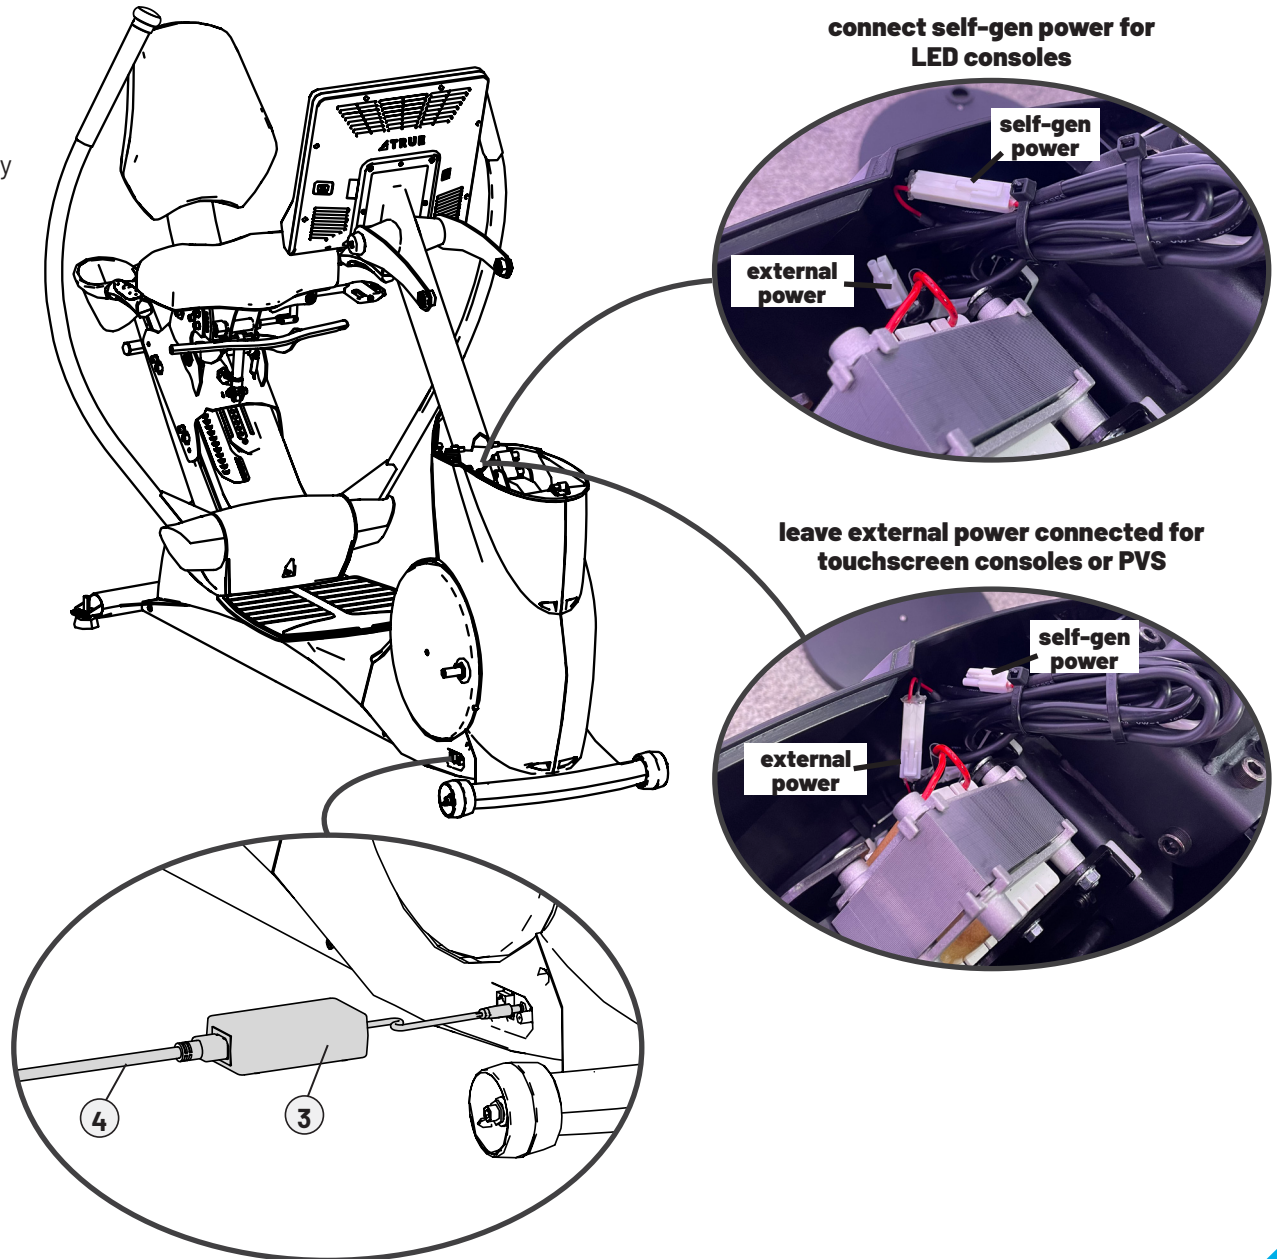


Step 6—Attach Top Shroud and Mast Boot


Tools Used in this Step	
#2 Phillips Screwdriver	

Parts Used in this Step			
Item	Part	Description	Qty
1	8100324	ASSEMBLY, SHROUD FRONT TOP, BLACK	1
2	100780-001	SCREW, M5 X 0.8 X 12, PAN HEAD, TYPE 1 CROSS RECESSED, STAINLESS STEEL	2
3	8019924	COVER, MAST BOOT, DARK	1

A. Attach the top shroud and secure to the base using a #2 Phillips screwdriver and two M5 Phillips screws.

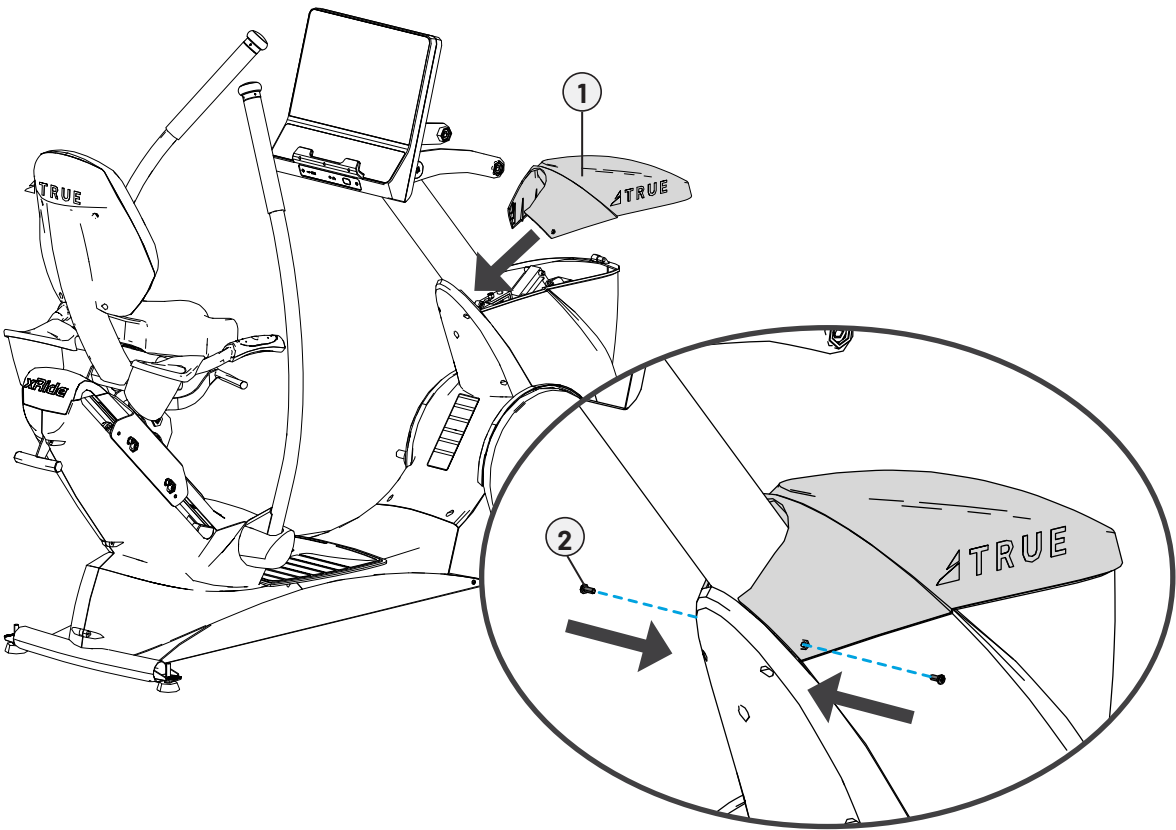

B. Wrap the mast boot around the console mast.

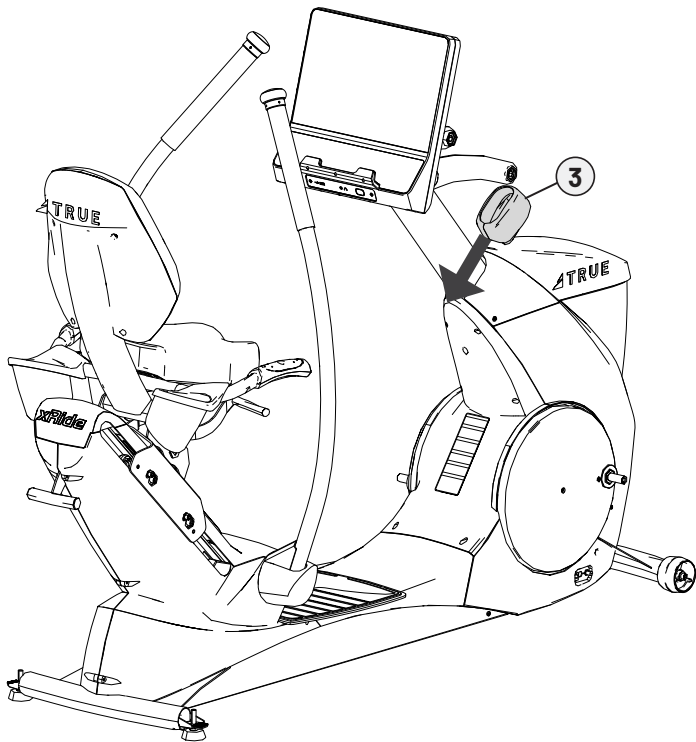


Step 7–Attach Pedals

Tools Used in this Step	
6mm Allen Wrench	
Ratchet Wrench with 6mm Socket Bit (optional but recommended)	

Parts Used in this Step			
Item	Part	Description	Qty
1	8100356	SUB ASSEMBLY, LEVER, PEDAL, RIGHT, BLACK	1
2	8100359	SUB ASSEMBLY, LEVER, PEDAL, LEFT, BLACK	1
3	900004-001	WASHER, WAVE, 19.3 X 26.0 X .35	2
4	105717-001	SCREW, M8 X 1.25 X 30.0L SHCS, STAINLESS STEEL	2
5	103213-001	WASHER, 8.5 X 30 X 2, STAINLESS STEEL	2
6	103210-001	SCREW, M8 X 1.25 X 20.0L SHCS, STAINLESS STEEL	2
7	8100355	CAP, PEDAL HUB, BLACK	2
8	8100251	CAP, UPPER LINK, BLACK	2

- A. Slide one wave washer onto the lower right crank axle and then slide the lower right pedal onto the axle.
- B. Attach the upper right pedal to the right upper link assembly using one upper link cap and one M8X30 hex screw.
- C. Fasten the lower right pedal to the axle using one M8 washer and one M8X20 hex screw.
- D. Using a 6mm allen wrench, securely fasten the upper and lower hardware. When using a torque wrench fasten to 40 n-m (30 ft-lb).
- E. Press one pedal cap over the lower right pedal hub.
- F. Repeat steps A-E for the left pedal.

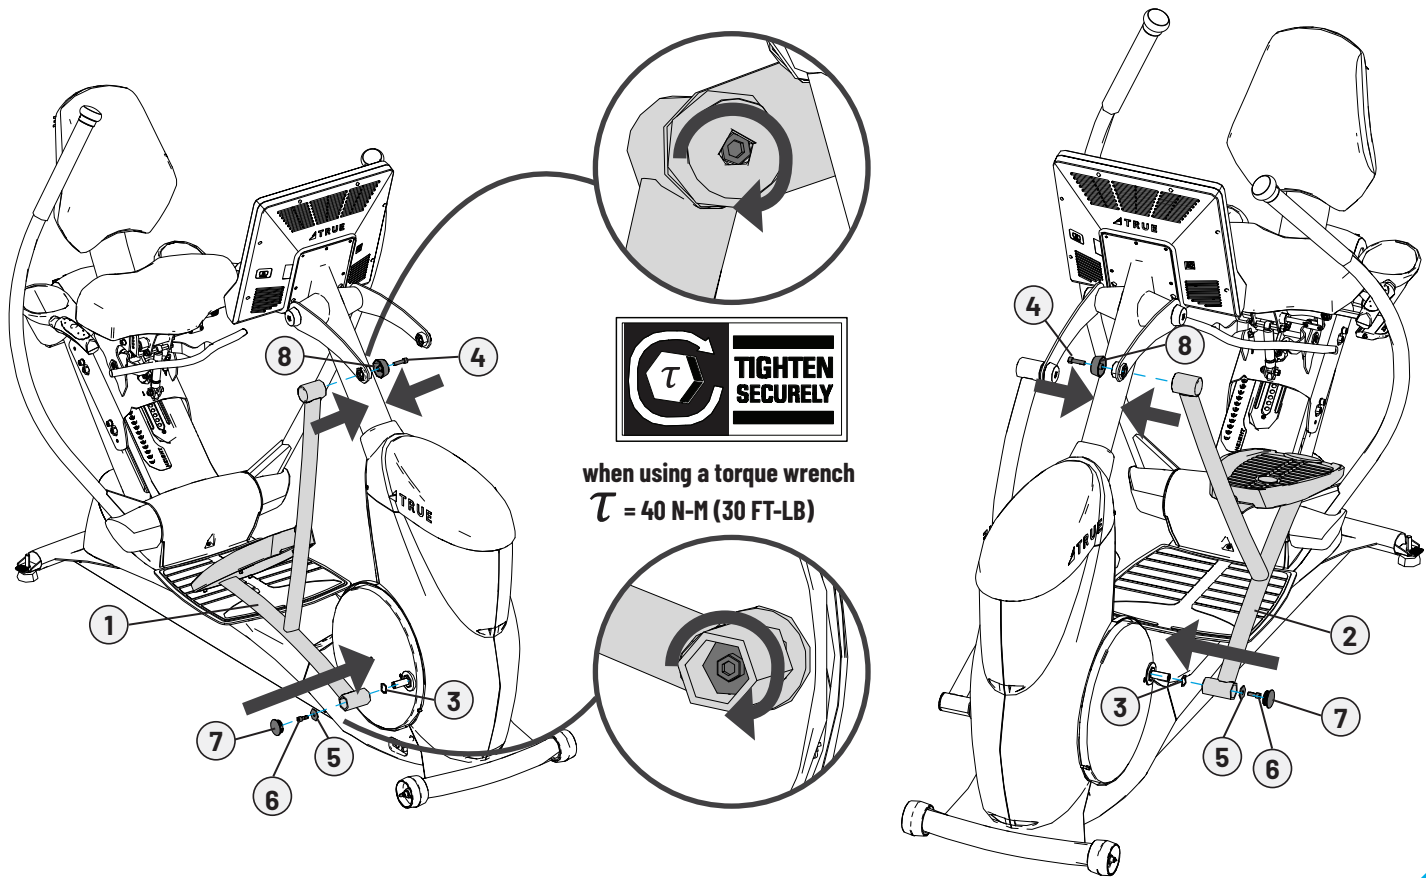

Step 8—Level the Machine and Attach Level Covers

Tools Used in this Step	
17mm Wrench	

Parts Used in this Step			
Item	Part	Description	Qty
1	8020103	ASSEMBLY, END CAP, DARK	2
2	900015-001	LEVELER, 50MM DIAMETER	2
3	950038-009	M18.2.4.1M, HEX NUT, STYLE 1, M10 X 1.5, BLACK ZINC, STL	2


⚠ CAUTION: Prevent potential damage to the machine and injury to the user. This unit is equipped with two leveling feet. Make sure that the machine is level at all times. If the machine is placed on a uneven surface, adjusting the leveling feet can help, but may not completely compensate for extremely uneven surfaces. Equipment that is not level can cause damage to the machine and possible injury to the user.

Once the machine has been moved to it's designated location:

- A. Using a 17mm wrench, adjust both leveling feet until they contact the floor.

IMPORTANT! Do not adjust the leveling feet to such a height that they detach or unscrew from the machine.

- B. Verify both lock nuts are securely tightened and flush against the bottom of the frame.
- C. Press both level covers into place on both sides of the machine.

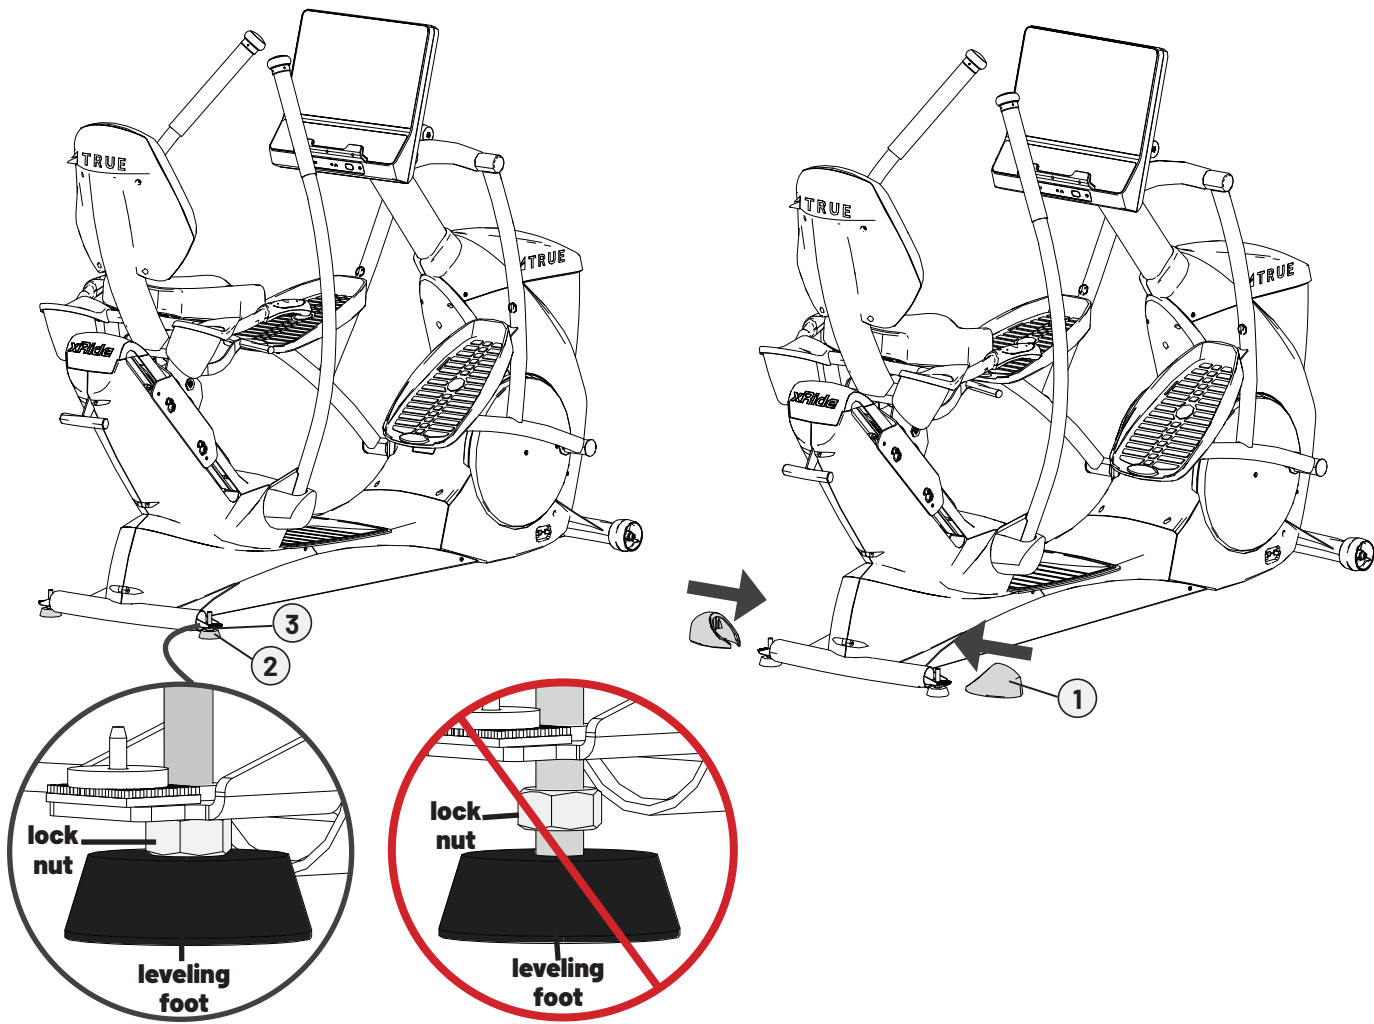

IMPORTANT STEP—DO NOT SKIP!

Step 9—Configure the Console with the Base

⚠ CAUTION: AVOID DAMAGE TO THE MACHINE!
ALWAYS VERIFY THE CORRECT BASE MODEL HAS BEEN CONFIGURED TO THE CONSOLE.

THE CORRECT BASE MODEL FOR THIS MACHINE IS GRAVITY RECUMBENT ELLIPTICAL

Please follow the instructions included with your console for important configuration steps.

Please contact product support right away if you run into issues setting up the machine:
800.883.8783 | service@truefitness.com | Monday–Friday 8:30am–5:00pm (CST)

PRODUCT FEATURES


BASE OVERVIEW

- A. Console Assembly**
Controls the machine. Comes equipped with preprogrammed and customizable workouts.
- B. Phone and Water Bottle Holder**
Store water bottle or phone while working out.
- C. Transport Rollers**
Aids in moving the machine.
- D. Power and Cabling Interface**
Power, network, and coaxial ports are only applicable to non-LED consoles.
- E. Adjustable Seat**
Adjust height and tilt to fit every exerciser comfortably.
- F. Leveling Feet**
Adjustable feet to aid in leveling the machine.
- G. Pedals**
Engage the lower body during exercise.
- H. Moving Handlebars**
Engage the upper body during exercise.
- I. Stationary Handlebars with Contact Heartrate Grips**
Check heart rate without wearing a wireless chest strap.




CONSOLE OVERVIEW

UNITE TOUCHSCREENS (16" SHOWN)

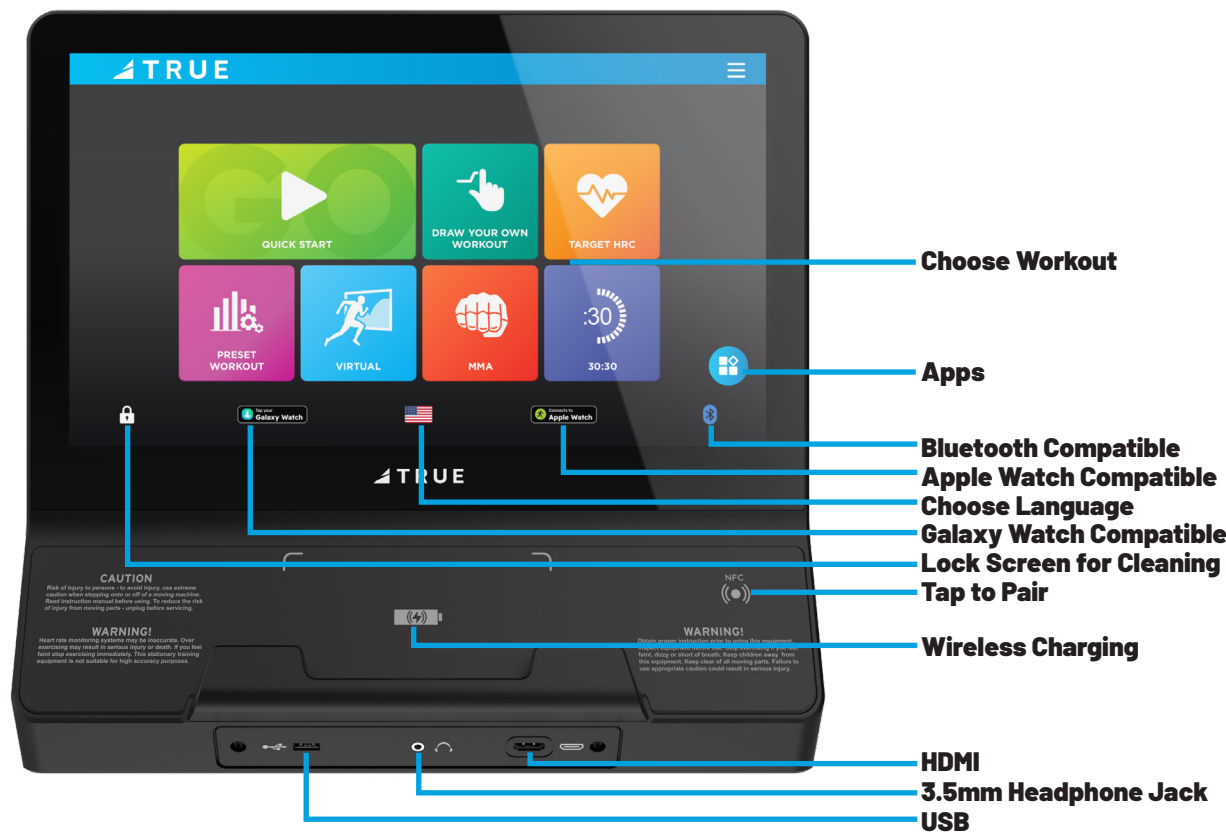

UNITE LED

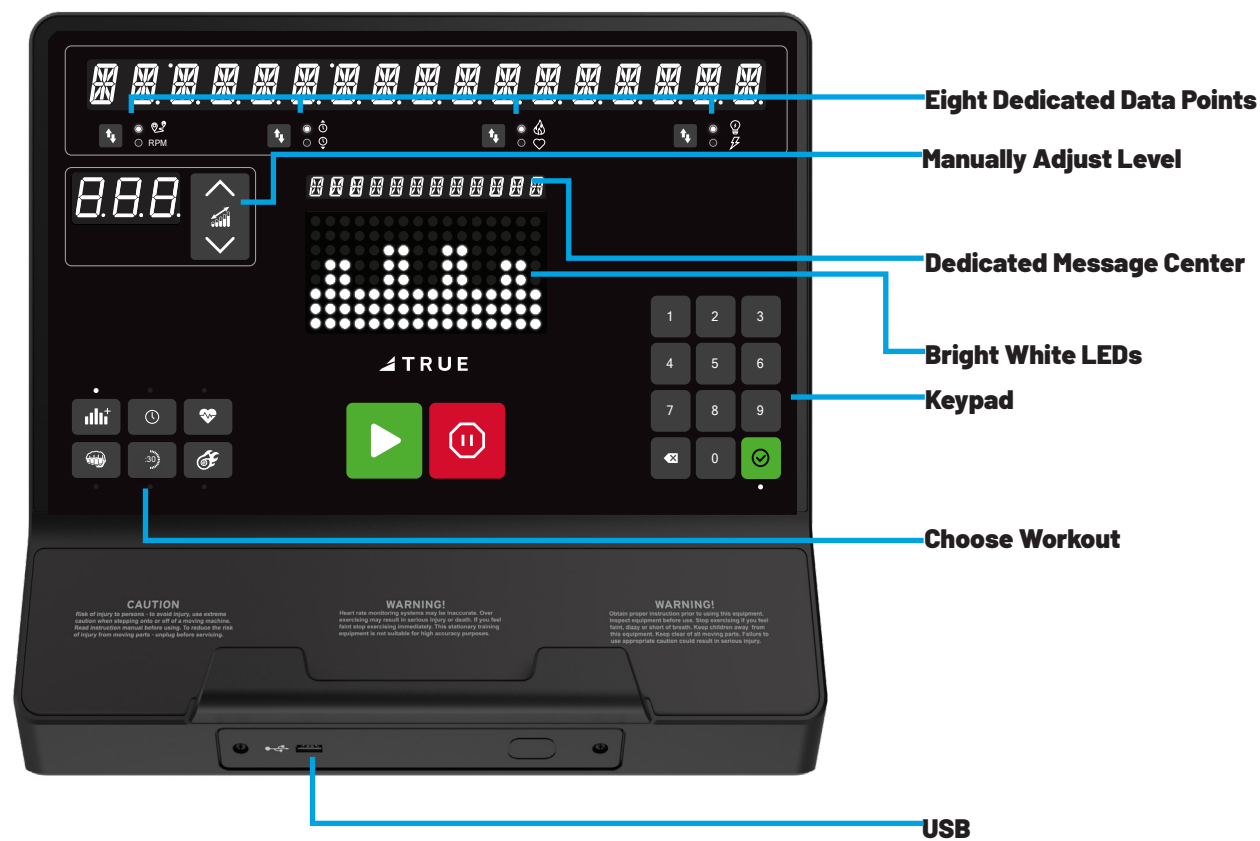

CARE AND MAINTENANCE

It is important to perform the minor maintenance tasks described in this section. Failure to maintain the equipment as described here could void the TRUE Fitness Warranty. To reduce the risk of electrical shock, always unplug the unit from its power source before cleaning or performing any maintenance tasks.

INSPECTION

TRUE is not responsible for performing or scheduling regular maintenance or inspections. Users should inspect the machine daily. Look and listen for loose fasteners, unusual noises, worn or frayed power cords, and any other indications that the equipment may be in need of service. If any of these are noticed, obtain service. Do not attempt to use the machine until proper service has been performed or damaged parts have been replaced.

IMPORTANT!

If you determine that the machine needs service, make sure it cannot be used inadvertently. Turn the unit off, and then unplug the power cord from its power source. Make sure other users know that the machine needs service. To order parts or to contact a TRUE authorized service representative, please visit www.truefitness.com.

CLEANING THE EQUIPMENT

AFTER EACH USE

- Use GymWipes™ Antibacterial wipes or spray a solution of 30 parts water to 1 part mild detergent to dampen a soft cloth and wipe all exposed surfaces.
- Use a LCD/screen cleaner or spray a solution of 1 part 91% isopropyl alcohol and 1 part water to dampen a soft cloth and wipe the surface of the console. This helps remove fingerprints, dust, and dirt.

WEEKLY

- **Vacuum**—Vacuum any dust or dirt that might have accumulated under or around the machine. Clogged air vents can prevent adequate cooling, causing a shortened life.

⚠ CAUTION:

Do not use any acidic cleaners. Doing so will weaken the paint or powder coatings and may void the TRUE Fitness Warranty. Never pour water or spray liquids on any parts of the machine. Allow the machine to dry completely before using. Frequently vacuum the floor underneath the unit to prevent the accumulation of dust and dirt, which can affect the smooth operation.

LEVELING THE MACHINE

⚠ CAUTION:

Prevent potential damage to the machine and injury to the user. This unit is equipped with adjustable leveling feet. Make sure that the machine is level at all times. If the machine is placed on a uneven surface, adjusting the feet can help, but may not completely compensate for extremely uneven surfaces. Machines that are not level can cause possible injuries for the user.

- A. Adjust both leveling feet until they contact the floor.

IMPORTANT! Do not adjust the leveling feet to such a height that they detach or unscrew from the machine.

- B. Using a 17mm wrench, verify both lock nuts are securely tightened and flush against the bottom of the frame.

PREVENTATIVE MAINTENANCE

TRUE recommends that quarterly scheduled maintenance be performed by a qualified service technician. Please contact your dealer or visit www.truefitness.com to contact a local TRUE authorized service technician.

IMPORTANT! Use only TRUE Fitness certified service providers. Using non-authorized service providers could void the TRUE Warranty.

Frequency	Tasks
Daily	• Look and listen for loose fasteners, unusual noises, worn or frayed cables, and any other indications that the equipment may be in need of service. • Use GymWipes™ Antibacterial wipes or spray a solution of 30 parts water to 1 part mild detergent to dampen a soft cloth and wipe all exposed surfaces. • Use a LCD/screen cleaner or spray a solution of 1 part 91% isopropyl alcohol and 1 part water to dampen a soft cloth and wipe the surface of the console. This helps remove fingerprints, dust, and dirt.
Weekly	• Vacuum any dust or dirt that might have accumulated under or around the machine.
Quarterly	• Record time, distance, and hours from the console. • Check error log in console. • Remove shroud covers and vacuum any debris out of the speed sensor, control electronics and moving parts. • Move and vacuum underneath the machine. • Inspect all fasteners. • Inspect all electrical connections. • Inspect components for abnormal or premature wear.

LONG TERM STORAGE

When the machine is not in use for any length of time, turn it off. Make sure that the power cord is unplugged from the power source and is positioned so that it will not become damaged or interfere with people or other equipment.

ADDITIONAL INFORMATION

TROUBLESHOOTING

This troubleshooting information is intended to assist in diagnostics only and is not all inclusive. Technical specifications, error codes, and programming are subject to change without notice. TRUE accepts no liability for any damage or loss suffered by persons whom rely wholly or in part on any description or statement contained within this manual. Please visit www.truefitness.com to obtain the most recent version of all manuals and contact TRUE product support (800-883-8783) for assistance with troubleshooting and diagnostics.

Malfunction	Possible Cause	Corrective Action
No power	Damaged power cord	Replace power cord
	Power cord not fully seated in socket	Inspect power connection at the unit and outlet
	No power at outlet	Using a voltmeter verify power at outlet
	Motor control board damaged	Contact TRUE Product Support
	Battery disconnected	Verify battery connection Connect battery if disconnected
	Low battery voltage	Verify battery voltage is 12V
Unit resets or pauses randomly	Damaged power cord	Replace power cord
	Power cord not fully seated in socket	Inspect power connection at the unit and outlet
	Insufficient power	Verify output voltage from 20A outlet with a voltmeter Verify battery voltage is 12V
	Error code is displayed on console	Contact TRUE Product Support
	Pinched or loose main communication cable	
No TV displayed or low quality	Low or bad video signal	Contact video provider
		NTCS dBmV0 through 15.6 ATCS/QAM dBmV-10 through 15.5
	Loose F type connector (coaxial cable)	Inspect all connections
	Encrypted video	Obtain set top box from video provider
	Channels or format type not correct	Verify video type with provider; analog (NTCS), digital air (ATCS), digital cable (QAM)
		Rescan TV channels
	Tuner Invalid	Contact TRUE Product Support

Malfunction	Possible Cause	Corrective Action
Heart rate is displaying erratically or not displaying	Transmitter belt contacts are not making good contact with the skin	Re-adjust the transmitter belt so that it is in full contact with the skin
	Contacts on the transmitter belt are not moist	Moisten the contacts on the transmitter belt
	Transmitter belt is not within 3 feet (1 meter) of the heart rate receiver	Adjust your position on the belt so that you are within 3 feet (1 meter) of the console
	The battery inside the transmitter belt is depleted	Replace the transmitter belt with a compatible transmitter belt
	Another user wearing a compatible transmitter strap is within 3 foot (1 meter) of the unit	Move the units so that there is more space in-between units
	Environmental interference from high voltage power lines	Move the unit to another position within the room or move the cause of the interference until heart rate reading are stable. If the probable source of interference is plugged into the same outlet move the suspect source to another outlet.
	Environmental interference from computers	
	Environmental interference from motor driven appliances	
	Environmental interference from cell or cordless phone	
	Environmental interference from Wi-Fi router	
Contact Heart Rate not displaying	Machine needs to be restarted	Power cycle
	Cables are pinched or damaged	Contact TRUE product support
	Nucleus board may be damaged	Contact TRUE product support
	Heart Rate Grips may be damaged	Contact TRUE product support

WARRANTY INFORMATION

ATTENTION OWNER'S: To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

COMMERCIAL WARRANTY

CARDIO				
WARRANTY ITEM	VAPOR, APEX	GRAVITY PLUS	GRAVITY	ADX, RO, SURGE
Frame*	7 Years (with registration)	7 Years (with registration)	7 Years (with registration)	5 Years (with registration)
Parts	3 Years	3 Years	3 Years	3 Years
Consoles	3 Years	3 Years	3 Years	2 Years
Labor**	2 Years (with registration)	2 Years (with registration)	1 Year (with registration)	1 Year (with registration)
Wear Items***	180 Days	180 Days	180 Days	90 Days

STRENGTH	
WARRANTY ITEM	PALLADIUM, FUSE XL, FORCE, FITNESS LINE, ATLAS, XFT, XFW, MP, SM, FT, FS
Frame*	10 Years (with registration)
Parts	5 Years
Cables and Linear Bearings	1 Year
Labor**	1 Year (with registration)
Wear Items***	90 Days (6 Months for FORCE only)

FLEXIBILITY	
WARRANTY ITEM	STRETCH
Parts	1 Year
Wear Items***	90 Days

Warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance.

*Frame is the serialized base of the unit and does not include paint or coatings. Frame warranty will equal that of parts warranty unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.

**Labor warranty is available for equipment located within United States. TRUE Fitness equipment is automatically covered under a 6-month Limited Labor Warranty. This 6-month Limited Labor Warranty begins from the date of purchase shown by a valid receipt. If a valid receipt is not available, the 6-month Limited Labor Warranty period begins from the date of manufacture on the originally purchased equipment.

***Wear Items include: batteries, covers, caps, badges, paint, pedal straps, toe clips, elliptical pedal inserts, foot pads, Coax/TV, HDMI, USB, mirroring or Ethernet connections, and safety key.

See Warranty Details for product registration requirements, terms, conditions, and complete coverage details.

ATTENTION OWNER'S: To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

LIMITED-USE COMMERCIAL WARRANTY*

CARDIO				
WARRANTY ITEM	VAPOR, APEX	GRAVITY PLUS	GRAVITY	LAUNCH
Frame**	7 Years (with registration)	7 Years (with registration)	7 Years (with registration)	7 Years (with registration)
Parts	5 Years	5 Years	5 Years	5 Years
Consoles	3 Years	3 Years	3 Years	3 Years
Tread Belt and Deck	5 Years	5 Years	5 Years	2 Years
Labor***	3 Years (with registration)	3 Years (with registration)	2 Years (with registration)	1 Year (with registration)
Wear Items****	180 Days	180 Days	180 Days	90 Days

TRUE Fitness may offer alternative warranties to purchasers of commercial equipment for limited-use commercial.* This policy ensures that customers who use commercial equipment for limited-use commercial use may receive alternative warranty coverage, provided they meet the specified requirements. It's important to note that the specific terms and conditions of the alternative warranty, as well as the eligibility criteria, may vary depending on the product and TRUE's policies at the time of purchase. Customers should review the warranty terms and contact TRUE for precise details.

*To be eligible for the alternative limited-use commercial warranty, equipment use cannot exceed 6-hours use a day or be for use in a membership, dues paying, or institutional facility.

Customers must provide TRUE with the following within 45 days of installation of the qualifying commercial-rated equipment:

- Purchase agreement.
- Proof of professional delivery and installation.
- TRUE will recognize the alternative warranty for the purchaser and implement it within 45 days of receiving the required documentation if such an alternative warranty is available for the specific product.

Warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance.

**Frame is the serialized base of the unit and does not include paint or coatings. Frame warranty will equal that of parts warranty unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.

***Labor warranty is available for equipment located within United States. TRUE Fitness equipment is automatically covered under a 6-month Limited Labor Warranty. This 6-month Limited Labor Warranty begins from the date of purchase shown by a valid receipt. If a valid receipt is not available, the 6-month Limited Labor Warranty period begins from the date of manufacture on the originally purchased equipment.

****Wear Items include: batteries, covers, caps, badges, paint, pedal straps, toe clips, elliptical pedal inserts, foot pads, Coax/TV, HDMI, USB, mirroring or Ethernet connections, and safety key.

See Warranty Details for product registration requirements, terms, conditions, and complete coverage details.

ATTENTION OWNER'S: To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

IN-HOME USE WARRANTY*

CARDIO				
WARRANTY ITEM	VAPOR, APEX	GRAVITY PLUS	GRAVITY	LAUNCH
Frame**	25 Years (with registration)	25 Years (with registration)	25 Years (with registration)	25 Years (with registration)
Drive Motor***	25 Years (with registration)	25 Years (with registration)	25 Years (with registration)	25 Years (with registration)
Parts	10 Years	12 Years	10 Years	7 Years
Consoles	3 Years	3 Years	3 Years	3 Years
Tread Belt and Deck	10 Years	10 Years	7 Years	5 Years
Labor****	2 Years (with registration)	2 Years (with registration)	2 Years (with registration)	1 Year (with registration)
Wear Items*****	180 Days	180 Days	180 Days	180 Days

TRUE Fitness may offer alternative warranties to purchasers of commercial equipment for in-home use.* This policy ensures that customers who use commercial equipment for in-home use may receive alternative warranty coverage, provided they meet the specified requirements. It's important to note that the specific terms and conditions of the alternative warranty, as well as the eligibility criteria, may vary depending on the product and TRUE's policies at the time of purchase. Customers should review the warranty terms and contact TRUE for precise details.

*To be eligible for the alternative in-home use warranty, equipment must be used at a home address and cannot be used outside of the purchaser of the equipment and their immediate family.

Customers must provide TRUE with the following within 45 days of installation of the qualifying commercial-rated equipment:

- Purchase agreement.
- Proof of professional delivery and installation.
- TRUE will recognize the alternative warranty for the purchaser and implement it within 45 days of receiving the required documentation if such an alternative warranty is available for the specific product.

Warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance.

**Frame is the serialized base of the unit and does not include paint or coatings. Frame warranty will equal that of parts warranty unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.

***Drive Motor warranty will equal that of parts warranty unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.

****Labor warranty is available for equipment located within United States. TRUE Fitness equipment is automatically covered under a 6-month Limited Labor Warranty. This 6-month Limited Labor Warranty begins from the date of purchase shown by a valid receipt. If a valid receipt is not available, the 6-month Limited Labor Warranty period begins from the date of manufacture on the originally purchased equipment.

*****Wear Items include: batteries, covers, caps, badges, paint, pedal straps, toe clips, elliptical pedal inserts, foot pads, Coax/TV, HDMI, USB, mirroring or Ethernet connections, and safety key.

See Warranty Details for product registration requirements, terms, conditions, and complete coverage details.

ATTENTION OWNER'S: To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

WARRANTY DETAILS

All TRUE Fitness products are distributed by TRUE and are warranted to the original product purchaser and the parts of the TRUE product (the "Product") listed below. During the applicable Warranty Period, the Product, under normal use and service, shall be free of manufacturing defects in workmanship and materials.

NOTE:

- Standard shipping is included with warranty part replacement.
- Shipping for warranty frame or replacement is included for the period of three years from the original date of purchase.

All Warranty Items are "LIMITED"

- This limited warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, failure to follow instructions and warnings in owner's manual, accident, misuse, abuse, unauthorized modification, failure to provide reasonable and necessary maintenance, software version upgrades, compatibility with third party/aftermarket hardware, software, applications, or websites.
- TRUE's liability shall under no circumstances exceed the actual amount paid by you for the product, nor shall TRUE under any circumstances be liable for any consequential, incidental, special or punitive damages or losses, whether direct or indirect.
- Some states or countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
- TRUE will neither assume nor authorize any person to assure for us any other obligation or liability concerning the sale of this Product. Under no circumstances shall TRUE be liable under this warranty, or otherwise, of any damage to any person or property, including any lost profits or lost savings, for any special, indirect, secondary, incidental, or consequential damages arising out of the use of or inability to use this Product.
- This limited warranty, which is given expressly and in lieu of all other express warranties, constitutes the only warranty made by TRUE.
- The remedies described herein are your sole and exclusive remedies and TRUE's entire liability for any breach of this limited warranty.
- No one is authorized to change, modify, or extend the terms of this limited warranty.
- This limited warranty is in lieu of all other warranties of any kind either expressed or including but not limited to implied warranties of merchant.
- This limited warranty applies to the product only while the product remains in the possession of the original purchaser and is not transferable.
- This limited warranty becomes VALID ONLY if the Product is initially assembled/installed by a TRUE authorized dealer/technician (if anyone other than a TRUE authorized dealer/technician initially assembles and installs the Product, this limited warranty will be void unless the written authorization of TRUE is first obtained).
- The "Warranty Period" for this limited warranty shall be for the duration forth in the applicable charts, beginning from the date of original purchase; provided, however, except to the extent prohibited by applicable law, the "Warranty Period" shall only be six months for labor (from the date of original purchase) unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.
- All serial numbers must be intact on the Product for this limited warranty to be valid.
- Installation or download of any 3rd party or after-market products will result in voided warranty. This includes, but is not limited to, electrical and mechanical parts, software, or applications.
- TRUE will ship to an authorized service provider any new or rebuilt replacement part or component, or at our option, replace or refund the Product.
- Replacement parts are warranted for the remaining portion of the original warranty period.
- Proof/receipts of necessary maintenance may be required within 30 days of requested warranty part or service.
- This limited warranty does not apply to the performance of the heart rate accuracy will not be warranted as performance varies, based on user's physiology, age, method of use, and other external factors.

ATTENTION OWNER'S: To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

WARRANTY REGISTRATION

Thank you for purchasing a TRUE product!

To ensure you get the most out of your purchase and receive the full benefits of our warranty, **you must register your product within 45 days of purchaser's receipt of this product.**

How to register your product:

- **Online:**
Simply visit our website at truefitness.com and register your product warranty in one simple step.
- **QR Code:**
Scan the QR code below with your smartphone to be taken directly to the registration page.



- **By Mail:**
Complete the information below and mail to:
TRUE Product Support
865 Hoff Road
St. Louis, MO 63366

PLEASE RETAIN THIS PORTION FOR YOUR RECORDS

BASE SERIAL NUMBER:

CONSOLE SERIAL NUMBER:



WARRANTY REGISTRATION

Base Serial Number

Console Serial Number

Purchase Date

Company (if applicable)

Customer Name (First and Last)

Email Address

Phone Number

Street Address

City

State

Postal Code

Country



CONTACT US
service@truefitness.com
800.883.8783

865 Hoff Road
St. Louis, MO 63366

[TRUEFITNESS.COM](https://www.truefitness.com)



MAN-XC2-RA-35 Owner's Manual and Assembly Guide REV08

© 2025 TRUE Fitness All Rights Reserved.