



LAUNCH RECUMBENT BIKE

OWNER'S MANUAL AND ASSEMBLY GUIDE

IMPORTANT—PLEASE READ

All products shown are prototype. Actual product delivered may vary. Product specifications, features, and software are subject to change without notice.

For the most up-to-date version of this manual, please see our website: <https://truefitness.com/services-support/user-manuals/>

CONTACTING OUR SUPPORT TEAM

To contact TRUE for any of your pre or post installation questions, please call our toll-free numbers Monday – Friday during normal business hours:

- Commercial Direct Customers and Corporate Accounts | 800.868.8783
- Retail Customers and Distributors | 800.883.8783

Or email us:

- Commercial Direct Customers and Corporate Accounts | service.direct@truefitness.com
- Retail Customers and Distributors | service@truefitness.com
- Service International | int.service@truefitness.com

When contacting TRUE, please have the following information ready:

- Serial Number of Unit
- Contact Information—Full Name, Email, and Phone Number
- Address of Facility or Residence
- Detailed Description Regarding Symptom of the Unit (along with pictures or video if applicable)

NOTE: Authorized service providers, dealers, and distributors may also use TRUE's online resource | portal.truefitness.com.

CONTACTING OUR SALES TEAM

Interested in owning more TRUE products? Please contact us with any product inquiries so that we may direct you to the appropriate sales representative to help answer your questions.

- Phone | 800.426.6570
- Email | sales@truefitness.com

REPORTING FREIGHT CLAIMS OR PARTS DAMAGE

Unfortunately, sometimes materials can be damaged during shipment. If materials are damaged during shipment, please follow the guidelines below to determine the appropriate process for you to follow.

Severe Damage—Obvious damage to external packaging and internal product.

Please refuse the shipment and it will be returned to TRUE by the carrier. Contact TRUE product support by calling 800.883.8783 or sales support by calling 800.426.6570 Monday–Friday during normal business hours to notify us that the shipment has been refused. Once we have received the damaged shipment, a replacement shipment will be sent to you. If the shipment comes in multiple boxes, only refuse boxes with damage.

Slight Damage—Minimal damage to external packaging with unknown internal damage to product.

If the shipment has minimal damages and you are not sure if the actual product is damaged, you must sign the bill of lading as damaged when accepting the shipment. Once you have opened the box and you have determined something is indeed damaged, please gather the serial number, model number, description of damage, and photos of damage. Please make sure the photos include the damaged product as well as the damaged box the product arrived in. Contact TRUE product support (service@truefitness.com | 800.883.8783) or TRUE sales support (sales@truefitness.com | 800.426.6570) Monday–Friday during normal business hours.

Concealed Damage—No damage to external packaging but internal damage to product.

You may receive a shipment that looks intact and discover once the box has been opened that there are hidden damages. Please notify the carrier immediately. TRUE will not be able to file a claim if the carrier is not notified in a timely manner. Once you have called the carrier you will need to gather the serial number, model number, description of damage, and photos of damage. Contact TRUE product support (service@truefitness.com | 800.883.8783) or TRUE sales support (sales@truefitness.com | 800.426.6570) Monday–Friday during normal business hours.

TABLE OF CONTENTS

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS—SAVE THESE INSTRUCTIONS.....5

POWER REQUIREMENTS.....7

SPACE REQUIREMENTS.....8

SPECIFICATIONS.....8

WARNING DECALS.....9

COMPLIANCES.....9

PROPER USE.....10

ASSEMBLY INSTRUCTIONS

PREASSEMBLY CHECKLIST.....11

ASSEMBLY STEPS.....15

PRODUCT FEATURES

BASE OVERVIEW.....35

CONSOLE OVERVIEW.....36

CARE AND MAINTENANCE

INSPECTION.....38

CLEANING THE EQUIPMENT.....38

LUBRICATION.....38

LEVELING THE MACHINE.....39

PREVENTATIVE MAINTENANCE.....40

LONG TERM STORAGE.....40

ADDITIONAL INFORMATION

TROUBLESHOOTING.....41

WIRING DIAGRAMS.....43

WARRANTY INFORMATION

COMMERCIAL WARRANTY44

LIMITED-USE COMMERCIAL WARRANTY45

IN-HOME USE WARRANTY46

WARRANTY DETAILS47

WARRANTY REGISTRATION48

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS—SAVE THESE INSTRUCTIONS

This equipment is intended for a commercial or institutional setting. This owner's manual should be accessible to all personal trainers, faculty, and members.

- Read and understand all instructions and warnings prior to use.
- Obtain a medical exam before beginning any exercise program. If at any time during exercise you feel faint, dizzy, or experience pain, stop and consult your physician.
- Obtain proper instruction prior to use.
- This unit is intended for commercial use only.
- Class B and C are not suitable for high-precision training purposes.
- Inspect the unit for incorrect, worn, or loose components and do not use until corrected, replaced, or tightened prior to use.
- Do not wear loose or dangling clothing while using the unit.
- Care should be used when mounting or dismounting the unit.
- Read, understand, and test the emergency stop procedures before use.
- Disconnect all power before servicing the unit.
- Do not exceed maximum user weight of 400 lbs / 181 kg.
- Keep the top side of the moving surface clean and dry.
- Keep children and animals away.
- Use caution when moving and assembling unit.
- All exercise equipment is potentially hazardous. If attention is not paid to the conditions of equipment usage, death, or serious injury could occur.

⚠ WARNING: Heart rate monitoring systems may be inaccurate. Over exercise may result in serious injury or death. If you feel faint, stop exercising immediately.

⚠ WARNING: To reduce the risk of burns, fire, and electric shock or injury to persons, follow these instructions:

- Health related injuries may result from incorrect or excessive use of exercise equipment.
- TRUE STRONGLY recommends seeing a physician for a complete medical exam before undertaking an exercise program, particularly if the user has a family history of high blood pressure or heart disease, is over the age of 45, smokes, has high cholesterol, is obese or has not exercised regularly in the past year. Additionally, TRUE recommends consulting a fitness professional on the correct use of this product.
- Equipment should be immediately taken out of use if it fails to work properly or when a warning is presented electronically.
- When using this exercise machine, basic precautions should always be followed.
- Use this equipment only for its intended use as described in this manual.
- Do not move the equipment by lifting the console. Do not use the console as a handlebar during a workout.
- This product can expose you to chemicals including Toluene and Acrylamide which are known to the State of California to cause Cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.
- Keep equipment stable on flat ground.
- Risk of personal injury-crushing hazard when equipment is in operation. Keep feet, hands, and fingers away from moving parts.
- Replace warning labels that may be worn, damaged, or missing.
- Replace any non-working or damaged components, remove the unit from service until repair is performed.
- Do not operate the equipment while being covered with a blanket, pillow, plastic, or anything that insulates or stops airflow. Keep air openings free of lint, hair or any obstructing material.
- Any changes or modifications to this equipment could void the product warranty.
- Do not use this product in areas where aerosol spray products are being used or where oxygen is being administered. Such substances create the danger of combustion and explosion.

- Do not use this product outdoors, near water, while wet, or in areas of high humidity including extreme temperature changes.
- Close supervision is necessary when used near children under the age of 15, or disabled persons.
- Wear shoes with rubber or high traction soles. Do not use shoes with heels, leather soles, cleats or spikes. Make sure no stones are embedded in the soles. Do not use this product in bare feet. Keep all loose clothing, shoelaces and towels away from moving parts.
- Use handlebars to maintain balance when mounting and dismounting the machine and for additional stability while exercising.
- Avoid the possibility of bystanders being struck or caught between moving parts by making sure that they are out of reach of the equipment while it is in motion.
- Do not use typing or web surfing features at excessive speeds. Always stabilize yourself when using typing or web surfing features. (Varies by console option.)
- Never place liquids of any type directly on the unit except in the accessory tray or bottle holders. Containers with lids are recommended.
- Always follow the console instructions for proper operation.
- Do not use the contact heart rate grips as a handlebar during a workout.
- Allow only one person at a time on the equipment while it's operating.
- Do not allow animals on or near the equipment while in operation.
- Do not reach into or underneath the unit, or tip it on its side during operation.
- Do not use if you have a cold or fever.
- This equipment is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the equipment by a person responsible for their safety.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not use attachments not recommended by the manufacturer.
- Allow only trained personnel to service this equipment.
- It is the sole responsibility of the owner/operator to ensure regular and scheduled maintenance is performed.
- This machine is self-generated and does not require the use of an electrical outlet with the LED console. Optional touch screen or PVS consoles require 110V AC input and 9V DC 1.5 amp output for console operation only.
- The batteries within self-generated equipment contain materials that are considered hazardous to the environment. Federal law requires proper disposal of these batteries.

⚠ DANGER: To reduce the risk of electric shock, always unplug this product when not in use, before cleaning, or attempting any maintenance activity. Do not handle the plug with wet hands.

- To disconnect, turn power OFF at the ON/OFF switch if applicable, then remove plug from electrical outlet. On the machine power switch, (⏻) means that the machine power is **ON** and (⏻) means the machine power is **OFF**.
- Use a TRUE AC power cord.
- Position this product so the power cord plug is accessible to the user.
- Keep the power cord away from heated surfaces. Do not pull the equipment by the power cord or use the cord as a handle. Do not run the power cord along the side or under the equipment.
- If the electrical supply cord is damaged it must be replaced by the manufacturer, an authorized service agent, or a similarly qualified person to avoid a hazard.
- This product must be connected to a properly grounded electrical outlet.
- Never insert objects into any openings in this product. If an object should drop inside, turn off the power, unplug the power cord from the outlet and carefully retrieve it. If the item cannot be reached, contact TRUE product support.
- To avoid serious injury, remove and store the power cord when the machine is not in use.
- This appliance should never be left unattended when plugged in.
- Do not use any type of extension cord with this product.
- Never operate a TRUE product if it has a damaged power cord or electrical plug, or if it has been dropped, damaged, or even partially immersed in water.

NOTE: Power warnings, grounding instructions, and power requirements are only applicable when this product is being used with the optional power supply. Non-LED consoles require the optional power supply.

POWER REQUIREMENTS

Read and understand all instructions before plugging any TRUE power cord into an electrical outlet.


GROUNDING INSTRUCTIONS

This product must be grounded. If the product malfunctions or breakdowns, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER:

- Improper connection of the equipment grounding conductor can result in risk of electrical shock.
- Check with a qualified electrician or service provider if you are in doubt as to whether the equipment is properly grounded or installed on a dedicated line.
- Seek a qualified electrician to perform any modifications to the cord or plug. TRUE is not responsible for injuries or damages as a result of cord or plug modification.
- To reduce the risk of burns, fire, electric shock, or injury, it is imperative to connect each product to a properly grounded 110V or 220V electrical outlet. The voltage required for your unit is located on the serial number decal (usually on the front of the unit). Depending on where you live voltage requirements differ.

- Some TRUE products require a circuit rated 110V, 60 Hz, and 20 amps. In the United States, most residential homes have circuits rated 110V, 60 Hz, and 15 amps. If your unit requires a 20 amp outlet, contact an electrician to install a dedicated 20 amp circuit prior to use.
- **110 Volt**—This model is for use on a nominal 110V circuit and has a grounding plug that looks like the plug illustrated in figure A. Make sure the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.
- **220 Volt**—This model is for use on a circuit having a nominal rating no less than 208V and more than 240V and is factory equipped with a specific electric cord and has a grounding plug that looks like the plug illustrated in figure B. Make sure that the product is connected to an outlet having the same configuration as the plug in figure B. No adapter should be used with this product. If the product must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel.

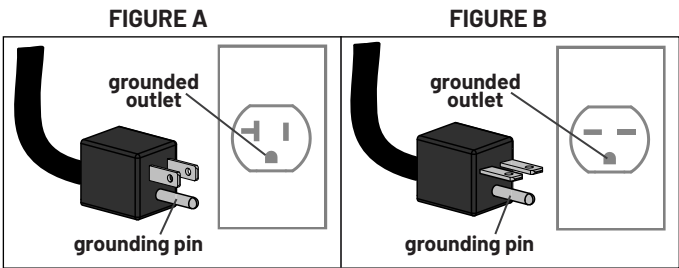


| Power Information | | | | | | |
|-------------------|------------------|----------------|----------------------|---|-------------|--|
| Model | Line Voltage (V) | Frequency (Hz) | Rated Current (Amps) | Number of Units per Circuit | Plug/Outlet | Max Power Dissipation (Watt) |
| RC3-0B-35 | 110 | 50/60Hz | 20 | Up to 5 bikes per circuit—DO NOT exceed | NEMA 5-20 | 350 watts per bike equipped with a non-LED console |
| | 220 | 50/60Hz | 8 | Up to 5 bikes per circuit—DO NOT exceed | NEMA 6-15 | 350 watts per bike equipped with a non-LED console |

NOTE: The plug configuration for the power adapter may vary by country.

NOTE: Power warnings, grounding instructions, and power requirements are only applicable when this product is being used with the optional power supply. Non-LED consoles require the optional power supply.

SPACE REQUIREMENTS

TRUE recommends leaving a minimum of 24" (61cm) on each side of the equipment and a 79" (200cm) safety zone at the rear of the equipment.

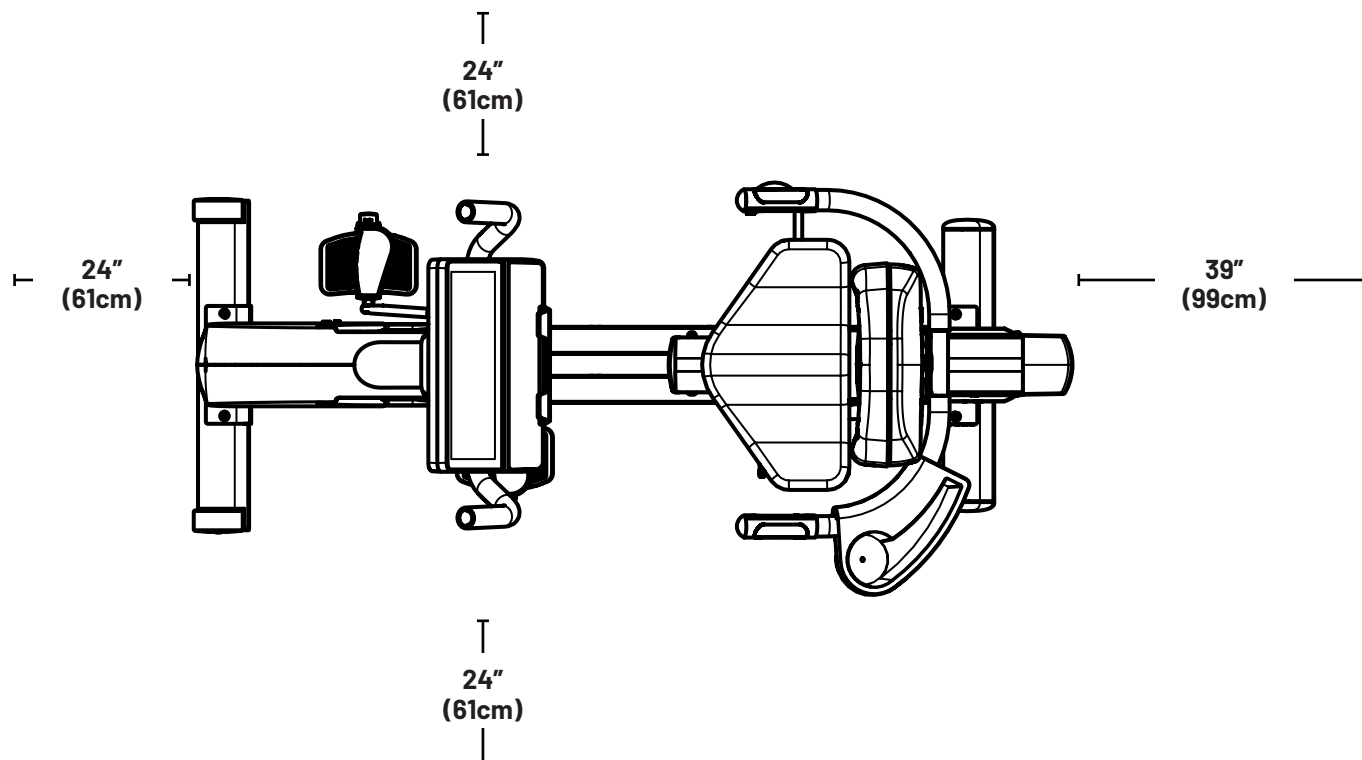


SPECIFICATIONS

- **DIMENSIONS (L X W X H)**
63" x 30" x 54" / 160cm x 76cm x 137cm
- **MACHINE WEIGHT**
165 lbs / 76 kg
- **MAXIMUM USER WEIGHT**
400 lbs / 181 kg

WARNING DECALS

⚠ WARNING: Replace warning labels that may be worn, damaged, or missing.

To replace any worn or missing decals contact TRUE product support (service@truefitness.com | 800.883.8783).

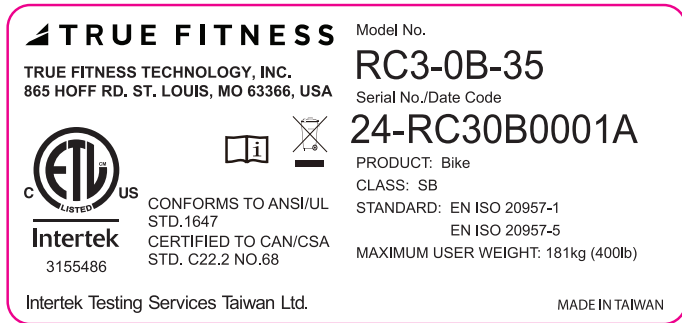

COMPLIANCES

This equipment complies with all applicable codes and regulations. For a complete list of compliances, please visit www.truefitness.com.

PROPER USE

Proper Training Position

- Once seated, users should place their feet on the pedals (A).
- When pedaling, the user should be able to extend their legs fully while pedaling; if users do not have enough room to fully extend their legs, they should adjust their seat position (B) until their legs are able to comfortably extend. Additionally, if users legs feel overly stretched when they're extended, the seat needs a lower adjustment. Users can also adjust the seat back (C) backwards or forward based on their personal preferences.
- During a workout the users hand should grasp the handlebars (D).
- To safely exit, confirm the workout has ended and the console has returned to the Home screen in addition to the pedals coming to a complete stop. While firmly grasping the handlebars to maintain balance, slowly slide your body off the seat and feet from the pedals to transition to a standing position free from the bike.

NOTE: The braking system is speed independent.



ASSEMBLY INSTRUCTIONS



NOTE: Supplemental video available @TRUEFitnessservicevids: https://www.youtube.com/watch?v=qZBrTT_89p8

PREASSEMBLY CHECKLIST

BASIC GUIDELINES FOR SETTING UP THE EQUIPMENT

After removing the equipment from the packaging, place the equipment on a clean, level surface. Make sure the electrical cord easily reaches a grounded three-pronged outlet.

⚠ DANGER: Do not use an extension cord or ungrounded outlet. The ground helps prevent electrical damage to your equipment and enhances your safety by helping to prevent shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the equipment is properly grounded. Do not modify the plug provided with the unit if it will not fit the outlet. Have a proper outlet installed by a qualified electrician.

⚠ CAUTION:



Use caution when assembling the equipment.
Unpacking and assembling of this product is a two person task.



Use caution when unpacking this product. Avoid damage to the product.
DO NOT use a box cutter. **DO NOT** slice into the packaging.

VERIFY BOX CONTENTS

IMPORTANT! Please verify box contents. If you have questions, or if there are any missing parts, contact product support (service@truefitness.com | 800.883.8783).

| TOOLS NEEDED FOR ASSEMBLY | | INCLUDED IN BOX |
|------------------------------|--|-----------------|
| 4mm Ball End Allen Wrench | | YES |
| 5mm Ball End Allen Wrench | | YES |
| 6mm Ball End Allen Wrench | | YES |
| 15mm/17mm Combination Wrench | | YES |

| TOOLS NEEDED FOR ASSEMBLY | | INCLUDED IN BOX |
|------------------------------|--|-----------------|
| 13mm Wrench | | NO |
| #2 Phillips Screwdriver | | NO |
| Wire Cutters | | NO |
| Torque Wrench with 15mm Head | | NO |



BOX CONTENTS


| ITEM | DESCRIPTION | QTY |
|------|------------------------|-----|
| 1 | BASE | 1 |
| 2 | SEAT HANDLEBAR | 1 |
| 3 | SEAT ADJUSTMENT HANDLE | 1 |
| 4 | SEAT CUSHION | 1 |
| 5 | SEAT BACK COVER | 1 |
| 6 | SEAT BACK PAD | 1 |
| 7 | WATER BOTTLE HOLDER | 1 |
| 8 | FRONT MAST | 1 |
| 9 | MAST BOOT | 1 |
| 10 | BOTTOM CONSOLE COVER | 1 |
| 11 | REAR CONSOLE COVER | 1 |
| 12 | LEFT PEDAL | 1 |
| 13 | RIGHT PEDAL | 1 |
| 14 | FRONT STABILIZER | 1 |
| 15 | REAR STABILIZER | 1 |
| 16 | HARDWARE BAG(S) | 1 |
| 17 | MANUAL | 1 |







HARDWARE PACK CONTENTS



RCS0045-35 Hardware Pack


| STEP 1 & 2 FRONT AND REAR STABILIZER BARS | | |
|--|---|-----|
| ITEM | DESCRIPTION | QTY |
| RCS0531 | BHCS, NYLOC, M8 X 20MM (ZP,B0)  | 4 |
| CBW0021 | WASHER, CURVE M8X1.2MM  | 4 |




| STEP 3 SEAT LATCH HANDLE | | |
|-----------------------------|---|-----|
| ITEM | DESCRIPTION | QTY |
| RCS0538 | SCREW SHCS M5 X 20MM (ZP,B0)  | 2 |

| STEP 5 SEAT HANDLEBAR | | |
|--------------------------|--|-----|
| ITEM | DESCRIPTION | QTY |
| PSB0173 | FHCS, LP, M8 X 15MM (ZP,B0)  | 4 |

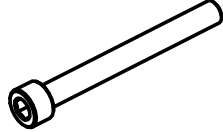
| STEP 6 SEAT CUSHION | | |
|------------------------|--|-----|
| ITEM | DESCRIPTION | QTY |
| RCS0544 | BHCS, M6 X 15MM (ZP,B0)  | 4 |
| RCS0545 | WASHER SPLITLOCK M6 (ZP,B0)  | 4 |
| CS80136 | WASHER, FLAT, M6*OD19*ID6.2*6.2 (BLACK)  | 4 |


| STEP 7 SEAT BACK | | |
|---------------------|--|-----|
| ITEM | DESCRIPTION | QTY |
| PSB0170 | SHCS, M6 X 55, B0  | 4 |
| RCS0545 | WASHER SPLITLOCK M6 (ZP,B0)  | 4 |





| STEP 9 WATER BOTTLE HOLDER | | |
|-------------------------------|--|-----|
| ITEM | DESCRIPTION | QTY |
| PS0114 | SCREW, COARSE PLASTIC M4-0.7 X 16MM BLK  | 6 |
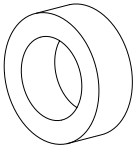
| STEP 12 FRONT MAST | | |
|-----------------------|--|-----|
| ITEM | DESCRIPTION | QTY |
| RCS0517 | BHCS, M8 X 15MM (ZP,B0)  | 4 |
| CBW0025 | WASHER, LOCK, M8 (BLACK)  | 4 |
| CBW0015 | WASHER, M8X16X1.2T, BLACK  | 4 |

HARDWARE PACK CONTENTS

| STEP 13 CONSOLE | | |
|--------------------|--|-----|
| ITEM | DESCRIPTION | QTY |
| N80RI360127230 | FERRITE  | 1 |

| STEP 14 CONSOLE COVERS | | |
|---------------------------|---|-----|
| ITEM | DESCRIPTION | QTY |
| CS80131 | SCREW M5X15L (BLACK)  | 6 |

| TOOLS | | |
|------------|--|-----|
| ITEM | DESCRIPTION | QTY |
| XM0139_004 | 4MM BALL END ALLEN WRENCH  | 1 |
| TC6085_004 | 5MM BALL END ALLEN WRENCH  | 1 |
| 78008949 | 6MM BALL END ALLEN WRENCH  | 1 |
| RCS0045016 | 15MM/17MM COMBINATION WRENCH  | 1 |


ASSEMBLY STEPS

Step 1—Attach Rear Stabilizer


| Tools Used in this Step | |
|---------------------------|---|
| 6mm Ball End Allen Wrench |  |

| Parts Used in this Step | | | |
|-------------------------|-----------|--------------------------------|-----|
| Item | Part | Description | Qty |
| 1 | CB0007-35 | SUBASSEMBLY, REAR STABILIZER | 1 |
| 2 | RCS0531 | BHCS, NYLOC, M8 X 20MM (ZP,B0) | 2 |
| 3 | CBW0021 | WASHER, CURVE M8X1.2MM | 2 |

- A. Rotate the bike frame forward on the metal front stabilizer bracket.
- NOTE:** At least one person should hold the bike frame, while another installs the rear stabilizer.
- B. Using a 6mm ball end allen wrench, install the rear stabilizer into the metal bracket using 2 hex screws and 2 flat washers.

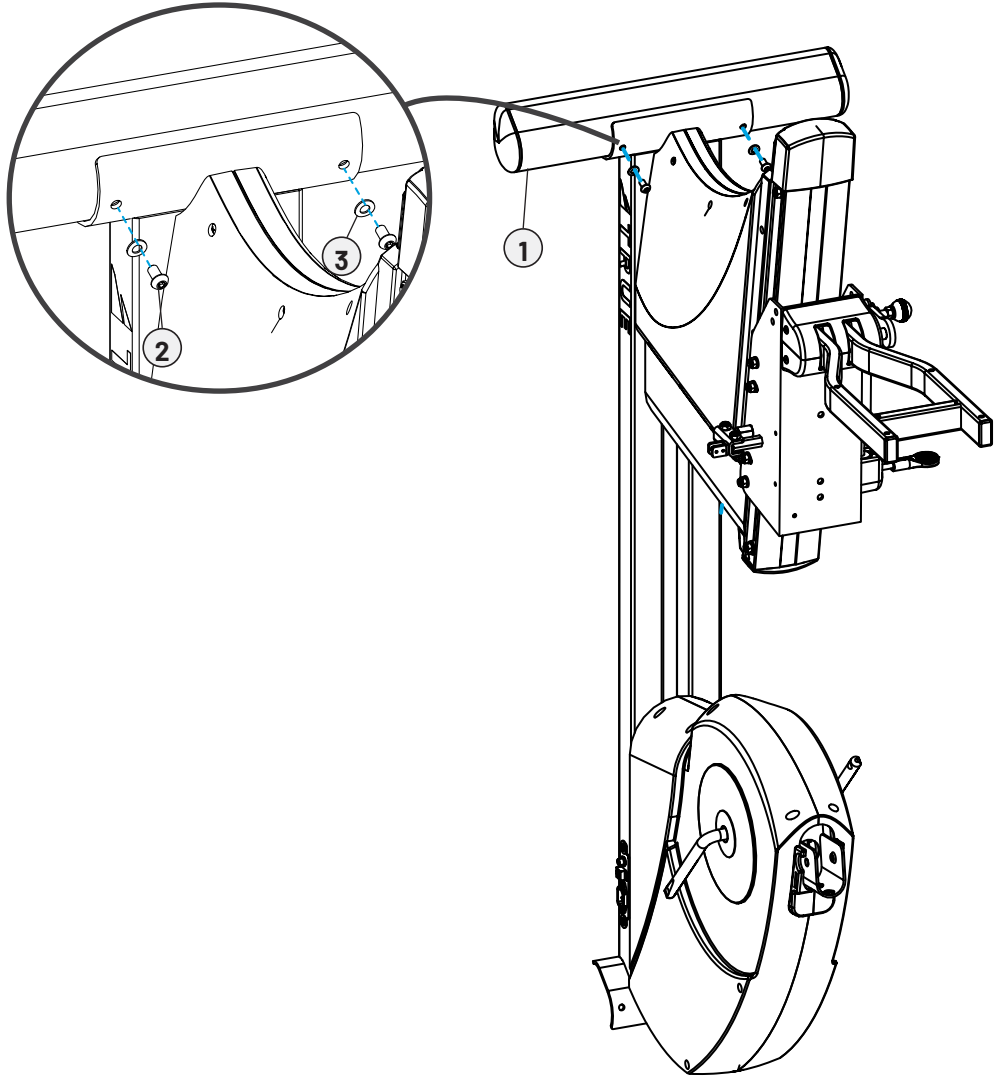


Step 2—Attach Front Stabilizer

| Tools Used in this Step | |
|---------------------------|---|
| 6mm Ball End Allen Wrench |  |

- A. Rotate the bike frame backwards on the rear stabilizer.
- NOTE:** At least one person should hold the bike frame, while another installs the front stabilizer.
- B. Using a 6mm ball end allen wrench, install the front stabilizer into the metal bracket using 2 hex screws and 2 flat washers.

| Parts Used in this Step | | | |
|-------------------------|-----------|--------------------------------|-----|
| Item | Part | Description | Qty |
| 1 | CB0008-35 | SUBASSEMBLY, FRONT STABILIZER | 1 |
| 2 | RCS0531 | BHCS, NYLOC, M8 X 20MM (ZP,B0) | 2 |
| 3 | CBW0021 | WASHER, CURVE M8X1.2MM | 2 |

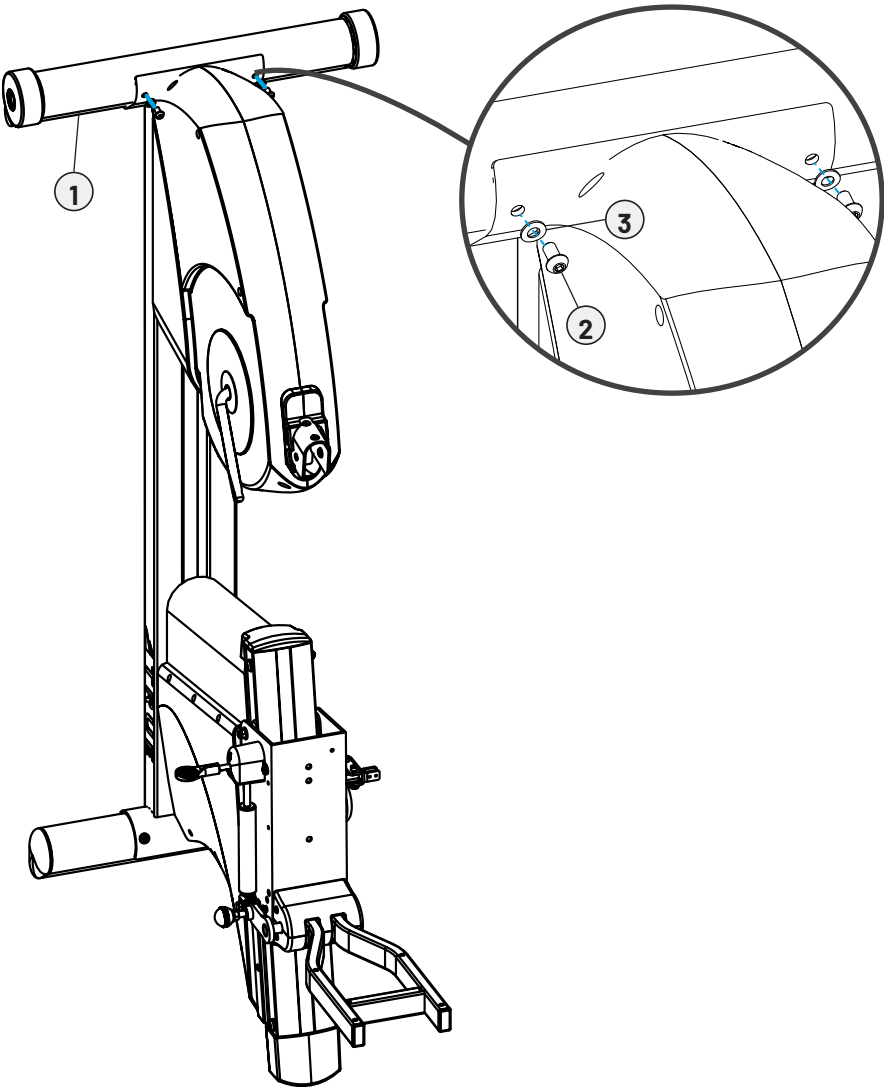


Step 3—Attach Seat Adjustment Handle

| Tools Used in this Step | |
|---------------------------|---|
| 4mm Ball End Allen Wrench |  |

| Parts Used in this Step | | | |
|-------------------------|------------|--|-----|
| Item | Part | Description | Qty |
| 1 | CBW0027ABK | KIT, SEAT ADJUSTMENT HANDLEBAR, BLACK GRIP/BLUE HANDLE | 1 |
| 2 | RCS0538 | SCREW SHCS M5 X 20MM (ZP,B0) | 2 |

Using a 4mm ball end allen wrench, attach the seat adjustment handle to the seat carriage using 2 hex screws.

NOTE: The seat adjustment handle should face the front of the machine.

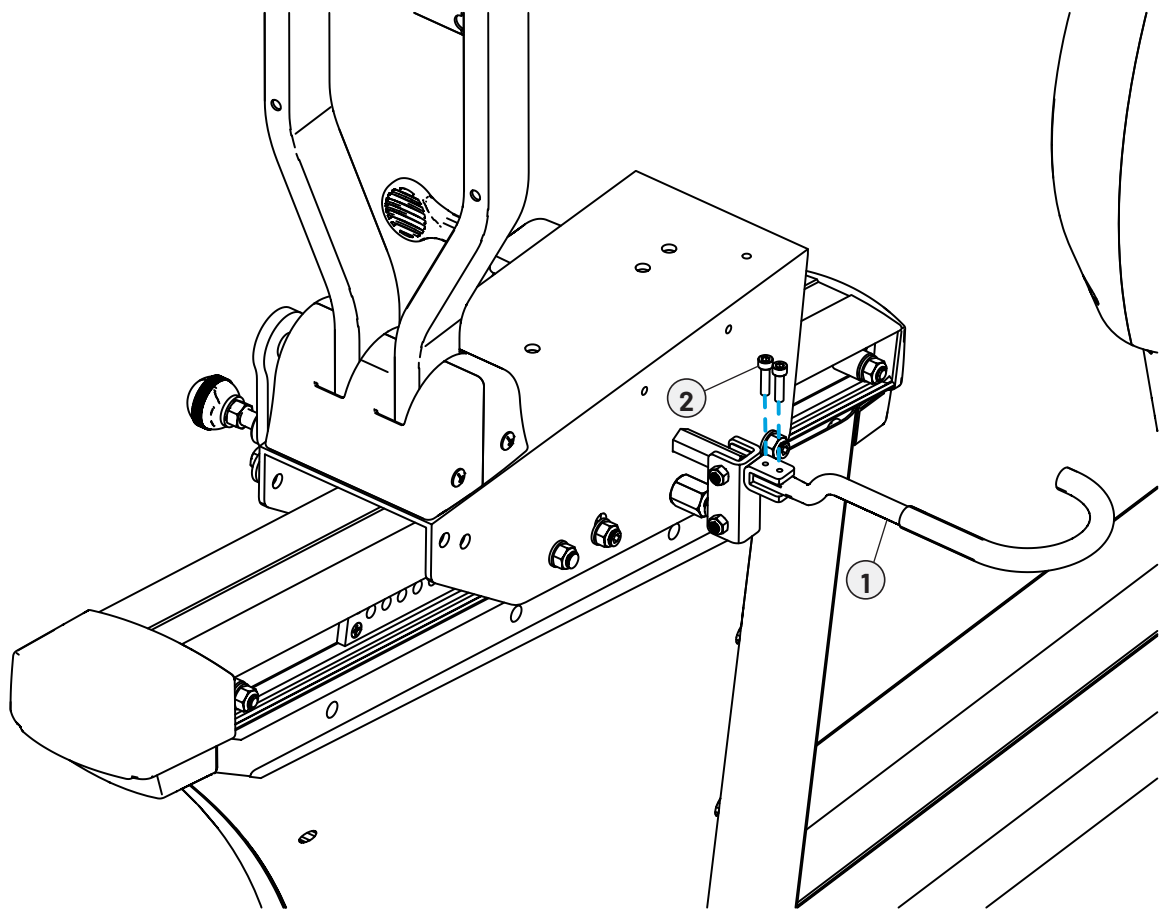

Step 4—Connect Seat Handlebar Cables

Tools Used in this Step


Wire Cutters



- A. After making sure the handlebar is in the correct position, connect the contact heart rate cables.

NOTE: At least one person should hold the seat handlebar in place while the other makes the cable connections.

- B. Using wire cutters, cut the 2 zip ties on the seat carriage.

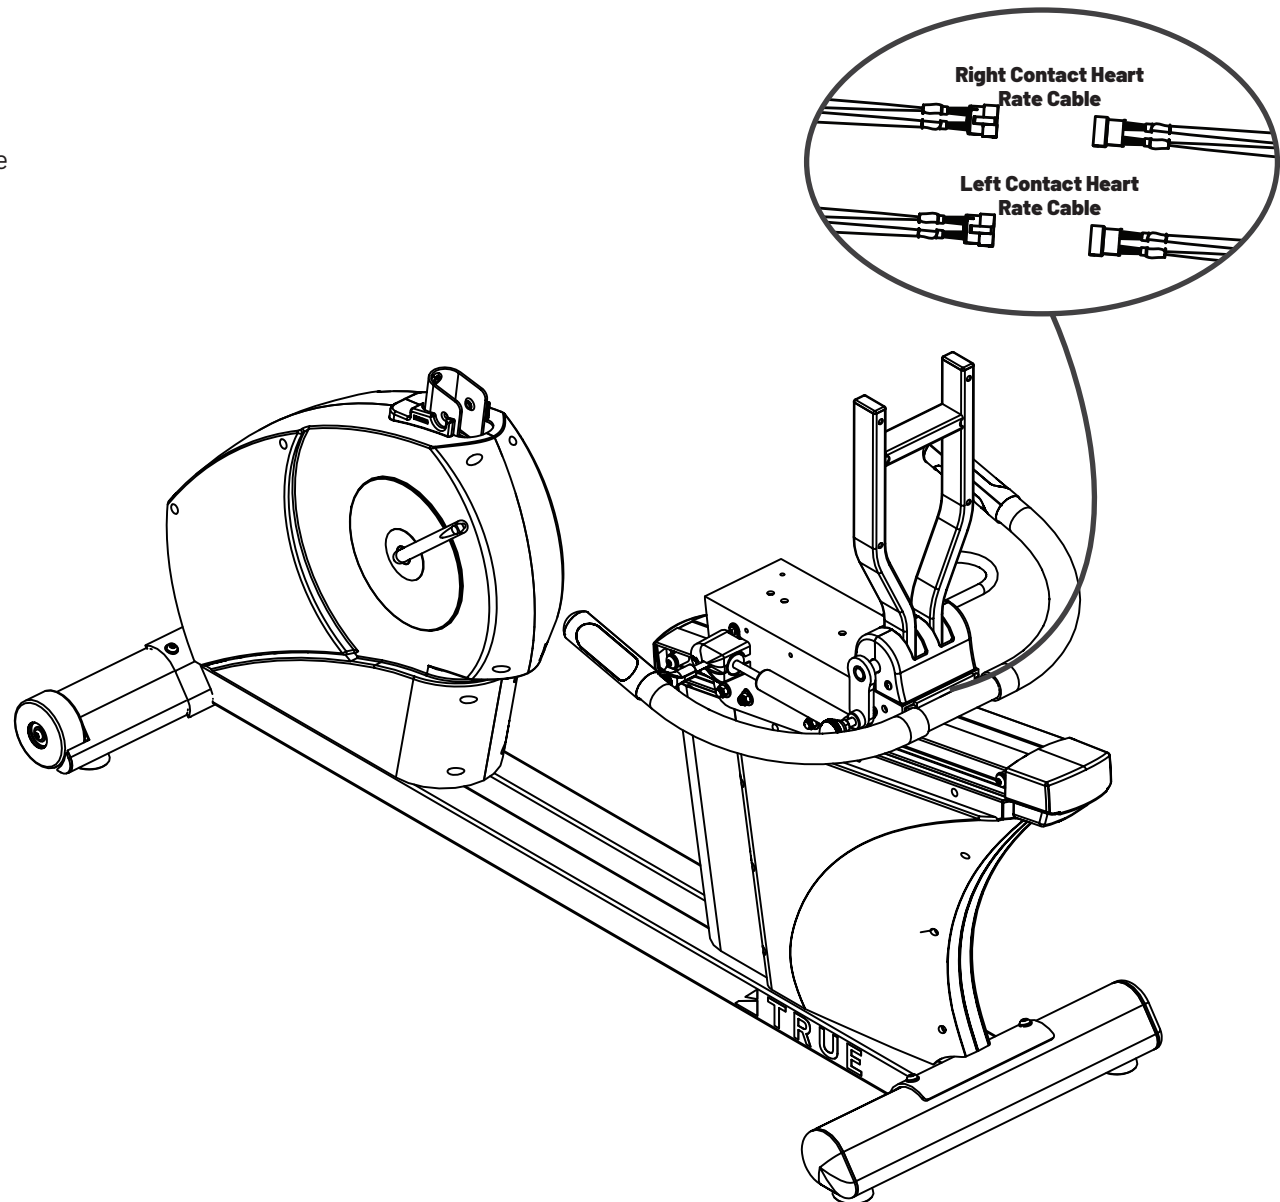


Step 5—Attach Seat Handlebar


| Tools Used in this Step | |
|---------------------------|---|
| 5mm Ball End Allen Wrench |  |

| Parts Used in this Step | | | |
|-------------------------|------------|-----------------------------|-----|
| Item | Part | Description | Qty |
| 1 | RCS0122-35 | SEAT HANDLEBAR ASSEMBLY | 1 |
| 2 | PSB0173 | FHCS, LP, M8 X 15MM (ZP,B0) | 4 |

- A. Slide the seat handlebar bracket into the seat carriage.
- B. Using a 5mm ball end allen wrench, attach the seat handlebar to the seat carriage using 4 hex screws.

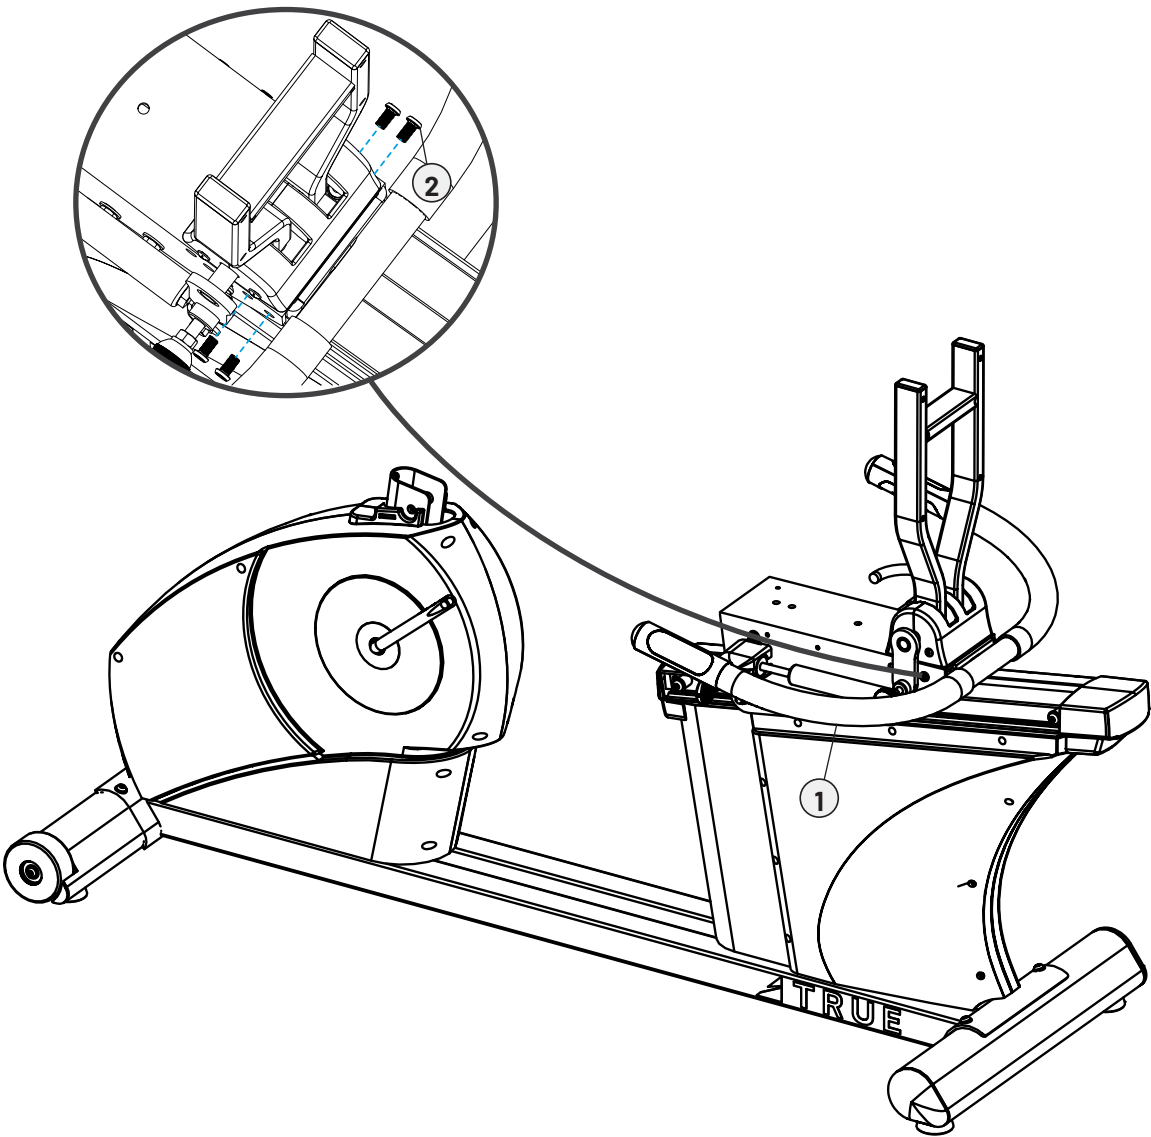


Step 6—Attach Seat Cushion


| Tools Used in this Step | |
|---------------------------|---|
| 4mm Ball End Allen Wrench |  |

Using a 4mm ball end allen wrench, attach the seat cushion to the seat carriage using 4 hex screws, 4 lock washers, and 4 flat washers.

| Parts Used in this Step | | | |
|-------------------------|---------|---|-----|
| Item | Part | Description | Qty |
| 1 | BZR0083 | SUBASSEMBLY, SEAT CUSHION | 1 |
| 2 | RCS0544 | BHCS, M6 X 15MM (ZP,B0) | 4 |
| 3 | RCS0545 | WASHER SPLITLOCK M6 (ZP,B0) | 4 |
| 4 | CS80136 | WASHER, FLAT, M6*OD19*ID6.2*6.2 (BLACK) | 4 |

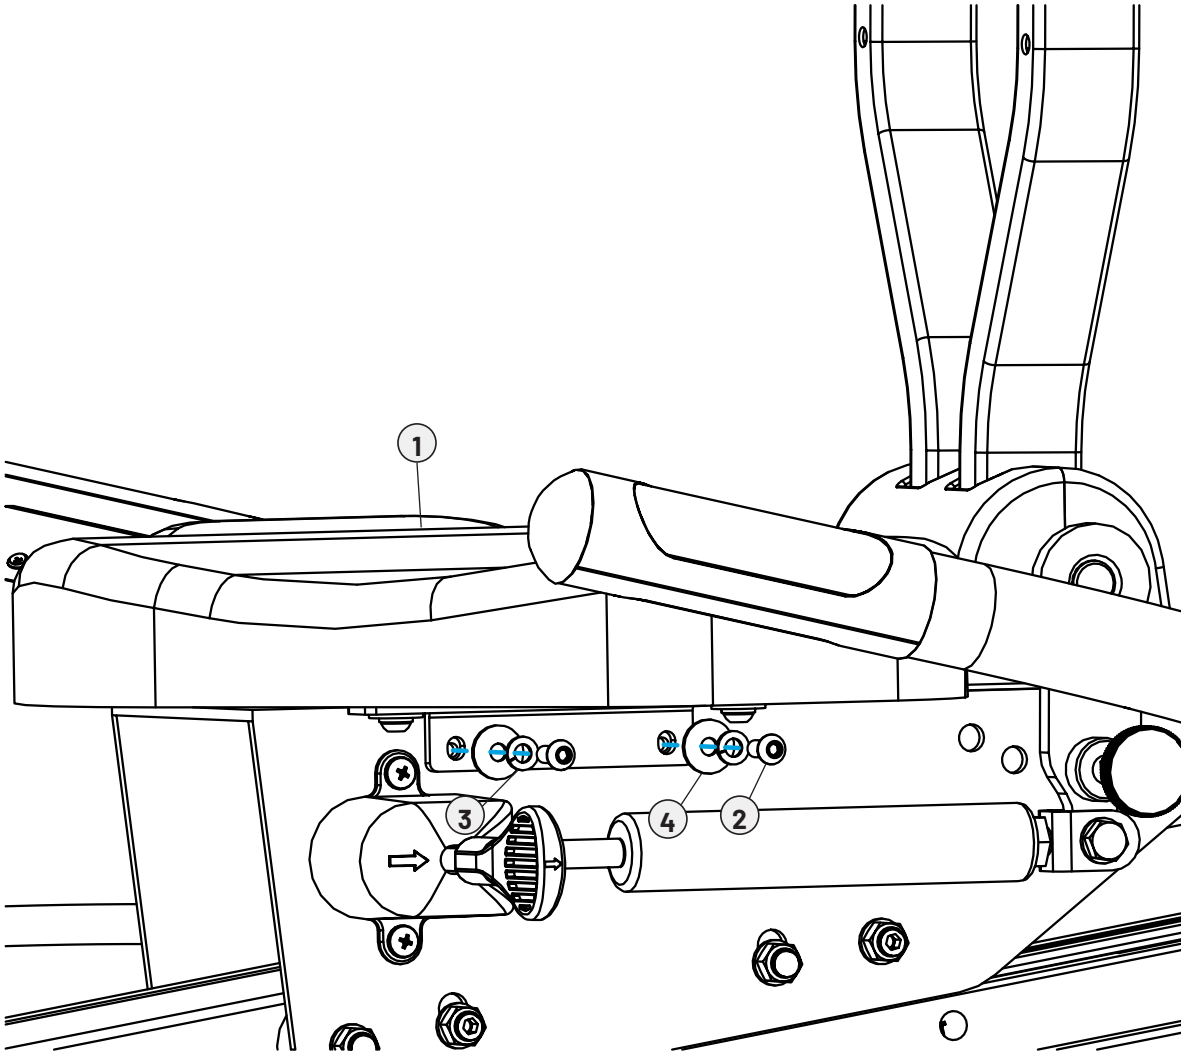


Step 7—Attach Seat Back Pad

| Tools Used in this Step | |
|---------------------------|---|
| 4mm Ball End Allen Wrench |  |

- A. Align the seat back pad with the seat back frame.
- B. Using a 4mm ball end allen wrench, attach the seat back pad to the seat back frame using 4 hex screws and 4 lock washers.


| Parts Used in this Step | | | |
|-------------------------|---------|-----------------------------|-----|
| Item | Part | Description | Qty |
| 1 | BZR0085 | SUBASSEMBLY, SEAT BACK PAD | 1 |
| 2 | PSB0170 | SHCS, M6 X 55, B0 | 4 |
| 3 | RCS0545 | WASHER SPLITLOCK M6 (ZP,B0) | 4 |

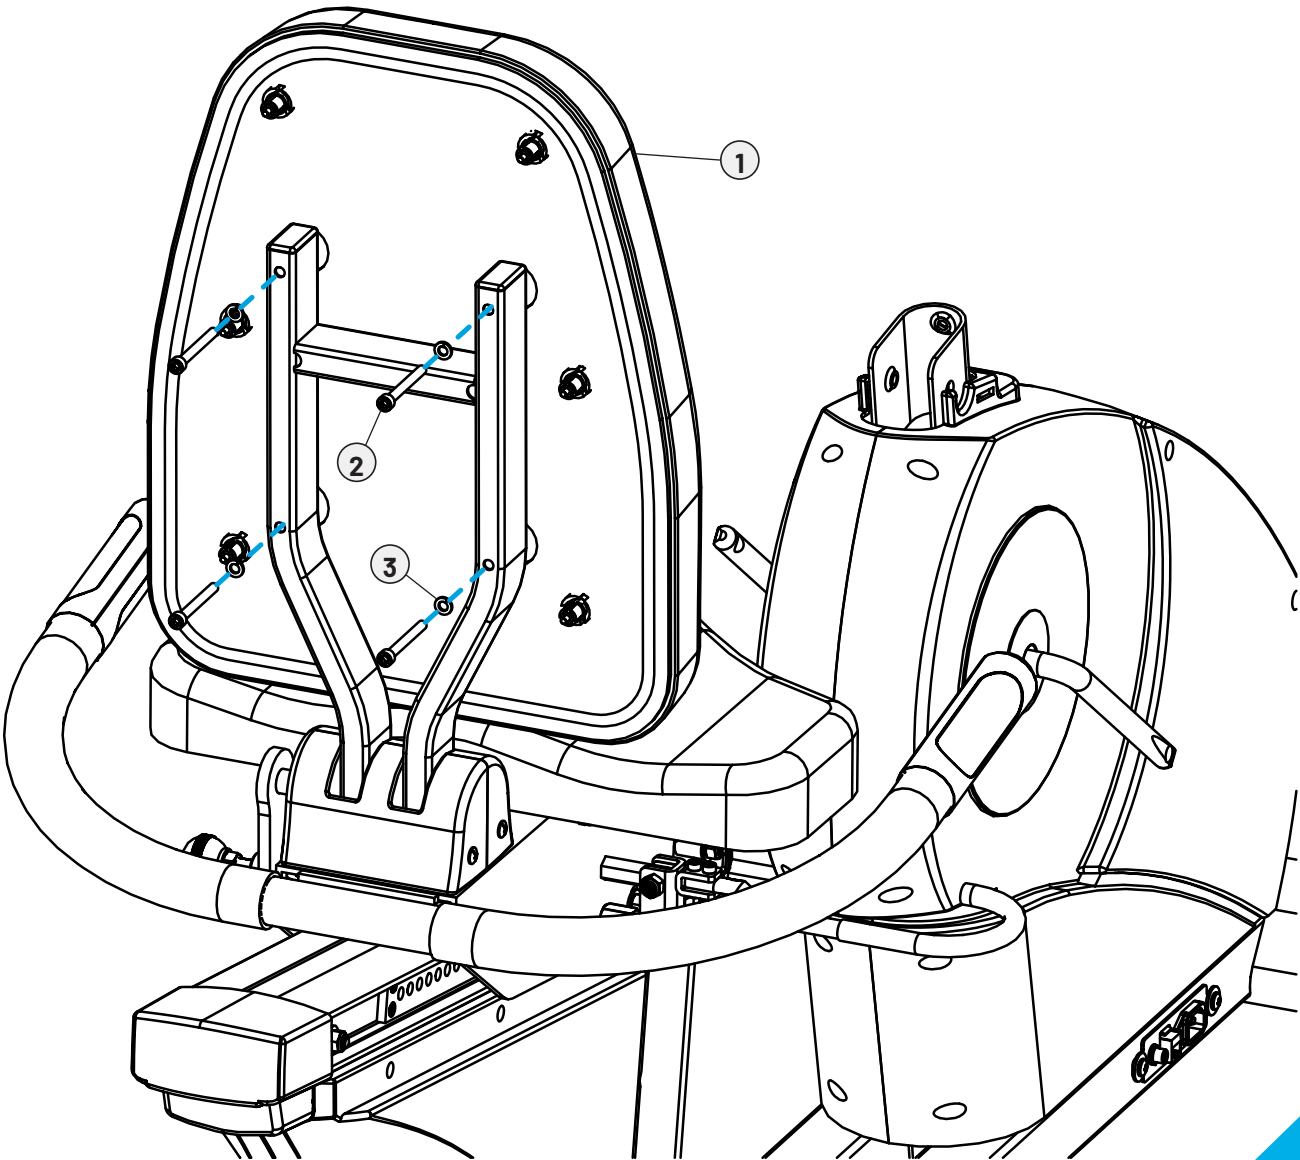

Step 8—Attach Seat Back Cover

| Parts Used in this Step | | | |
|-------------------------|-----------|-----------------|-----|
| Item | Part | Description | Qty |
| 1 | RCS0549BK | RC400 SEAT BACK | 1 |

- A. Align the posts on the seat back cover with the mating features on the seat back pad.
- B. Snap the seat back cover onto the seat back pad.

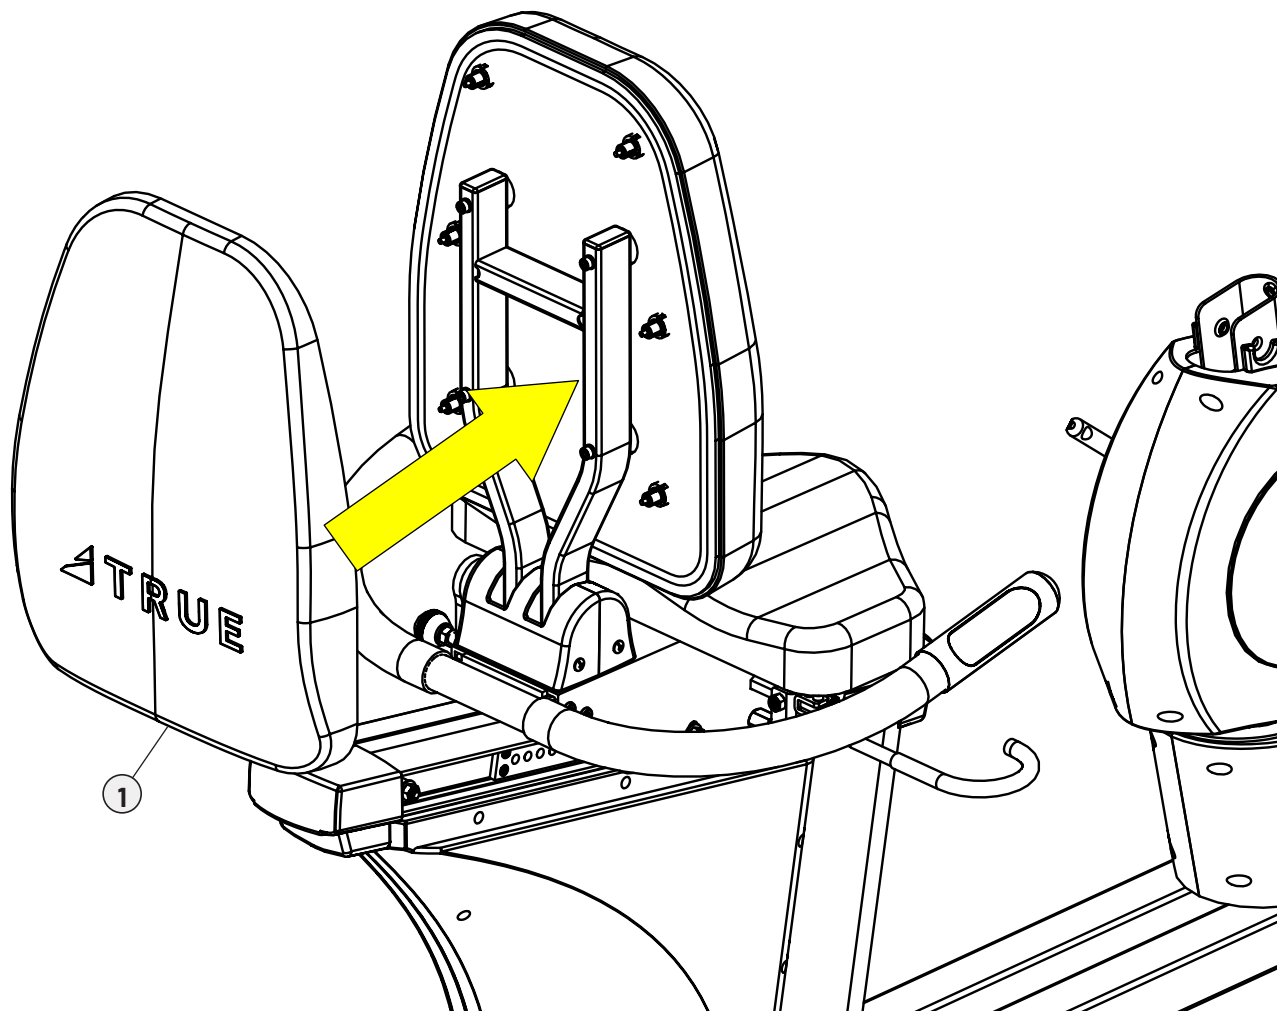


Step 9—Attach Water Bottle Holder



| Tools Used in this Step | |
|-------------------------|---|
| #2 Phillips Screwdriver |  |

- A. Place the water bottle holder top onto the seat handlebar.
- B. Align the water bottle holder bottom with the water bottle holder top component.
- C. Using a #2 Phillips screwdriver, attach the water bottle holder to the handlebar tube using 6 screws.

| Parts Used in this Step | | | |
|-------------------------|---------|---|-----|
| Item | Part | Description | Qty |
| 1 | CS8S011 | KIT, ACCESSORY & BOTTLE HOLDER, BLACK | 1 |
| 2 | PS0114 | SCREW, COARSE PLASTIC M4-0.7 X 16MM BLK | 6 |

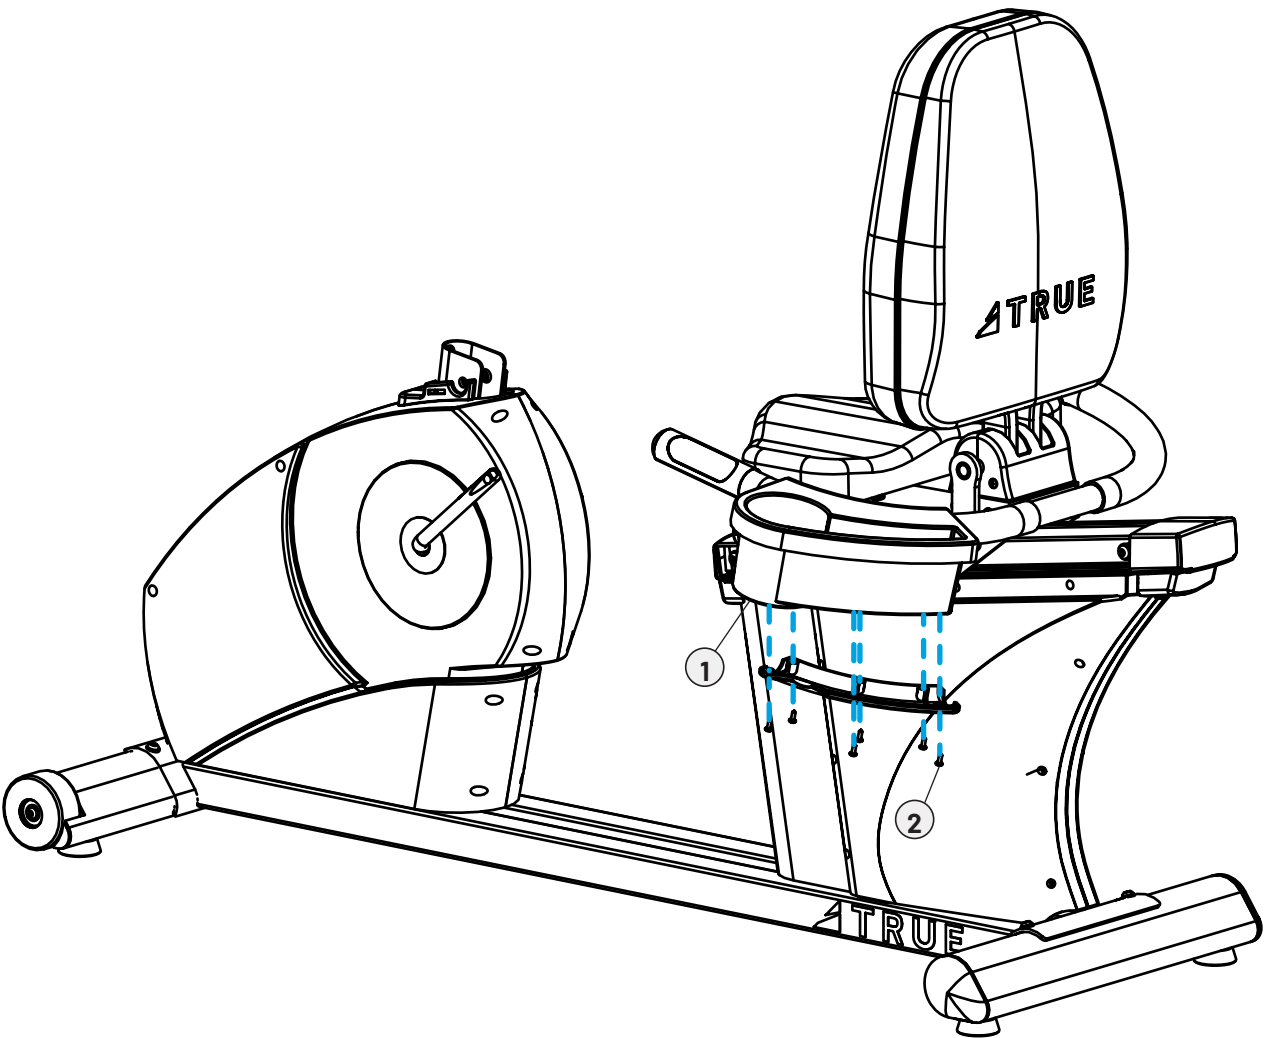


Step 10—Attach Pedals

| Tools Used in this Step | |
|------------------------------|---|
| 15mm/17mm Combination Wrench |  |
| Torque Wrench with 15mm Head |  |

| Parts Used in this Step | | | |
|-------------------------|-----------|-------------------|-----|
| Item | Part | Description | Qty |
| 1 | RCS0352BK | FOOT PEDAL, LEFT | 1 |
| 2 | RCS0353BK | FOOT PEDAL, RIGHT | 1 |

- A. Using the 15mm end of the 15mm/17mm combination wrench, attach each pedal to its corresponding crank.
- B. Securely tighten the pedals to the crank arm assemblies. It is strongly recommended to torque each pedal to 40 N-M (29.5 FT-LB) using an optional but preferred torque wrench with a 15mm head.

NOTE: The left pedal is reverse-threaded (turn counter-clockwise to tighten).

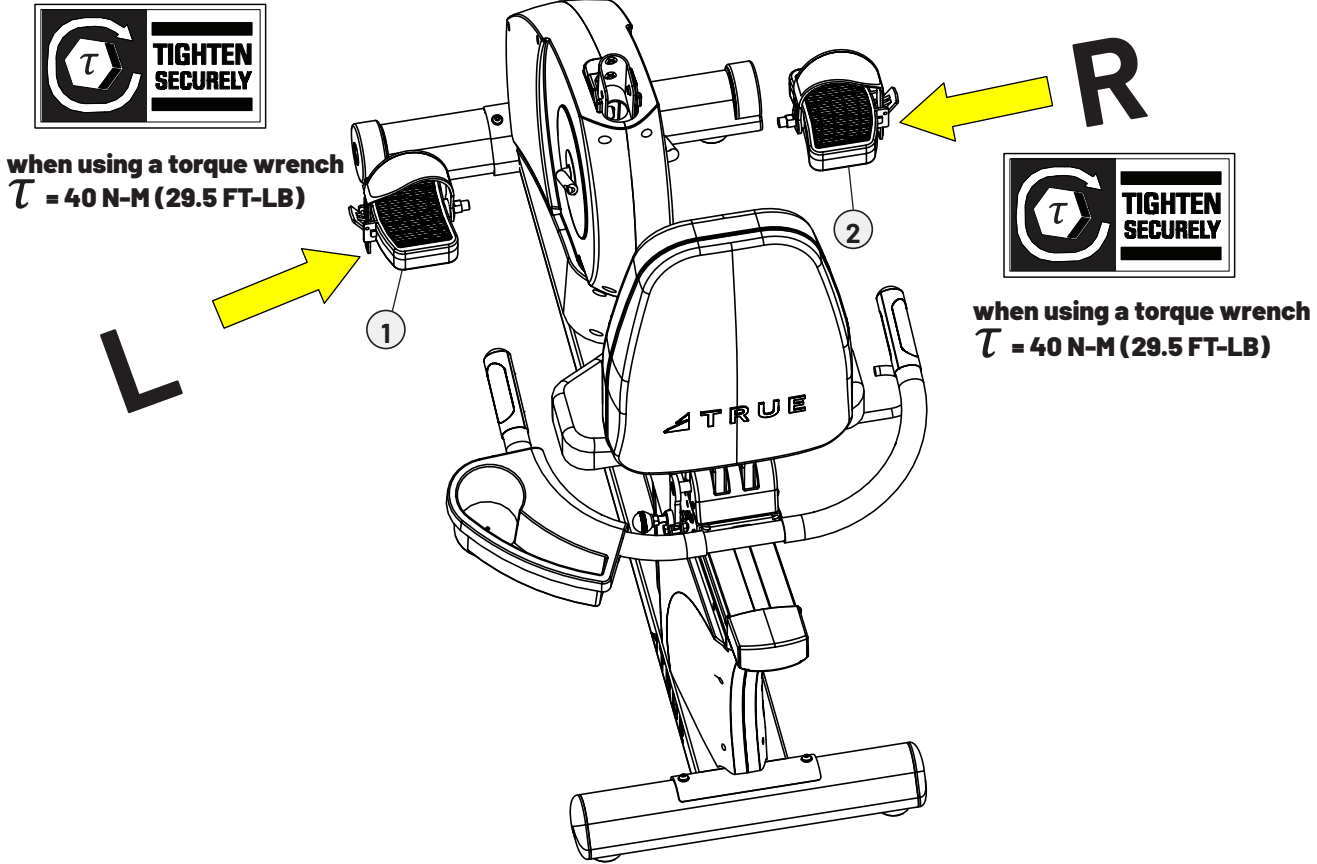


Step 11—Route Cables Up Front Mast


- A. Slide the mast boot and bottom console cover up the console mast.
- B. Pull the cables coming from the front of the bike through the front mast using the provided pull tie.

IMPORTANT! Do NOT pinch the cables.

- C. Remove the pull tie from the cables and discard it.
- D. Install the front mast onto the bike frame.

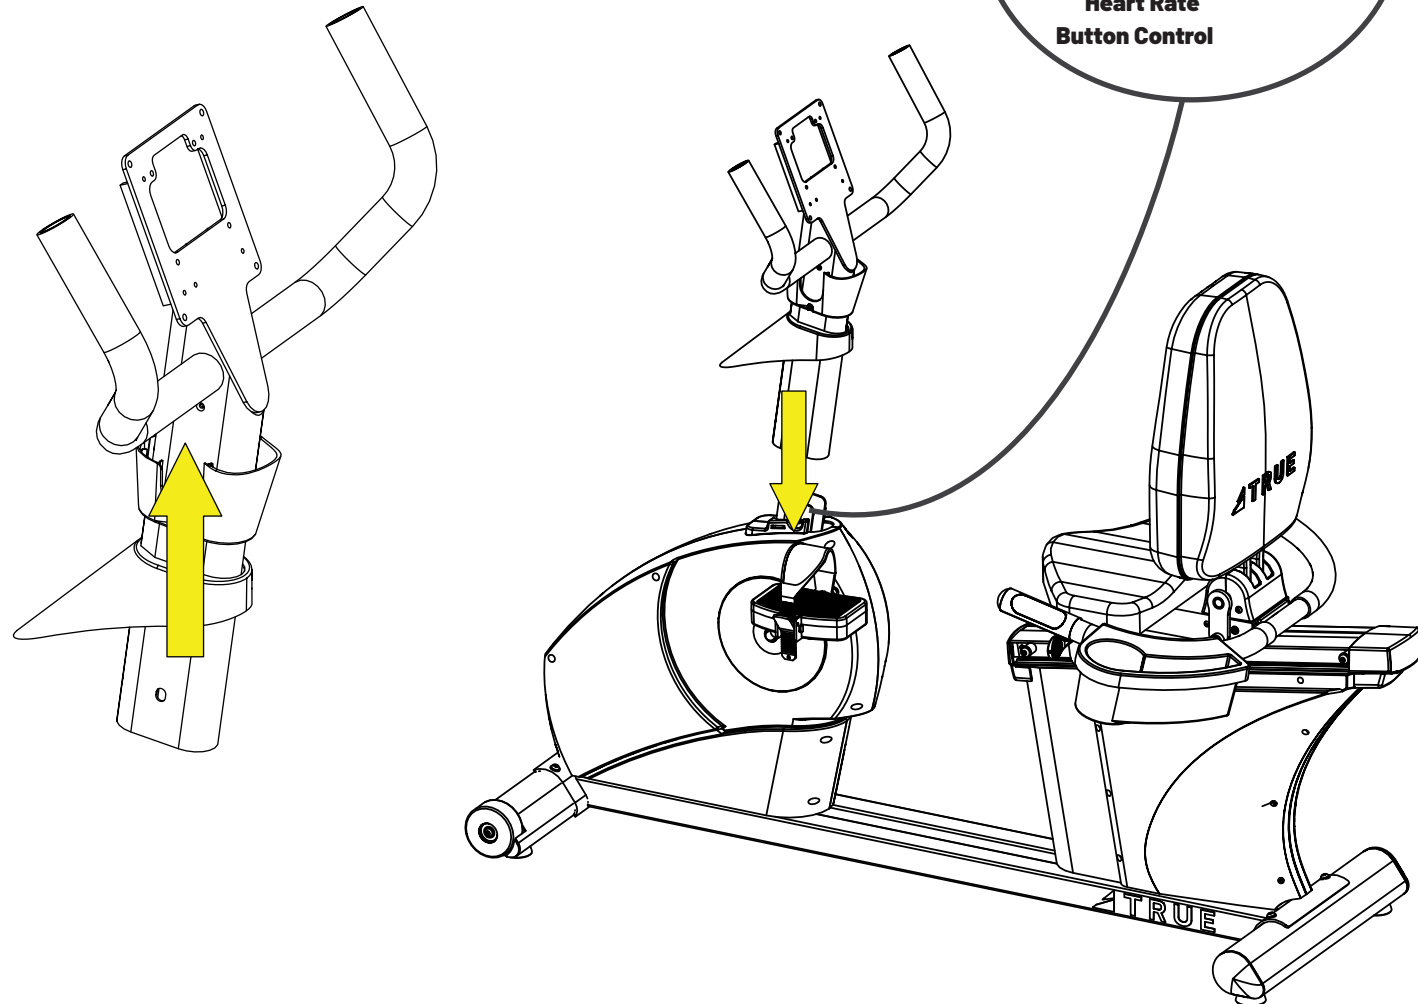

Step 12—Attach Front Mast

| Tools Used in this Step | |
|---------------------------|---|
| 6mm Ball End Allen Wrench |  |

- A. Using a 6mm ball end allen wrench, secure the front mast to the bike frame using 5 hex screws, 5 lock washers, and 5 flat washers.


NOTE: Tighten the side console mast hex screws before the front hex screws.

IMPORTANT! Do NOT pinch the cables.

IMPORTANT! Make sure cables are clear from hex screws to avoid damage.

- B. Slide the mast boot down over the bottom of the front mast tube.

| Parts Used in this Step | | | |
|-------------------------|------------|---------------------------|-----|
| Item | Part | Description | Qty |
| 1 | RCS0060-35 | ASSEMBLY, FRONT MAST | 1 |
| 2 | CBW0006 | SHROUD, FRONT POST BOOT | 1 |
| 3 | RCS0517 | BHCS, M8 X 15MM (ZP,B0) | 4 |
| 4 | CBW0025 | WASHER, LOCK, M8 (BLACK) | 4 |
| 5 | CBW0015 | WASHER, M8X16X1.2T, BLACK | 4 |

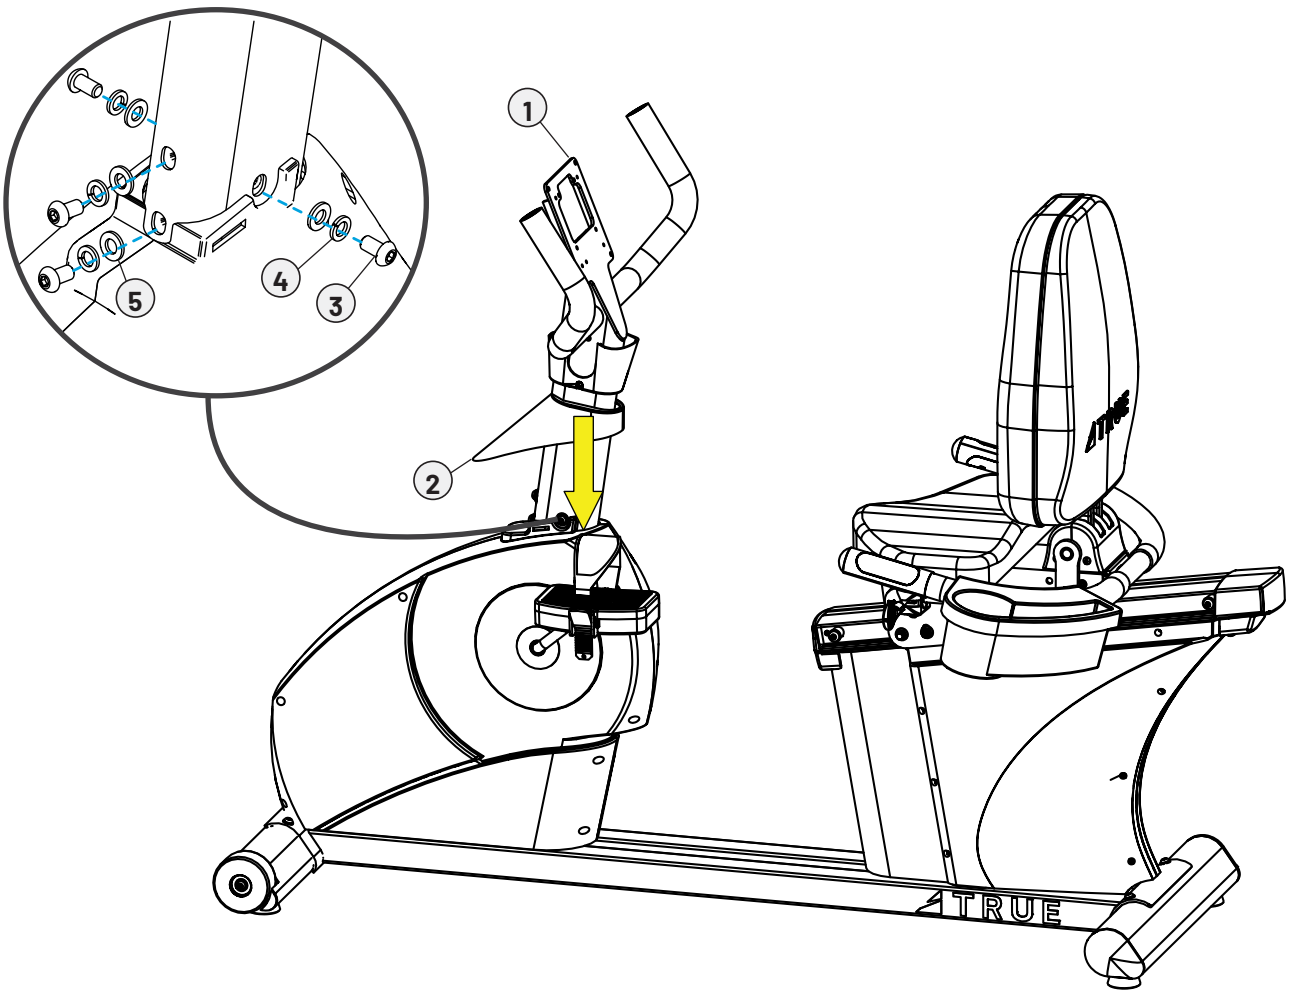

Step 13—Attach Console to Front Mast

| Tools Used in this Step | |
|-------------------------|---|
| #2 Phillips Screwdriver |  |

| Parts Used in this Step | | | |
|-------------------------|----------------|---------------------|-----|
| Item | Part | Description | Qty |
| 1 | N/A | CONSOLE | 1 |
| 2 | RCS0059-35 | FRONT MAST ASSEMBLY | 1 |
| 3 | N80RI360127230 | FERRITE | 1 |

A. If the console has three screws (00567700) preassembled, remove and set aside these screws. They are not used in the installation. Remove and set aside the top two screws (00567800) preassembled to the console. Slightly loosen the bottom two screw but leave them installed. All four screws will be used to secure the console to the mast in step D.


B. Place the ferrite onto the I/O data cable.

C. Connect the console and base cables: network, coaxial, heart rate, button control, I/O data, power, and ground (use the screw on the console mast to attach the ground cable from the console).


NOTE: The LED console does not use the coaxial or network cables. Those cables can be tucked back down the console mast.

Ensure all cables are routed inside the console mast to avoid pinching cables.

D. Using a #2 Phillips screwdriver, secure the console to the console mast using the four screws (00567800).

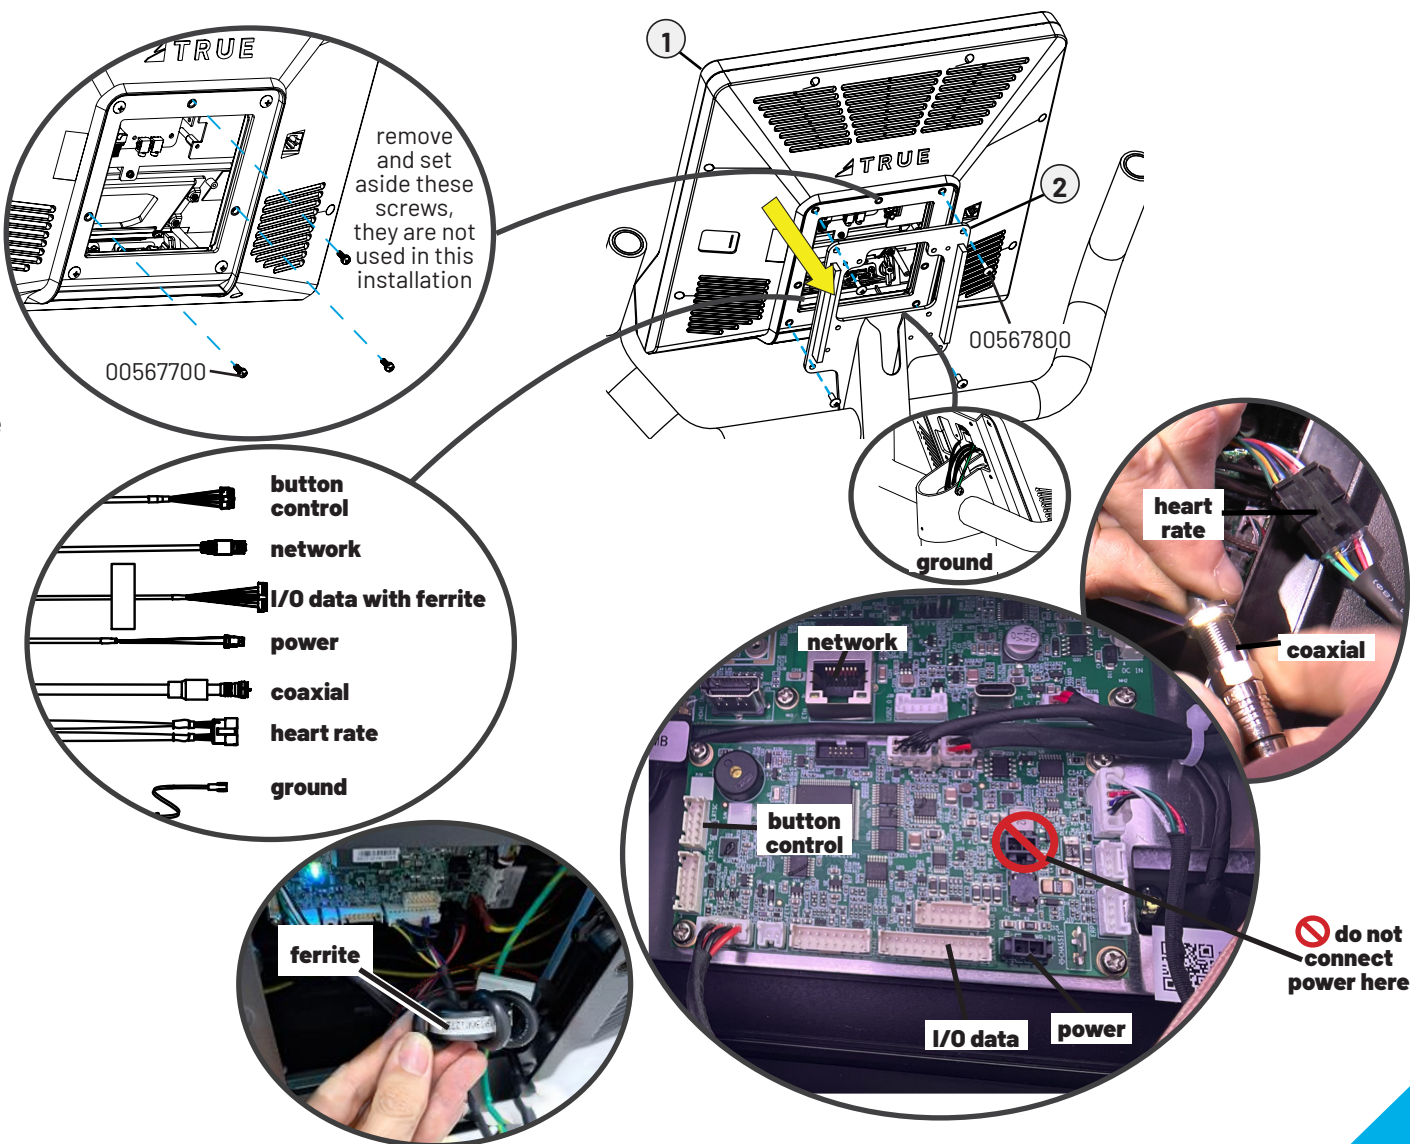


Step 14—Attach Bottom and Rear Console Covers



| Tools Used in this Step | |
|-------------------------|---|
| #2 Phillips Screwdriver |  |

| Parts Used in this Step | | | |
|-------------------------|-----------|---------------------------------|-----|
| Item | Part | Description | Qty |
| 1 | RCS0072BK | SUBASSEMBLY, REAR CONSOLE COVER | 1 |
| 2 | RCS0064BK | LOWER CONSOLE COVER ASSEMBLY | 1 |
| 3 | CS80131 | SCREW M5X15L (BLACK) | 6 |

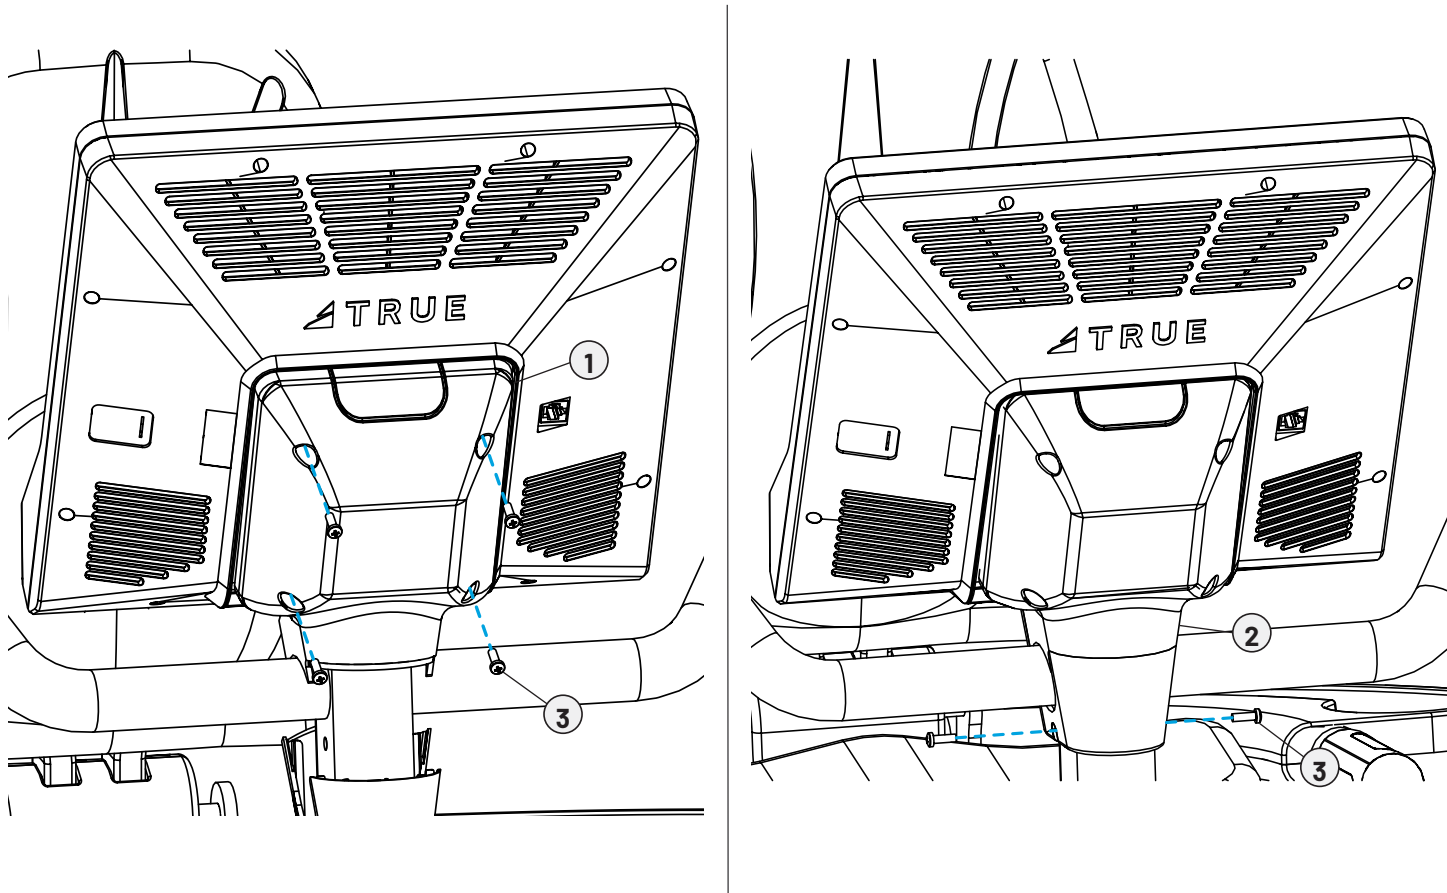- A. Using a #2 Phillips screwdriver, attach the rear console cover to the front mast using 4 screws.
- B. Slide the bottom console cover up the front mast until it meets with the rear console cover.
- C. Using a #2 Phillips screwdriver, attach the bottom console cover to the front mast using the remaining 2 screws.




Optional Step 15-Install Auxiliary Power Supply

| Tools Used in this Step | |
|-------------------------|---|
| Wire Cutters |  |
| #2 Phillips Screwdriver |  |

NOTE: Power warnings, grounding instructions, and power requirements are only applicable when this product is being used with the optional power supply. Non-LED consoles require the optional power supply.

- A. Using a #2 Phillips screwdriver, remove the rear left shroud using 9 screws.
- B. Using wire cutters, cut and remove the


| Parts Used in this Step | | | |
|-------------------------|----------|--------------------------------|-----|
| Item | Part | Description | Qty |
| 1 | CB0157BK | KIT, SHROUD, REAR LEFT, BLACK | 1 |
| 2 | RT0138 | BHCS, M5-0.8 X 10MM | 6 |
| 3 | RCS0516 | SCREW TYPE A M4 X 20MM (ZP,B0) | 3 |
| 4 | 00560402 | POWER CORD, FUYANG | 1 |
| 5 | 00595500 | POWER SUPPLY, FUYANG 12V 6A | 1 |

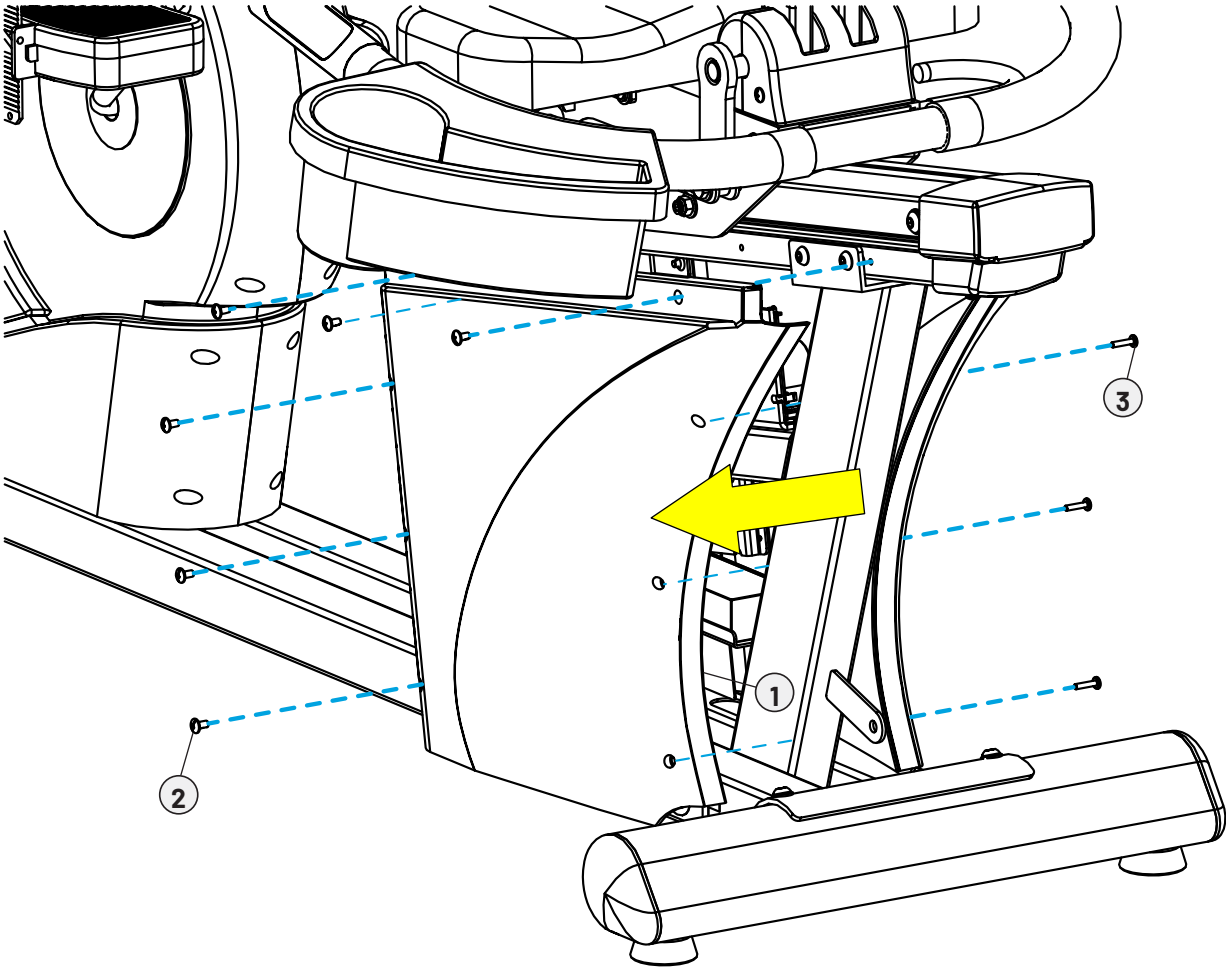

Optional Step 15-Install Auxiliary Power Supply Continued


zip tie holding the AC power cord in place.

- C. Connect the AC power cord to the power supply.
- D. Connect the DC power cable to the power supply. Secure the power supply to the square frame using 2 zip ties.
- E. Using a #2 Phillips screwdriver,

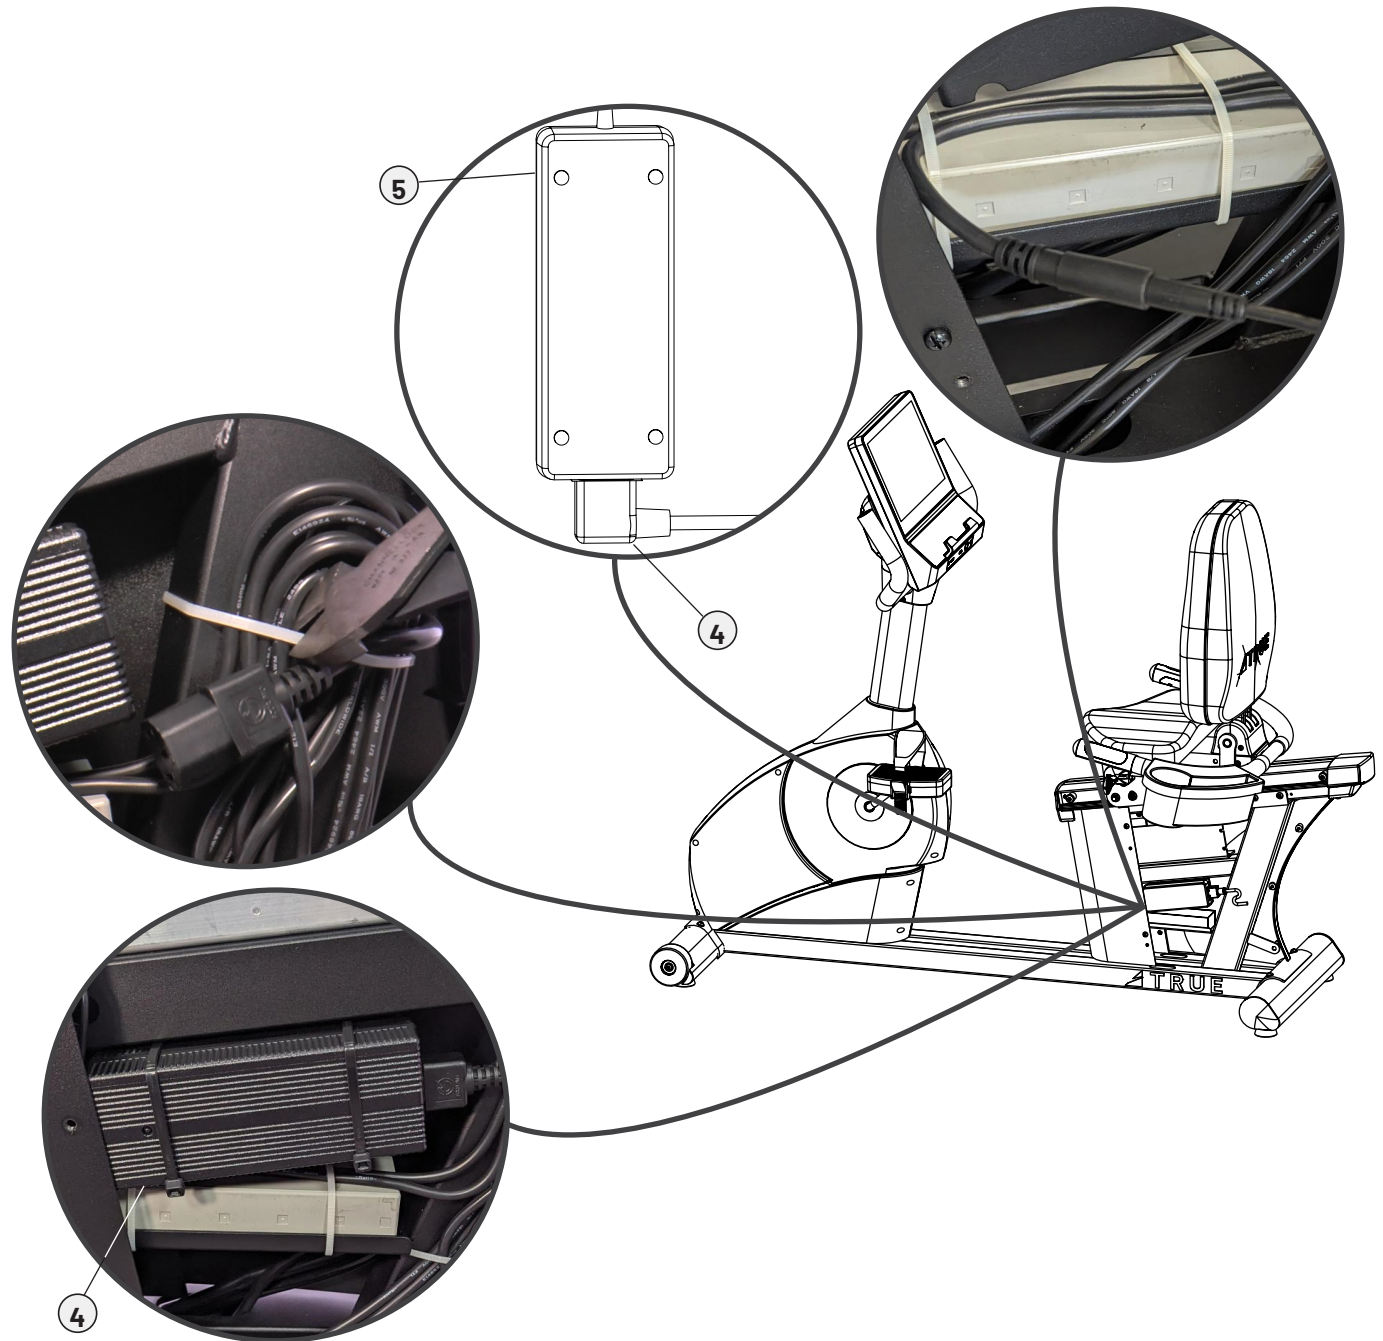

Optional Step 15-Install Auxiliary Power Supply Continued

reattach the rear left shroud to the bike frame using the 9 screws you removed previously.

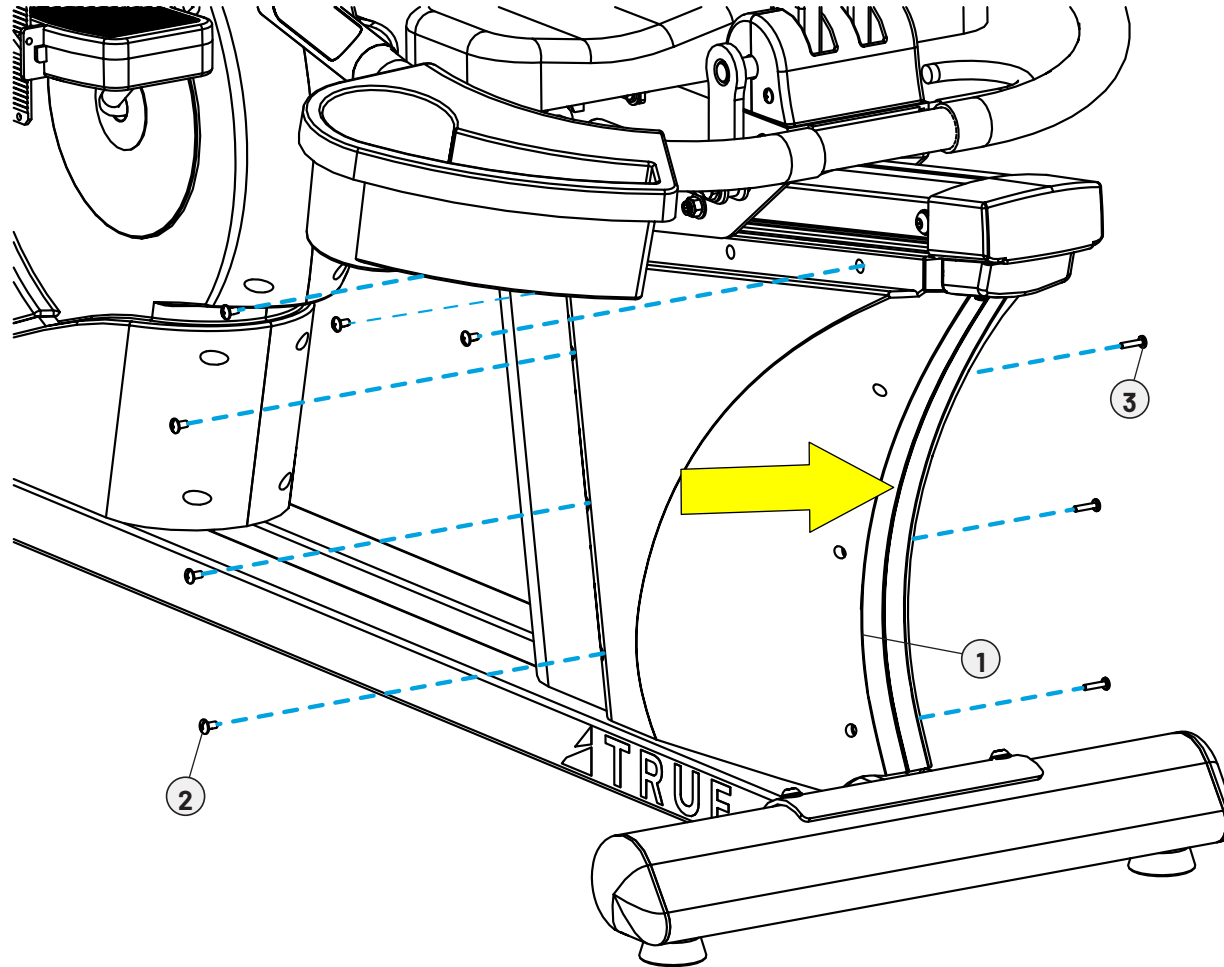

Step 16-Level the Machine

Tools Used in this Step


13mm Wrench



- A. Using a 13mm open end wrench, adjust all four leveling feet until they contact the floor.

IMPORTANT! Do not adjust the leveling feet to such a height that they detach or unscrew from the machine.

- B. Verify all four lock nuts are securely tightened and flush against the bottom of the frame.

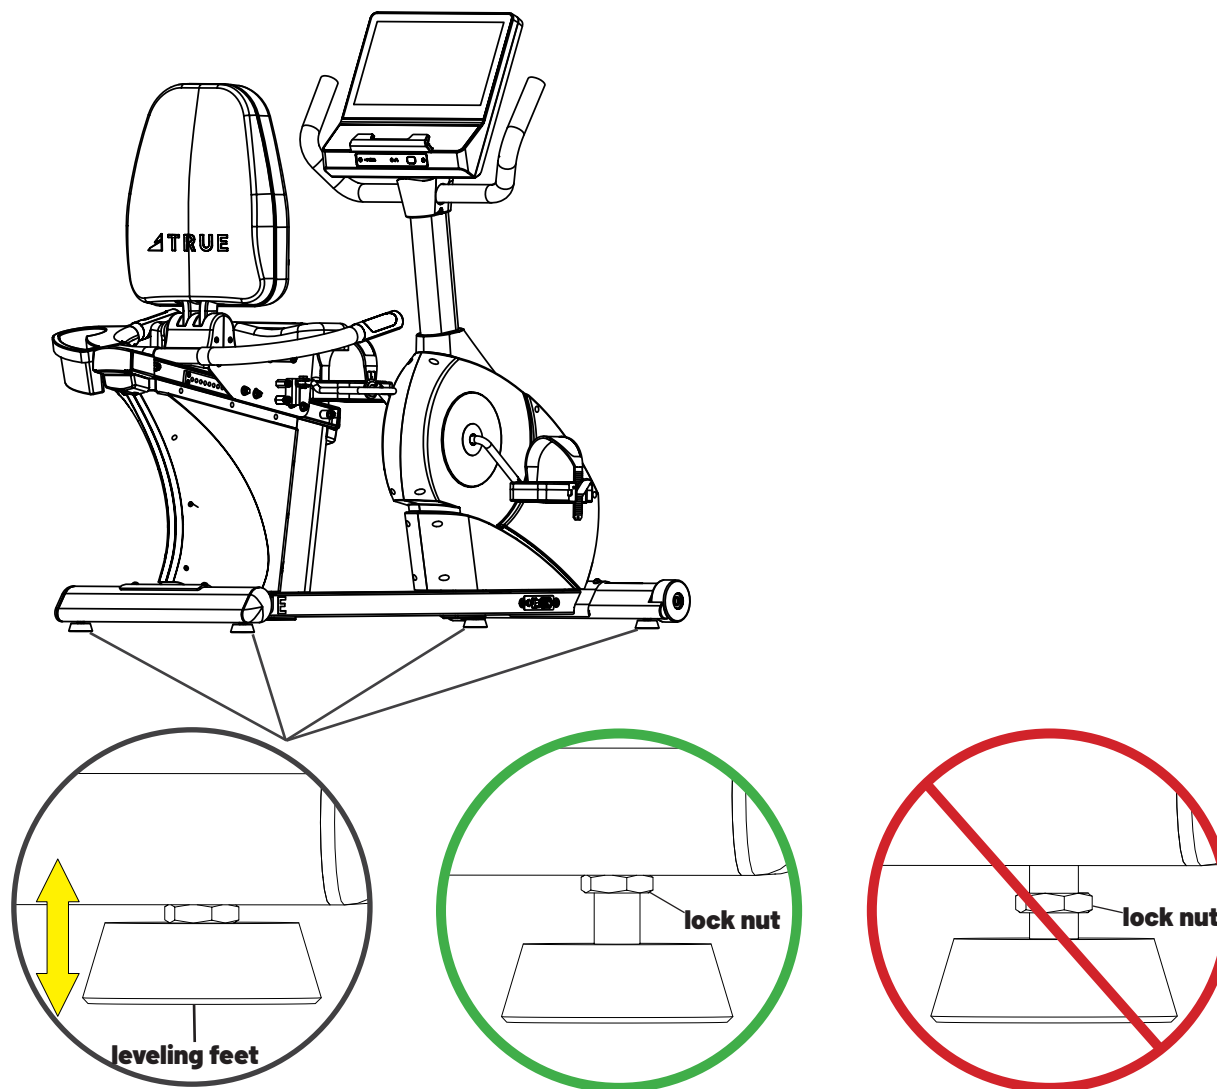


Optional Step 17-Attach Power Cord

| Parts Used in this Step | | | |
|-------------------------|------------|-----------------------------------|-----|
| Item | Part | Description | Qty |
| 1 | RCS0566-35 | SUBASSY, POWER INLET PANEL, RC400 | 1 |
| 2 | 00560402 | POWER CORD, 110V | 1 |
| 3 | 00687000 | POWER CORD, 220V | 1 |

NOTE: Power warnings, grounding instructions, and power requirements are only applicable when this product is being used with the optional power supply. Non-LED consoles require the optional power supply.

Insert the appropriate power cord into the corresponding power inlet.

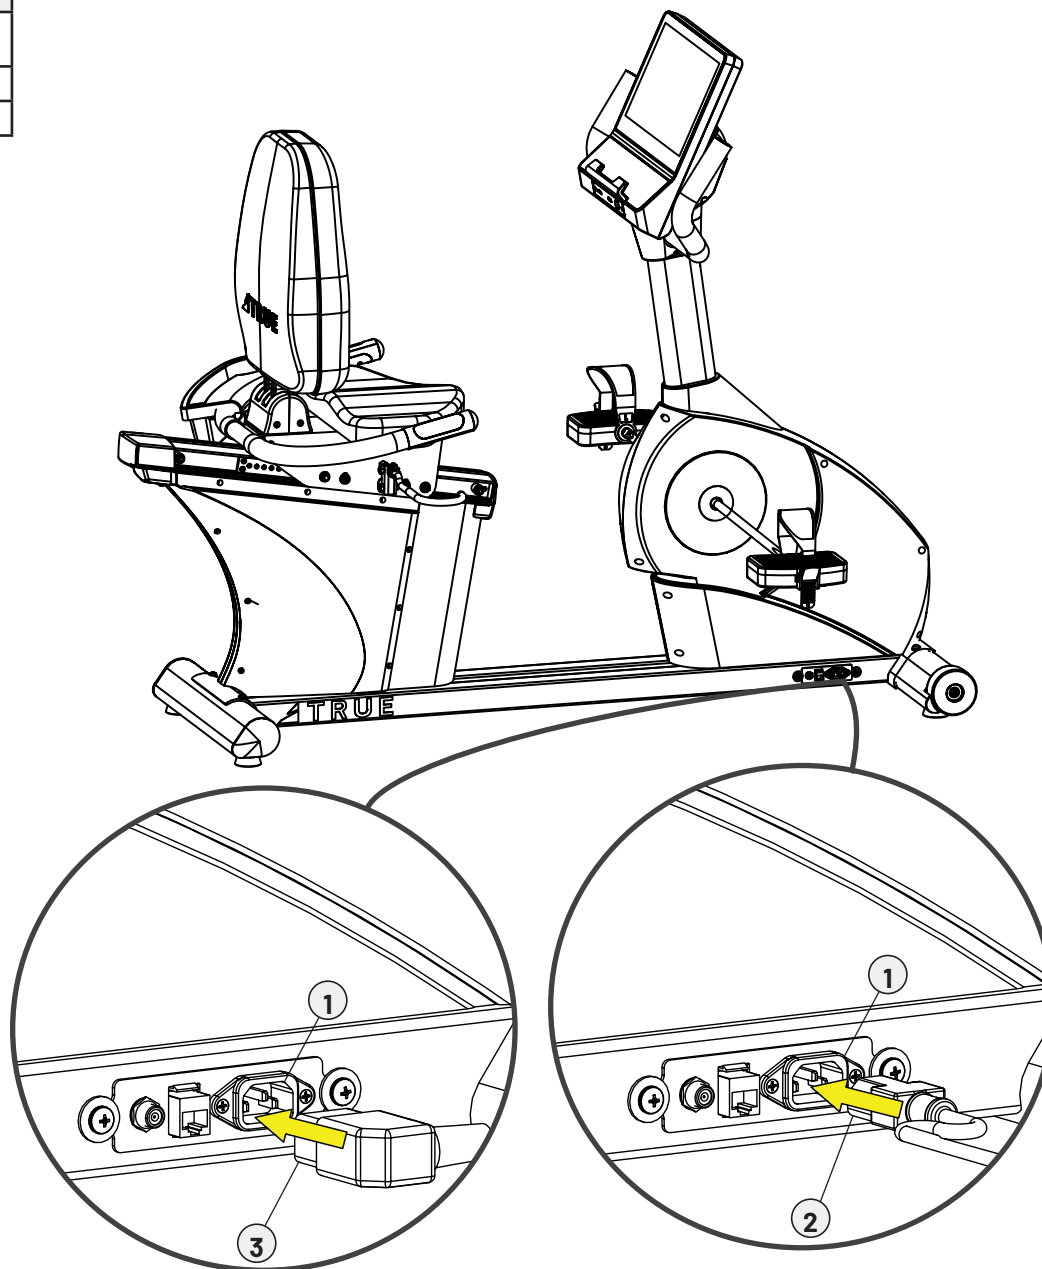

IMPORTANT STEP—DO NOT SKIP!

Step 18—Configure the Console with the Base

⚠ CAUTION: AVOID DAMAGE TO THE MACHINE!
ALWAYS VERIFY THE CORRECT BASE MODEL HAS BEEN CONFIGURED TO THE CONSOLE.

THE CORRECT BASE MODEL FOR THIS MACHINE IS LAUNCH RECUMBENT BIKE

Please follow the instructions included with your console for important configuration steps.

Please contact product support right away if you run into issues setting up the machine:
800.883.8783 | service@truefitness.com | Monday–Friday

PRODUCT FEATURES

BASE OVERVIEW

A. Console

Allows the user to set up a workout program and control the bike during a workout.

B. Handlebar

A place for users to put their hands during a workout and helps provide balance.

C. Quick Access Keys

Allows the user to make fast, convenient adjustments to the workout intensity.

D. Contact Heart Rate Pads

Allows the user to check their heart rate without wearing a wireless chest strap.

E. Seat

A place for users to sit during a workout.

F. Seat Adjustment Handle

Allows adjustment to the vertical position of the seat to fit the size of the user.

G. Bottle Holder

Holds average size drink bottles for convenient use during a workout.

H. Pedals

Moving part of the bike that provides resistance to the lower body during a workout.

I. Leveling Feet

An adjustable system used to aid in the leveling of the bike.

J. Coaxial Port

Delivers television signal to the unit.

K. Ethernet Port

Used to provide a network connection for compatible console options.

L. Power Supply Inlet


Delivers power from the wall outlet to the bike.




NOTE: Power warnings, grounding instructions, and power requirements are only applicable when this product is being used with the optional power supply. Non-LED consoles require the optional power supply.

CONSOLE OVERVIEW

UNITE TOUCHSCREENS (16" SHOWN)

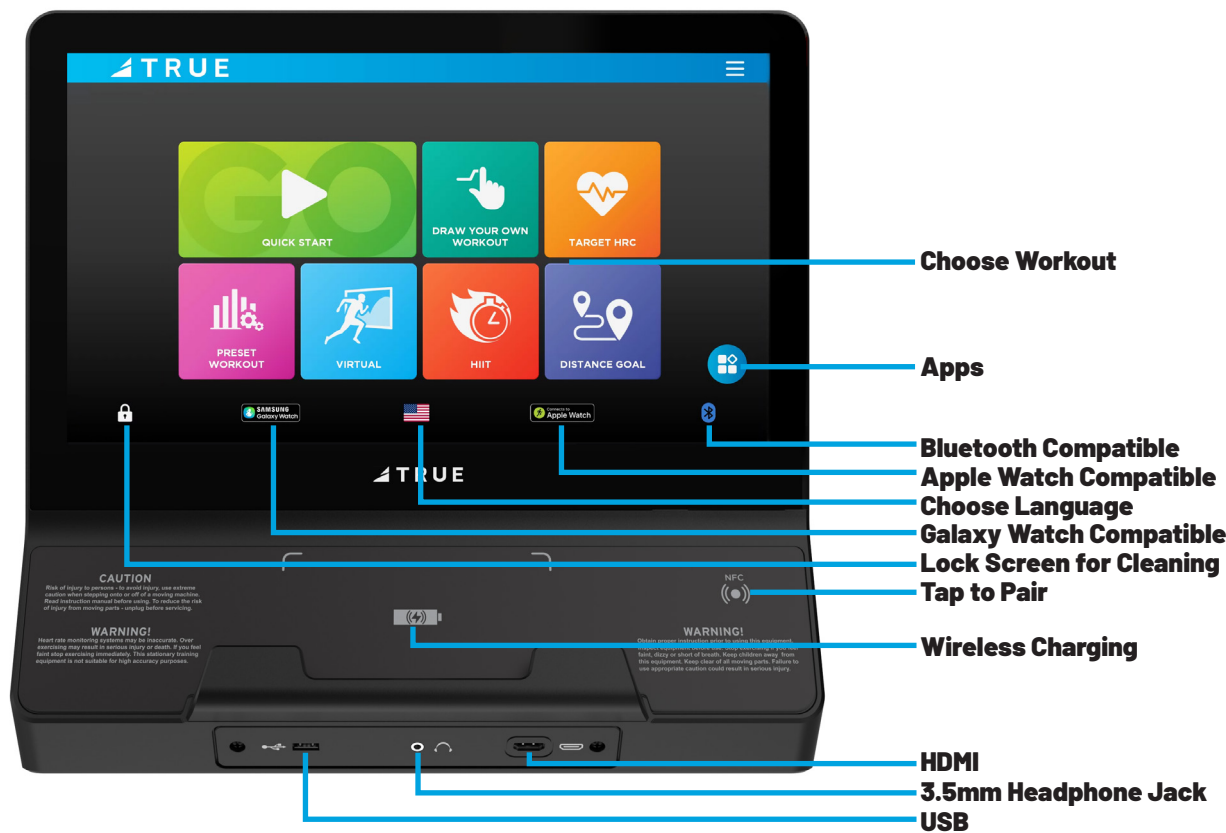

UNITE LED

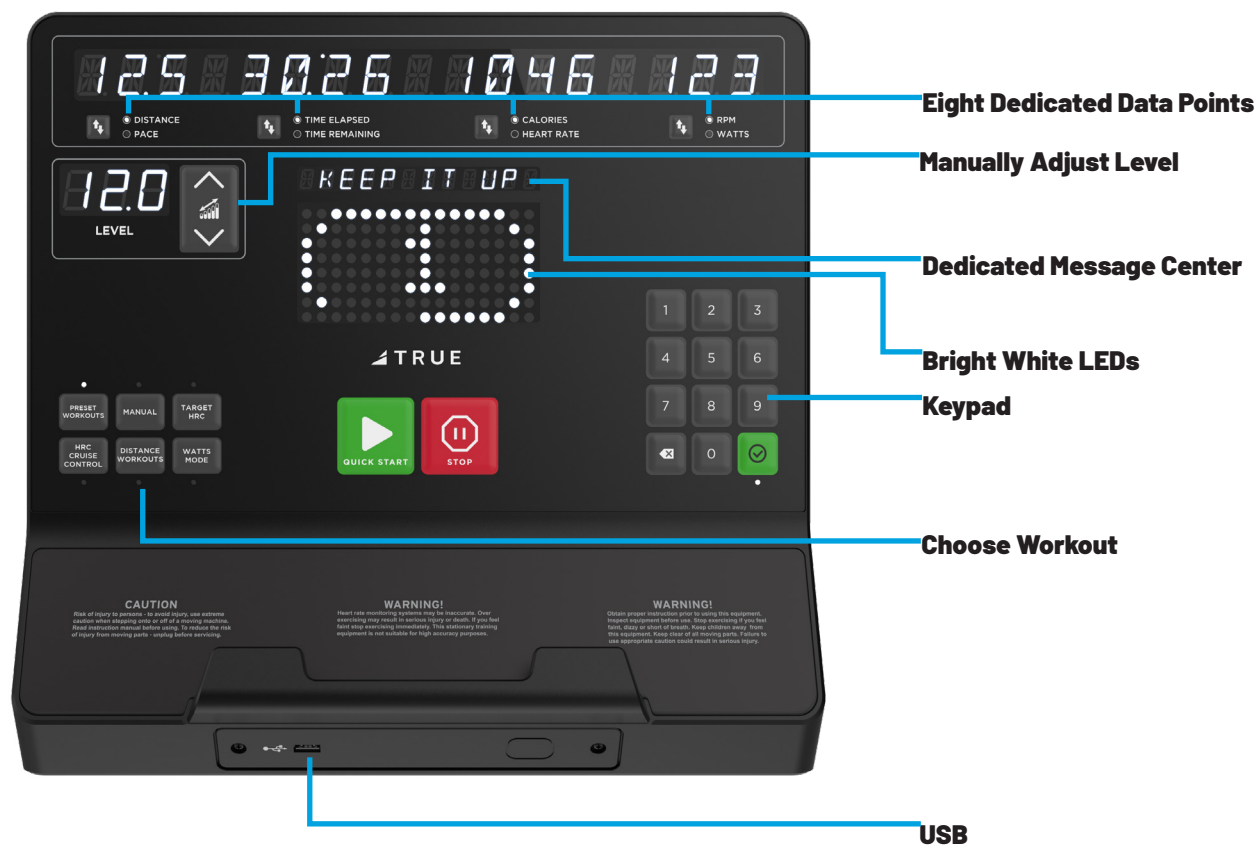

CARE AND MAINTENANCE

It is important to perform the minor maintenance tasks described in this section. Failure to maintain the bike as described here could void the TRUE Fitness Warranty. To reduce the risk of electrical shock, always unplug the unit from its power source before cleaning or performing any maintenance tasks.

INSPECTION

TRUE is not responsible for performing or scheduling regular maintenance or inspections. Users should inspect the bike daily. Look and listen for slipping belts, loose fasteners, unusual noises, worn or frayed power cords, and any other indications that the equipment may be in need of service. If any of these are noticed, obtain service. Maintain hazardous and wearable parts regularly to ensure the safety. Pay attention to which parts wear easily. Do not attempt to use the bike until proper service has been performed or damaged parts have been replaced.

IMPORTANT!

If you determine that the bike needs service, make sure that the bike cannot be used inadvertently. Turn the unit off, and then unplug the power cord from its power source. Make sure other users know that the bike needs service.

CLEANING THE EQUIPMENT

AFTER EACH USE

- Use GymWipes™ Antibacterial wipes or spray a solution of 30 parts water to 1 part mild detergent to dampen a soft cloth and wipe all exposed surfaces.
- Use a LCD/screen cleaner or spray a solution of 1 part 91% isopropyl alcohol and 1 part water to dampen a soft cloth and wipe the surface of the console. This helps remove fingerprints, dust, and dirt.

WEEKLY

- **Vacuum**—Use a vacuum to remove any dust or dirt that might have accumulated under or around the bike.

⚠ CAUTION:

Do not use any acidic cleaners. Doing so will weaken the paint or powder coatings and may void the TRUE Warranty. Never pour water or spray liquids on any part of the bike. Allow the bike to dry completely before using. Frequently vacuum the floor underneath the unit to prevent the accumulation of dust and dirt, which can affect the smooth operation of the unit.

LUBRICATION

Remove the pedals from the crank quarterly and lubricate the threads that attach the pedals to the cranks to prevent corrosion.

NOTE: The user's left side pedal is reverse threaded.

LEVELING THE MACHINE

⚠ CAUTION:


Prevent potential damage to the machine and injury to the user. This unit is equipped with four leveling feet. Make sure that the bike is level at all times. If the bike is placed on a uneven surface, adjusting the leveling feet can help, but may not completely compensate for extremely uneven surfaces. Bikes that are not level can cause damage to the machine and possible injuries for the user.

Once the machine has been moved to it's designated location:

- A. Using a 13mm open end wrench, adjust all four leveling feet until they contact the floor.




IMPORTANT! Do not adjust the leveling feet to such a height that they detach or unscrew from the machine.

- B. Verify all four lock nuts are securely tightened and flush against the bottom of the frame.

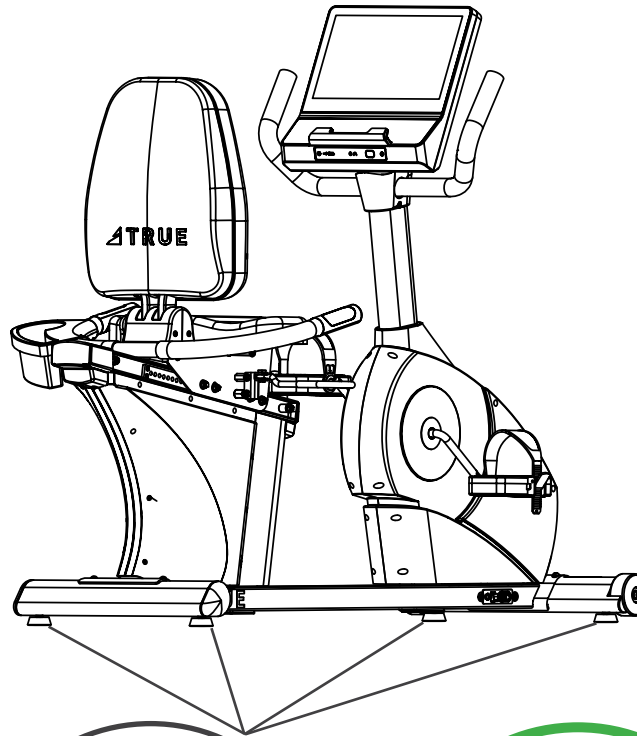

Tools Used in this Step

13mm Wrench

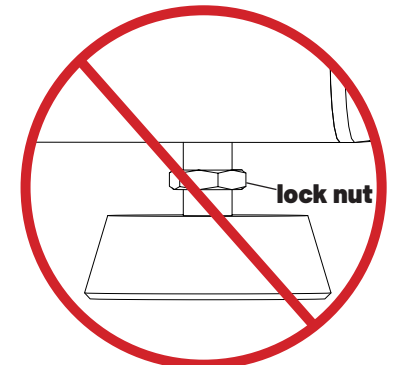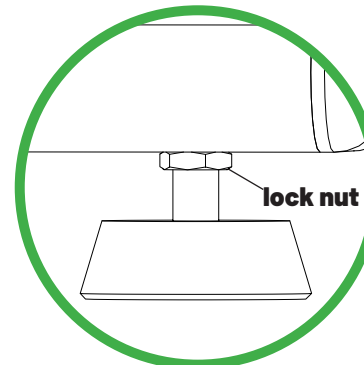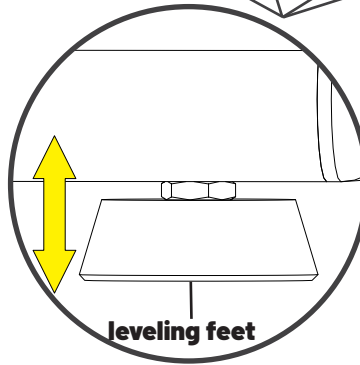

PREVENTATIVE MAINTENANCE

TRUE recommends that quarterly scheduled maintenance be performed by a qualified service technician. Please contact your dealer or visit www.truefitness.com to contact a local TRUE authorized service technician.

IMPORTANT! Use only TRUE Fitness certified service providers. Using non-authorized service providers could void the TRUE Warranty.

| Frequency | Tasks |
|-----------|---|
| Daily | <ul style="list-style-type: none">• Look and listen for loose fasteners, unusual noises, worn or frayed cables, and any other indications that the equipment may be in need of service.• Verify the pedals are at the correct torque specification and securely fastened.• Use GymWipes™ Antibacterial wipes or spray a solution of 30 parts water to 1 part mild detergent to dampen a soft cloth and wipe all exposed surfaces.• Use a LCD/screen cleaner or spray a solution of 1 part 91% isopropyl alcohol and 1 part water to dampen a soft cloth and wipe the surface of the console. This helps remove fingerprints, dust, and dirt. |
| Weekly | <ul style="list-style-type: none">• Vacuum any dust or dirt that might have accumulated under or around the bike. |
| Quarterly | <ul style="list-style-type: none">• Record time, distance, and hours from the console.• Check error log in console.• Remove shroud covers and vacuum any debris out of the speed sensor, control electronics and moving parts.• Move and vacuum underneath the machine.• Inspect all fasteners.• Inspect all electrical connections.• Inspect components for abnormal or premature wear. |

LONG TERM STORAGE

When the bike is not in use for any length of time, turn it off. Make sure that the power cord is unplugged from the power source and is positioned so that it will not become damaged or interfere with people or other equipment.

CLEANING AND STORING THE CHEST STRAP

Clean the chest strap using a sponge or soft cloth dampened in mild soap and water. Dry the surface thoroughly with a clean towel. Store the chest strap in a place where it remains free of dust and dirt. Be sure to protect the chest strap from extreme temperatures. Do not store it in a place that may be exposed to temperatures below 32° F (0° C).

ADDITIONAL INFORMATION



TROUBLESHOOTING

This troubleshooting information is intended to assist in diagnostics only and is not all inclusive. Technical specifications, error codes, and programming are subject to change without notice. TRUE accepts no liability for any damage or loss suffered by persons whom rely wholly or in part on any description or statement contained within this manual. Please visit www.truefitness.com to obtain the most recent version of all manuals and contact TRUE product support (800-883-8783) for assistance with troubleshooting and diagnostics.

| Malfunction | Possible Cause | Corrective Action |
|--------------------------------|---|---|
| No Power | Unit turned off | Verify the On/Off switch is at the ON position |
| | Damaged power cord | Replace power cord |
| | Power cord not fully seated in socket | Inspect power connection at the unit and outlet |
| | No power at outlet | Using a voltmeter verify power at outlet |
| | Tripped circuit breaker | The location of the circuit breaker is next to the On/Off switch. Verify the circuit breaker is not open. If the breaker is open reset. |
| Unit resets or pauses randomly | Damaged power cord | Replace power cord |
| | Power cord not fully seated in socket | Inspect power connection at the unit and outlet |
| | Safety e-stop key not fully engaged | Re-engage the safety/e-stop key to the console |
| | Nucleus board may be damaged | Contact TRUE product support |
| | Insufficient power | Verify output voltage from 20A outlet with a voltmeter |
| | Error code is displayed on console | Contact TRUE product support |
| | Pinched or loose main communication cable | |
| | No User Present displayed on screen | User weight must be over 90lbs. Verify No User Present settings in console. |

| Malfunction | Possible Cause | Corrective Action |
|--|--|--|
| Heart rate is displaying erratically or not displaying | Transmitter belt contacts are not making good contact with the skin | Re-adjust the transmitter belt so that it is in full contact with the skin |
| | Contacts on the transmitter belt are not moist | Moisten the contacts on the transmitter belt |
| | Transmitter belt is not within 3 feet (1 meter) of the heart rate receiver | Adjust your position on the belt so that you are within 3 feet (1 meter) of the console |
| | The battery inside the transmitter belt is depleted | Replace the transmitter belt with a compatible transmitter belt |
| | Another user wearing a compatible transmitter strap is within 3 foot (1 meter) of the unit | Move the units so that there is more space in-between units |
| | Environmental interference from high voltage power lines | Move the unit to another position within the room or move the cause of the interference until heart rate reading are stable. If the probable source of interference is plugged into the same outlet move the suspect source to another outlet. |
| | Environmental interference from computers | |
| | Environmental interference from motor driven appliances | |
| | Environmental interference from cell or cordless phone | |
| | Environmental interference from Wi-Fi router | |
| Contact Heart Rate not displaying | Machine needs to be restarted | Power cycle |
| | Cables are pinched or damaged | Contact TRUE product support |
| | Nucleus board may be damaged | Contact TRUE product support |
| | Heart Rate Grips may be damaged | Contact TRUE product support |

WIRING DIAGRAMS

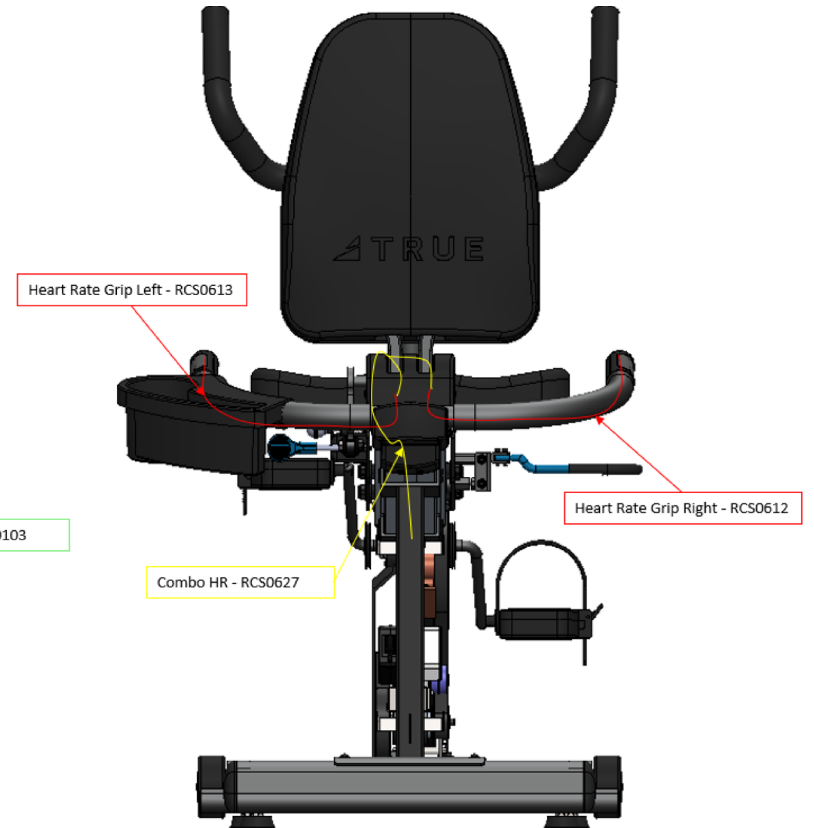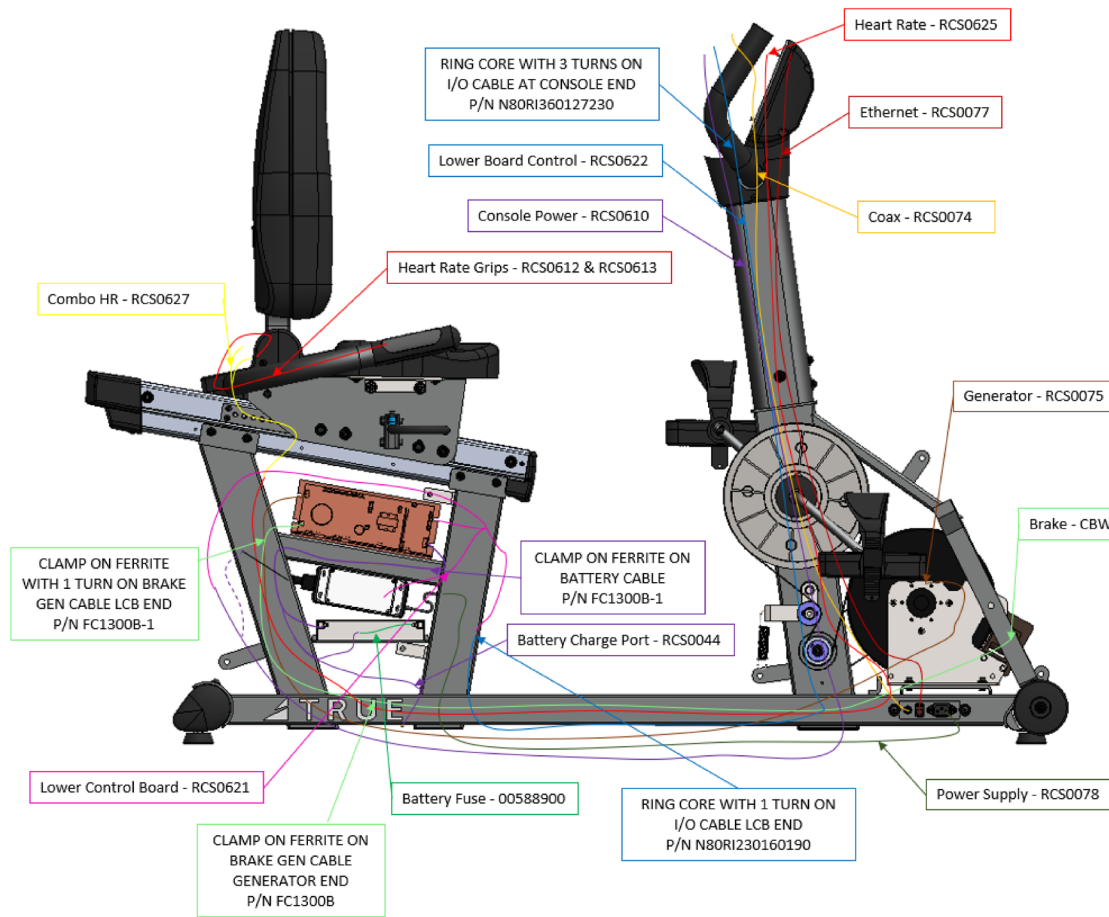

WARRANTY INFORMATION

ATTENTION OWNER'S: To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

COMMERCIAL WARRANTY

| CARDIO | | | | |
|---------------|-----------------------------|-----------------------------|-----------------------------|-----------------------------|
| WARRANTY ITEM | VAPOR, APEX | GRAVITY PLUS | GRAVITY | ADX, RO, SURGE |
| Frame* | 7 Years (with registration) | 7 Years (with registration) | 7 Years (with registration) | 5 Years (with registration) |
| Parts | 3 Years | 3 Years | 3 Years | 3 Years |
| Consoles | 3 Years | 3 Years | 3 Years | 2 Years |
| Labor** | 2 Years (with registration) | 2 Years (with registration) | 1 Year (with registration) | 1 Year (with registration) |
| Wear Items*** | 180 Days | 180 Days | 180 Days | 90 Days |

| STRENGTH | |
|----------------------------|--|
| WARRANTY ITEM | PALLADIUM, FUSE XL, FORCE, FITNESS LINE, ATLAS, XFT, XFW, MP, SM, FT, FS |
| Frame* | 10 Years (with registration) |
| Parts | 5 Years |
| Cables and Linear Bearings | 1 Year |
| Labor** | 1 Year (with registration) |
| Wear Items*** | 90 Days (6 Months for FORCE only) |

| FLEXIBILITY | |
|---------------|---------|
| WARRANTY ITEM | STRETCH |
| Parts | 1 Year |
| Wear Items*** | 90 Days |

Warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance.

*Frame is the serialized base of the unit and does not include paint or coatings. Frame warranty will equal that of parts warranty unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.

**Labor warranty is available for equipment located within United States. TRUE Fitness equipment is automatically covered under a 6-month Limited Labor Warranty. This 6-month Limited Labor Warranty begins from the date of purchase shown by a valid receipt. If a valid receipt is not available, the 6-month Limited Labor Warranty period begins from the date of manufacture on the originally purchased equipment.

***Wear Items include: batteries, covers, caps, badges, paint, pedal straps, toe clips, elliptical pedal inserts, foot pads, Coax/TV, HDMI, USB, mirroring or Ethernet connections, and safety key.

See Warranty Details for product registration requirements, terms, conditions, and complete coverage details.

ATTENTION OWNER'S: To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

LIMITED-USE COMMERCIAL WARRANTY*

| CARDIO | | | | |
|---------------------|-----------------------------|-----------------------------|-----------------------------|-----------------------------|
| WARRANTY ITEM | VAPOR, APEX | GRAVITY PLUS | GRAVITY | LAUNCH |
| Frame** | 7 Years (with registration) | 7 Years (with registration) | 7 Years (with registration) | 7 Years (with registration) |
| Parts | 5 Years | 5 Years | 5 Years | 5 Years |
| Consoles | 3 Years | 3 Years | 3 Years | 3 Years |
| Tread Belt and Deck | 5 Years | 5 Years | 5 Years | 2 Years |
| Labor*** | 3 Years (with registration) | 3 Years (with registration) | 2 Years (with registration) | 1 Year (with registration) |
| Wear Items**** | 180 Days | 180 Days | 180 Days | 90 Days |

TRUE Fitness may offer alternative warranties to purchasers of commercial equipment for limited-use commercial.* This policy ensures that customers who use commercial equipment for limited-use commercial use may receive alternative warranty coverage, provided they meet the specified requirements. It's important to note that the specific terms and conditions of the alternative warranty, as well as the eligibility criteria, may vary depending on the product and TRUE's policies at the time of purchase. Customers should review the warranty terms and contact TRUE for precise details.

*To be eligible for the alternative limited-use commercial warranty, equipment use cannot exceed 6-hours use a day or be for use in a membership, dues paying, or institutional facility.

Customers must provide TRUE with the following within 45 days of installation of the qualifying commercial-rated equipment:

- Purchase agreement.
- Proof of professional delivery and installation.
- TRUE will recognize the alternative warranty for the purchaser and implement it within 45 days of receiving the required documentation if such an alternative warranty is available for the specific product.

Warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance.

**Frame is the serialized base of the unit and does not include paint or coatings. Frame warranty will equal that of parts warranty unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.

***Labor warranty is available for equipment located within United States. TRUE Fitness equipment is automatically covered under a 6-month Limited Labor Warranty. This 6-month Limited Labor Warranty begins from the date of purchase shown by a valid receipt. If a valid receipt is not available, the 6-month Limited Labor Warranty period begins from the date of manufacture on the originally purchased equipment.

****Wear Items include: batteries, covers, caps, badges, paint, pedal straps, toe clips, elliptical pedal inserts, foot pads, Coax/TV, HDMI, USB, mirroring or Ethernet connections, and safety key.

See Warranty Details for product registration requirements, terms, conditions, and complete coverage details.

ATTENTION OWNER'S: To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

IN-HOME USE WARRANTY*

| CARDIO | | | | |
|---------------------|------------------------------|------------------------------|------------------------------|------------------------------|
| WARRANTY ITEM | VAPOR, APEX | GRAVITY PLUS | GRAVITY | LAUNCH |
| Frame** | 25 Years (with registration) | 25 Years (with registration) | 25 Years (with registration) | 25 Years (with registration) |
| Drive Motor*** | 25 Years (with registration) | 25 Years (with registration) | 25 Years (with registration) | 25 Years (with registration) |
| Parts | 10 Years | 12 Years | 10 Years | 7 Years |
| Consoles | 3 Years | 3 Years | 3 Years | 3 Years |
| Tread Belt and Deck | 10 Years | 10 Years | 7 Years | 5 Years |
| Labor**** | 2 Years (with registration) | 2 Years (with registration) | 2 Years (with registration) | 1 Year (with registration) |
| Wear Items***** | 180 Days | 180 Days | 180 Days | 180 Days |

TRUE Fitness may offer alternative warranties to purchasers of commercial equipment for in-home use.* This policy ensures that customers who use commercial equipment for in-home use may receive alternative warranty coverage, provided they meet the specified requirements. It's important to note that the specific terms and conditions of the alternative warranty, as well as the eligibility criteria, may vary depending on the product and TRUE's policies at the time of purchase. Customers should review the warranty terms and contact TRUE for precise details.

*To be eligible for the alternative in-home use warranty, equipment must be used at a home address and cannot be used outside of the purchaser of the equipment and their immediate family.

Customers must provide TRUE with the following within 45 days of installation of the qualifying commercial-rated equipment:

- Purchase agreement.
- Proof of professional delivery and installation.
- TRUE will recognize the alternative warranty for the purchaser and implement it within 45 days of receiving the required documentation if such an alternative warranty is available for the specific product.

Warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance.

**Frame is the serialized base of the unit and does not include paint or coatings. Frame warranty will equal that of parts warranty unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.

***Drive Motor warranty will equal that of parts warranty unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.

****Labor warranty is available for equipment located within United States. TRUE Fitness equipment is automatically covered under a 6-month Limited Labor Warranty. This 6-month Limited Labor Warranty begins from the date of purchase shown by a valid receipt. If a valid receipt is not available, the 6-month Limited Labor Warranty period begins from the date of manufacture on the originally purchased equipment.

*****Wear Items include: batteries, covers, caps, badges, paint, pedal straps, toe clips, elliptical pedal inserts, foot pads, Coax/TV, HDMI, USB, mirroring or Ethernet connections, and safety key.

See Warranty Details for product registration requirements, terms, conditions, and complete coverage details.

ATTENTION OWNER'S: To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

WARRANTY DETAILS

All TRUE Fitness products are distributed by TRUE and are warranted to the original product purchaser and the parts of the TRUE product (the "Product") listed below. During the applicable Warranty Period, the Product, under normal use and service, shall be free of manufacturing defects in workmanship and materials.

NOTE:

- Standard shipping is included with warranty part replacement.
- Shipping for warranty frame or replacement is included for the period of three years from the original date of purchase.

All Warranty Items are "LIMITED"

- This limited warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, failure to follow instructions and warnings in owner's manual, accident, misuse, abuse, unauthorized modification, failure to provide reasonable and necessary maintenance, software version upgrades, compatibility with third party/aftermarket hardware, software, applications, or websites.
- TRUE's liability shall under no circumstances exceed the actual amount paid by you for the product, nor shall TRUE under any circumstances be liable for any consequential, incidental, special or punitive damages or losses, whether direct or indirect.
- Some states or countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
- TRUE will neither assume nor authorize any person to assure for us any other obligation or liability concerning the sale of this Product. Under no circumstances shall TRUE be liable under this warranty, or otherwise, of any damage to any person or property, including any lost profits or lost savings, for any special, indirect, secondary, incidental, or consequential damages arising out of the use of or inability to use this Product.
- This limited warranty, which is given expressly and in lieu of all other express warranties, constitutes the only warranty made by TRUE.
- The remedies described herein are your sole and exclusive remedies and TRUE's entire liability for any breach of this limited warranty.
- No one is authorized to change, modify, or extend the terms of this limited warranty.
- This limited warranty is in lieu of all other warranties of any kind either expressed or including but not limited to implied warranties of merchant.
- This limited warranty applies to the product only while the product remains in the possession of the original purchaser and is not transferable.
- This limited warranty becomes VALID ONLY if the Product is initially assembled/installed by a TRUE authorized dealer/technician (if anyone other than a TRUE authorized dealer/technician initially assembles and installs the Product, this limited warranty will be void unless the written authorization of TRUE is first obtained).
- The "Warranty Period" for this limited warranty shall be for the duration forth in the applicable charts, beginning from the date of original purchase; provided, however, except to the extent prohibited by applicable law, the "Warranty Period" shall only be six months for labor (from the date of original purchase) unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.
- All serial numbers must be intact on the Product for this limited warranty to be valid.
- Installation or download of any 3rd party or after-market products will result in voided warranty. This includes, but is not limited to, electrical and mechanical parts, software, or applications.
- TRUE will ship to an authorized service provider any new or rebuilt replacement part or component, or at our option, replace or refund the Product.
- Replacement parts are warranted for the remaining portion of the original warranty period.
- Proof/receipts of necessary maintenance may be required within 30 days of requested warranty part or service.
- This limited warranty does not apply to the performance of the heart rate accuracy will not be warranted as performance varies, based on user's physiology, age, method of use, and other external factors.

ATTENTION OWNER'S: To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

WARRANTY REGISTRATION

Thank you for purchasing a TRUE product!

To ensure you get the most out of your purchase and receive the full benefits of our warranty, **you must register your product within 45 days of purchaser's receipt of this product.**

How to register your product:

- **Online:**
Simply visit our website at truefitness.com and register your product warranty in one simple step.
- **QR Code:**
Scan the QR code below with your smartphone to be taken directly to the registration page.



- **By Mail:**
Complete the information below and mail to:
TRUE Product Support
865 Hoff Road
St. Louis, MO 63366

PLEASE RETAIN THIS PORTION FOR YOUR RECORDS

BASE SERIAL NUMBER:

CONSOLE SERIAL NUMBER:



WARRANTY REGISTRATION

Base Serial Number

Console Serial Number

Purchase Date

Company (if applicable)

Customer Name (First and Last)

Email Address

Phone Number

Street Address

City

State

Postal Code

Country



CONTACT US
service@truefitness.com
800.883.8783

865 Hoff Road
St. Louis, MO 63366

[TRUEFITNESS.COM](https://www.truefitness.com)



MAN-RC3-0B-35 Owner's Manual and Assembly Guide REV05

© 2026 TRUE Fitness All Rights Reserved.