

# XFW7200 INCLINE PRESS BENCH

 TRUE FITNESS



SCAN FOR UP-TO-DATE  
OWNER'S MANUAL

MODEL XFW7200A-35  
(MAN-XFW7200A REV00)

**OWNER'S  
MANUAL**



## **IMPORTANT—PLEASE READ**

All products shown are prototype. Actual product delivered may vary. Product specifications, features, and software are subject to change without notice.

**For the most up-to-date version of this manual, please see our website:**

**<https://truefitness.com/services-support/user-manuals/>**

## **CONTACTING OUR SUPPORT TEAM**

To contact TRUE for any of your pre or post installation questions, please call our toll-free numbers Monday - Friday during normal business hours:

- Commercial Direct Customers and Corporate Accounts | 800.868.8783
- Retail Customers and Distributors | 800.883.8783

Or email us:

- Commercial Direct Customers and Corporate Accounts | [service.direct@truefitness.com](mailto:service.direct@truefitness.com)
- Retail Customers and Distributors | [service@truefitness.com](mailto:service@truefitness.com)
- Service International | [int.service@truefitness.com](mailto:int.service@truefitness.com)

When contacting TRUE, please have the following information ready:

- Serial Number of Unit
- Contact Information—Full Name, Email, and Phone Number
- Address of Facility or Residence
- Detailed Description Regarding Symptom of the Unit (along with pictures or video if applicable)

**NOTE:** Authorized service providers, dealers, and distributors may also use TRUE's online resource | [portal.truefitness.com](http://portal.truefitness.com).

## **CONTACTING OUR SALES TEAM**

Interested in owning more TRUE products? Please contact us with any product inquires so that we may direct you to the appropriate sales representative to help answer your questions.

- Phone | 800.426.6570
- Email | [sales@truefitness.com](mailto:sales@truefitness.com)

## **REPORTING FREIGHT CLAIMS OR PARTS DAMAGE**

Unfortunately, sometimes materials can be damaged during shipment. If materials are damaged during shipment, please follow the guidelines below to determine the appropriate process for you to follow.

### **Severe Damage—Obvious damage to external packaging and internal product.**

Please refuse the shipment and it will be returned to TRUE by the carrier. Contact TRUE product support by calling 800.883.8783 or sales support by calling 800.426.6570 Monday-Friday during normal business hours to notify us that the shipment has been refused. Once we have received the damaged shipment, a replacement shipment will be sent to you. If the shipment comes in multiple boxes, only refuse boxes with damage.

### **Slight Damage—Minimal damage to external packaging with unknown internal damage to product.**

If the shipment has minimal damages and you are not sure if the actual product is damaged, you must sign the bill of lading as damaged when accepting the shipment. Once you have opened the box and you have determined something is indeed damaged, please gather the serial number, model number, description of damage, and photos of damage. Please make sure the photos include the damaged product as well as the damaged box the product arrived in. Contact TRUE product support ([service@truefitness.com](mailto:service@truefitness.com) | 800.883.8783) or TRUE sales support ([sales@truefitness.com](mailto:sales@truefitness.com) | 800.426.6570) Monday-Friday during normal business hours.

### **Concealed Damage—No damage to external packaging but internal damage to product.**

You may receive a shipment that looks intact and discover once the box has been opened that there are hidden damages. Please notify the carrier immediately. TRUE will not be able to file a claim if the carrier is not notified in a timely manner. Once you have called the carrier you will need to gather the serial number, model number, description of damage, and photos of damage. Contact TRUE product support ([service@truefitness.com](mailto:service@truefitness.com) | 800.883.8783) or TRUE sales support ([sales@truefitness.com](mailto:sales@truefitness.com) | 800.426.6570) Monday-Friday during normal business hours.



## TABLE OF CONTENTS

### SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS—SAVE THESE INSTRUCTIONS.....	5
GENERAL CARE AND MAINTENANCE.....	7
COMMERCIAL MAINTENANCE SCHEDULE.....	7
COMPLIANCES.....	7
DIMENSIONS AND WEIGHTS.....	8
LABEL LOCATIONS.....	9
WARNING AND INTENDED USE LABELS.....	9

### ASSEMBLY INSTRUCTIONS

PREASSEMBLY CHECKLIST.....	10
ASSEMBLY STEPS.....	12

### PREVENTATIVE MAINTENANCE

DAILY INSPECTION AND MAINTENANCE.....	18
WEEKLY INSPECTION AND MAINTENANCE.....	18
OTHER SCHEDULED PREVENTATIVE MAINTENANCE.....	18
CLEANING THE EQUIPMENT.....	18

### WARRANTY INFORMATION

COMMERCIAL WARRANTY.....	19
WARRANTY DETAILS.....	20
WARRANTY REGISTRATION .....	21

## **SAFETY INSTRUCTIONS**

### **IMPORTANT SAFETY INSTRUCTIONS—SAVE THESE INSTRUCTIONS**

#### **FACILITY AND USER SAFETY PRECAUTIONS**

- Review and understand all of the warning labels affixed to this machine and on the facility safety sign.
- Be certain that the machine operation is understood before it is used. Refer to the instructional procedure label affixed to the machine.
- Make sure all users are properly trained on how to use this equipment. If this machine is being used in a commercial setting, end users may not have access to this owners manual. It is the responsibility of the facility to instruct users as to the proper usage of the equipment as well as making them aware of potential hazards. Maximum user weight is 300 lbs / 136 kg.
- Use each machine only for the intended exercise. Do not allow anyone to invent exercises not included on the instructional procedure label or the intended use label.
- Do not modify the machine.
- This equipment meets industry safety standards for stability when used for the intended exercise. Do not allow straps, resistance bands or other means to be attached to the framework of this machine to perform stretching or body weight exercises. This can result in machine instability and lead to serious crushing injuries.
- Keep children away from this equipment. Adults should closely supervise use by teenagers.
- It is recommended that users receive a thorough medical exam before commencing an exercise program. All medical issues should be reviewed to ensure that weight training will not aggravate pre-existing medical conditions.
- If the machine appears damaged or inoperable, contact a facility staff member to place an "OUT OF ORDER, DO NOT USE" sign on the machine until it is repaired. Only use TRUE supplied replacement components to service this machine.
- Instruct users not to wear loose or dangling clothes or have headphone wires hanging when using this equipment.
- Do not attempt to free any jammed assemblies by yourself as this may cause injury.
- On Plate Loaded and Free Weight machines:
  - Use of spotter(s). Instruct users to seek the advice of the facility staff as to the appropriate use of spotters when lifting. More than one spotter may be required depending upon the amount of weight being lifted.
  - Instruct users to load weight plates evenly and carefully to avoid tipping equipment and crushing injuries.
  - If the machine is equipped with safety stops or catches, inspect them and verify their proper operation before use and make sure they are securely in place before using or exiting the machine. Be certain members are instructed on how to operate and adjust all safety mechanisms.
  - This equipment is designed for olympic weight plates with a 50 mm bore (1.9").
  - Do not exceed the maximum weight capacity of the machine. Maximum plate size is 45 lbs / 20 kg.

## **INSTALLATION SAFETY PRECAUTIONS**

- Read this installation manual entirely before assembling this equipment.
- Verify that there is adequate space surrounding this piece of equipment for safe access and operation. Installation must meet ADA requirements for accessibility.
- Install this piece of equipment on a solid level surface that does not deviate more than 1/8" over a 10' distance (or as defined and required by local building and architectural codes).
- **DO NOT** install any fitness equipment near a pool, hot tub or other damp locations. Corrosion caused by installation in these locations can lead to premature failure of components.
- **Be sure all hardware is tight before using this equipment.**
- Some assembly materials may come preassembled in the carton. Refer to the Assembly Instructions for more information on disassembling any assembly materials before beginning assembly.

## **EQUIPMENT INSTALLATION AND STABILITY**

- TRUE Fitness designs its products to be stable when used as intended.
- Training environments vary, and TRUE Fitness cannot predict the specific conditions under which users will set up or operate our products.
- To ensure safety and optimal performance, TRUE Fitness requires that all flexibility and strength training equipment be securely anchored to a solid, level surface.
- Anchoring holes are provided on the feet of the frame. All anchoring locations must be used when anchoring the equipment to the floor. Proper anchoring prevents instability, rocking, or tipping during use.
- Regardless of the fastener type or method used, each anchoring fastener must withstand a minimum pull-out force of 3.3 kN (750 lbs) from the floor to ensure proper stability and safety compliance.
- It is the facility's responsibility to ensure installation complies with all applicable local and regional building codes and that equipment is installed according to manufacturer guidelines.
- A licensed contractor or structural engineer should be consulted to verify that installation methods meet local building regulations and are appropriate for the specific type of flooring used.
- TRUE Fitness shall not be held liable for any injuries, damages, or equipment malfunctions resulting from failure to properly secure or bolt equipment to the floor or from improper installation practices.
- If two assembled units are linked together, both units must be anchored to the floor.

## **MAINTENANCE SAFETY PRECAUTIONS**

- Refer to the maintenance schedule table in this manual for when to perform maintenance.
- Check the function of your machine DAILY by verifying the following:
  - Verify that all adjustments are possible and carried out with ease. Make sure that each adjustment pin inserts completely into each position without binding.
  - Verify that safety catches and stops are in proper working order and engaged.
  - Verify that the exercise is performed smoothly, free of noise, and/or binding.
- Check the function of your machine WEEKLY by verifying the following:
  - Nuts, Bolts, and Fasteners: check tightness weekly. If any hardware has become loose, re-tighten it, use Loctite® Threadlocker 242, or both.
  - Frames and Lifting Arms: Inspect weekly for integrity and function. Replace any component at first signs of wear. Use only TRUE supplied components.
- Replace any warning label at the first sign of wear. Labels and the facility safety sign may be obtained from TRUE.

## GENERAL CARE AND MAINTENANCE

### IMPORTANT

Preventative maintenance is crucial to maintaining the function and safety of this equipment. Your facility must establish written guidelines for preventative maintenance and keep written or online records of the maintenance performed on these products. As a minimum, the items presented in the SAFETY section of this document and the items that follow here, should be included in your maintenance program.

- Nuts, bolts, and fasteners—check tightness weekly. If any hardware has become loose, re-tighten and/or use Loctite® brand Threadlocker 242. Be sure all hardware is tight before using the machine.
- Safety catches—inspect catches, stop rods and their associated fasteners. Tighten any loose hardware and replace any components at first signs of wear.
- Frames—sweat, disinfecting sprays and spills can lead to corrosion which may lead to premature failure of components. Wipe all machines down with a damp cloth and dry completely each day. This includes painted parts, chrome parts and upholstered pads.
- Painted and chrome plated parts—use Simple Green with a dilution of 32:1 or similar cleaner for light dirt and grime. Use Turtle Wax Polishing Compound or a good car polish to remove heavier dirt and grease as well as for polishing. DO NOT use solvents, lacquer thinner, acetone or finger nail polish remover. For scuffs and marks that are not removed by the above methods use a soft scrub cleanser. Make sure all parts are dry upon completion.
- Exercise instruction labels—clean with soap and water as needed.
- Bronze bushings—check monthly for signs of wear and replace as needed.
- Linear bearing shafts—wipe any accumulation of dust or other contaminants from the shafts on a weekly basis. Apply a thin layer of a Teflon® (PTFE) grease on a weekly basis. TRUE recommends Magnalube® brand.
- When replacing any component, use only TRUE supplied parts.
- Be sure all hardware is tight before using the machine.

Retain these instructions for future reference. If you have any questions, do not hesitate to contact your TRUE dealer or TRUE product support (service@truefitness.com | 800.883.8783).

## COMMERCIAL MAINTENANCE SCHEDULE



Commercial Maintenance Schedule					
	Daily	Weekly	Monthly	6 Months	Annually
Inspect all nuts and bolts and tighten if needed.		X			
Inspect safety catches, stop rods, and their fasteners. Replace at the first sign of wear.	X				
Inspect all anti-slip surfaces and replace as needed.		X			
Inspect all accessory bars and handles.		X			
Inspect all safety and instructional decals.	X				
Clean and condition upholstery.	X				
Clean and polish frame.	X				
Clean and polish chrome.	X				
Lubricate pivot bearings and linear bearings.				X	

## COMPLIANCES


This equipment complies with all applicable codes and regulations. For a complete list of compliances, please visit [www.truefitness.com](http://www.truefitness.com).

## DIMENSIONS AND WEIGHTS

- **ASSEMBLED DIMENSIONS (L X W X H)**  
68" x 65" x 56" / 172 cm x 165 cm x 142 cm

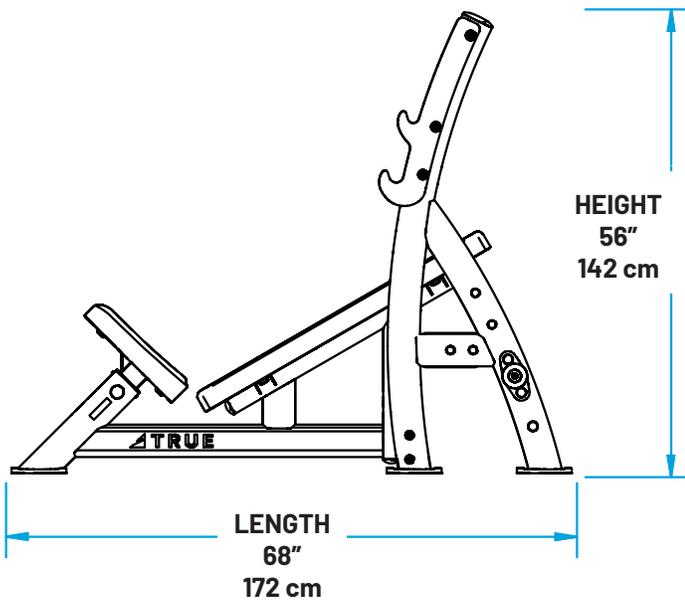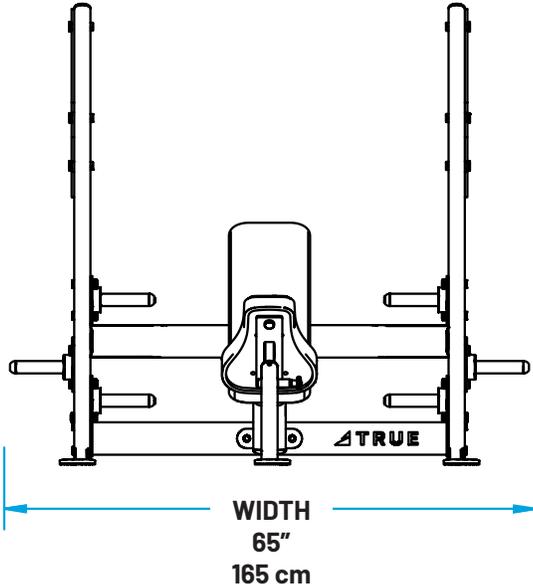


- **PRODUCT WEIGHT**  
185 lbs / 84 kg
- **MAXIMUM USER WEIGHT**  
300 lbs / 136 kg
- **MAXIMUM LOAD (USER WEIGHT + LIFTED WEIGHT)**  
795 lbs / 361 kg
- **INTENDED USE**
  1. This bench is intended to support the user in an incline position while performing bench press exercises.
  2. Adjust the seat position so that the bar can be lifted easily from the catch plates. Be certain that the seat pin is engaged. Check seat position without weight on the bar.
  3. Spotters must be used when using this bench. More than one spotter may be required depending on the amount of weight being lifted.
  4. Load and unload plates evenly onto the bar placing or removing one plate from one side and then the other.
  5. Return the bar to the engaged catch position in a controlled manner. Be certain that the bar is fully engaged in the catch plates before releasing the load and exiting the machine.
  6. DO NOT stand on this bench when doing exercises.
  7. DO NOT use bands or chains with this bench.
  8. DO NOT exceed the load limit of 795 lbs / 361 kg. This rating is based on a maximum user weight of 300 lbs / 136 kg and a bar weight of 495 lbs / 225 kg.

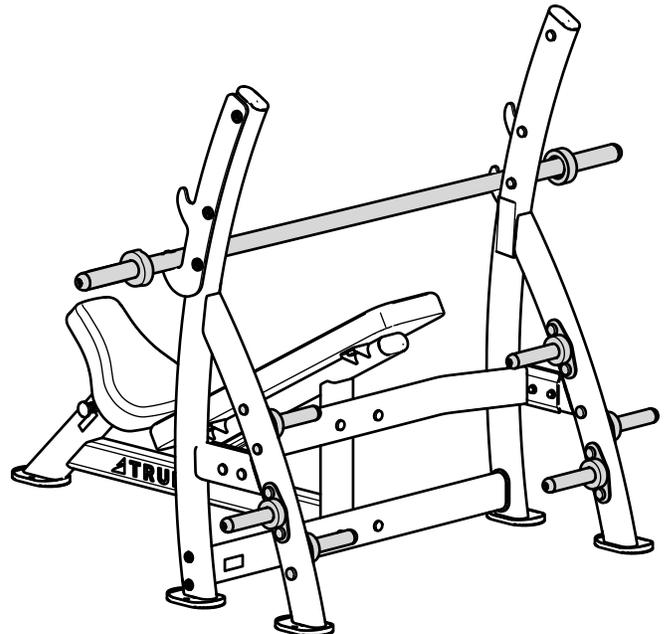

## LABEL LOCATIONS

Item	Part#	Description	Qty
1	LBL-WRN-0010	LABEL, XFW GENERAL WARNING	1
2	SL-XFW7200-35	SERIAL STICKER, XFW7200-35	1
3	LBL-LOG-010BK	LABEL, 10" NEW TRUE LOGO, WHITE	3
4	LBL-PR-XFW72	LABEL, INTENDED USE	1
5	B2066	LABEL, USE SPOTTER	1
6	B2065	LABEL, WARNING, COMPLETELY INSERT PIN	1

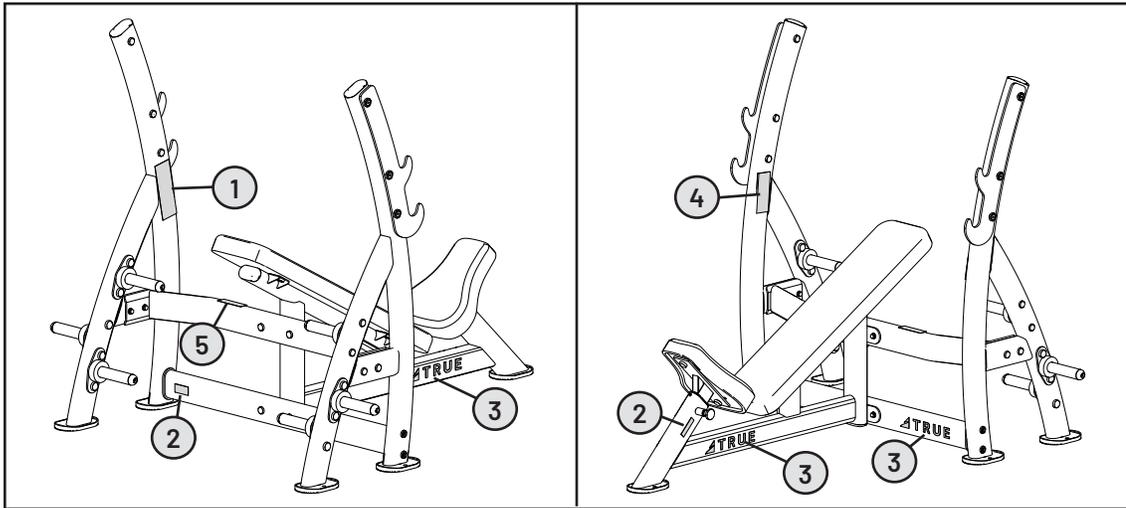

## WARNING AND INTENDED USE LABELS

**⚠ WARNING:** Replace all labels that may be worn, damaged, or missing.

To replace any worn or missing decals contact TRUE product support ([service@truefitness.com](mailto:service@truefitness.com) | 800.883.8783).

Part# and Description	Image
LBL-WRN-0010 (General Warning)	<p><b>⚠ WARNING</b></p> <p>SERIOUS INJURY CAN OCCUR ON THIS EQUIPMENT. FOLLOW THESE PRECAUTIONS TO HELP AVOID INJURY.</p> <ol style="list-style-type: none"> <li>BEFORE USING: Read and understand all of the warnings and labels and obtain instruction on the use of this machine.</li> <li>Set stops or catches to the proper position for the exercise.</li> <li>Before using the machine, visually check and be certain that the bar is completely seated in its catch.</li> <li>Use only for the intended exercise. If you are unsure of the intended exercise seek instruction before using.</li> <li>DO NOT attach straps or other devices to the frame. DO NOT use for stretching. DO NOT modify the machine.</li> <li>Get a medical exam before beginning an exercise program.</li> <li>Adjust seat suspension height.</li> <li>Keep body and clothing clear of all moving parts. DO NOT wear anything loose or dangling.</li> <li>Inspect the machine before use. DO NOT use if it appears damaged. DO NOT try to fix. Notify staff immediately.</li> <li>Use spotters. More than one may be needed depending on the amount of weight being lifted.</li> <li>Load weight plates on to and off of bars or lifting arms evenly, alternating from left to right side of the machine.</li> <li>DO NOT exceed maximum lifting weight for the machine. Maximum plate size is 45 lbs or 20 kg.</li> <li>Inspect machine daily for loose, worn or damaged parts. Inspect stops and catch assemblies. Replace any part or label at first signs of wear. If you are doubtful about any part, DO NOT use the machine until the part is replaced. Use only True supplied parts.</li> <li>Inspect all cables and connections before using this machine. DO NOT use this machine if any part appears worn or damaged.</li> <li>DO NOT remove this label. Replace if damaged.</li> </ol> <p>ASTM F1749 LBL-WRN-0010</p>
SL-XFW7200-35 (Serial Number)	<p><b>TRUE</b> TRUE FITNESS TECHNOLOGY, INC MODEL NO: XFW7200A-35 SERIAL NO: 25-XFW720000A</p>
LBL-LOG-010BK (Logo)	

Part# and Description	Image
LBL-PR-XFW72 (Intended Use)	<p><b>XFW-7200 Olympic Incline Bench</b></p> <ol style="list-style-type: none"> <li>This bench is intended to support the user in an incline position while performing bench press exercises.</li> <li>Adjust the seat position so that the bar can be caught easily from the catch plates. Be certain that the seat pin is engaged. Check and adjust the seat and catch plates without weight on the bar.</li> <li>Spotters must be used when using this bench. Note that one spotter may be required depending on the amount of weight being lifted.</li> <li>Load and unload plates evenly onto the bar starting or removing one plate from one side and then the other.</li> <li>Return the bar to the engaged catch position in a controlled manner. Fully engage the catch plates before releasing the bar and leaving the machine.</li> <li>DO NOT stand on this bench when being stretched.</li> <li>DO NOT use hands or chains with this bench.</li> <li>DO NOT exceed the load limit of this bar (500 lbs). This rating is based on a maximum user weight of 300 lbs (136 kg).</li> </ol> <p>UL 603-2014</p>
B2066 (Use Spotter Warning)	<p><b>⚠ WARNING</b></p> <p>TO REDUCE THE POTENTIAL FOR INJURY A SPOTTER MUST BE USED WHEN WORKING OUT ON THIS BENCH</p> <p>ASTM F1749</p>
B2065 (Completely Insert Pin)	<p><b>⚠ WARNING</b></p> <p>SERIOUS INJURY CAN OCCUR ON THIS EQUIPMENT IF THE PIN IS NOT COMPLETELY INSERTED BEFORE USE.</p> <p>ASTM F1749</p>

## ASSEMBLY INSTRUCTIONS



**NOTE:** Supplemental video available on YouTube: <https://www.youtube.com/@TRUEFitnessservicevids>

### PREASSEMBLY CHECKLIST

#### ⚠ CAUTION:



Use caution when assembling this product. Unpacking and assembling this product requires two or more people.



Use caution when unpacking this product. Avoid damage to the product and product pads. **DO NOT** use a box cutter. **DO NOT** slice into the packaging.



#### VERIFY BOX CONTENTS

**IMPORTANT!** Please verify all box contents. If you have questions, or if there are any missing parts, contact product support ([service@truefitness.com](mailto:service@truefitness.com) | 800.883.8783).

TOOLS NEEDED FOR ASSEMBLY	
Wire Cutters or Scissors (used in unboxing the machine)	
14mm (9/16") Socket Wrench and Box End Wrench	
5/16" and 1/4" Allen Wrench or Hex Bit	




BOX CONTENTS		
ITEM	IMAGE	QTY
Left Upright (XFW72-SF030X-35)		1
Right Upright (XFW72-SF040X-35)		1

BOX CONTENTS		
ITEM	IMAGE	QTY
Main Frame (XFW72-MF030X-35)		1
Seat Adjust Frame (XFW72-AD030)		1
Upper Frame (XFW72-MF150X-35)		1
Lower Frame (XFW72-MF140X-35)		1

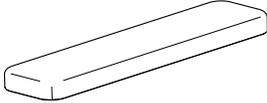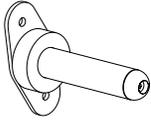BOX CONTENTS		
ITEM	IMAGE	QTY
Seat Pad (PAD-ST001-00XBK)		1
Back Pad (PAD-BK072-00X)		1
Weight Storage Post (XFW00-PH040X)		6

BOX CONTENTS		
ITEM	IMAGE	QTY
Hardware Pack (XFW72-HW)		1
Manual (MAN-XFW7200)		1

### HARDWARE PACK CONTENTS

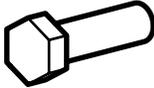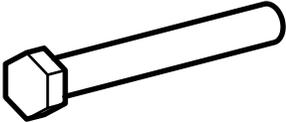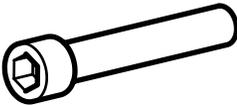XFW7200 HARDWARE PACK		
ITEM	DESCRIPTION	QTY
C 446LP	HHS, 3/8"-16, 1-1/4", LOCKING PATCH 	18
C 452	HH SCREW, 3/8"-16 X 3" 	2
C 451	HHS, 3/8"-16 X 2-3/4" 	4
C 628LP	SHCS, 3/8"-16 X 2-1/4", LP 	4
C 616	SHCS, 5/16"-18 X 1" 	1


XFW7200 HARDWARE PACK		
ITEM	DESCRIPTION	QTY
C 749	WASHER, LOCK, 3/8", ZP 	18
C 766A	LOCK NUT, 3/8"-16 X 17/64", NYLON 	6
C 754C	WASHER, FLAT, 3/8" SAE, ZP 	30
C 955A	BASE WASHER, PLASTIC CAP, 3/8" BOLT 	22
C 955SBK	CAP, PLASTIC, BOLT CAP, BLACK 	22

## ASSEMBLY STEPS

### STEP 1—ATTACH THE LOWER AND UPPER FRAME ASSEMBLIES TO THE LEFT AND RIGHT UPRIGHTS

Tools Used in this Step		Parts Used in this Step			
14mm (9/16") Socket Wrench or Box End Wrench		ITEM	PART#	DESCRIPTION	QTY
5/16" Allen Wrench or Hex Bit		1	XFW72-SF030X-35	LEFT UPRIGHT ASSY, MATTE BLACK	1
		2	XFW72-SF040X-35	RIGHT UPRIGHT ASSY, MATTE BLACK	1
		3	XFW72-MF150X-35	SUBASSEMBLY, UPPER UPRIGHT SPACER FRAME, MATTE BLACK	1
		4	XFW72-MF140X-35	SUBASSEMBLY, LOWER UPRIGHT FRAME ASSY, MATTE BLACK	1
		5	C 628LP	SHCS, 3/8"-16 X 2-1/4", LP	4
		6	C 446LP	HHS, 3/8"-16, 1-1/4", LOCKING PATCH	4
		7	C 749	WASHER, LOCK, 3/8", ZP	4
		8	C 754C	WASHER, FLAT, 3/8" SAE, ZP	4

Loosely assemble the lower and upper frame assemblies to the left and right upright assemblies. DO NOT fully tighten until after step 2.

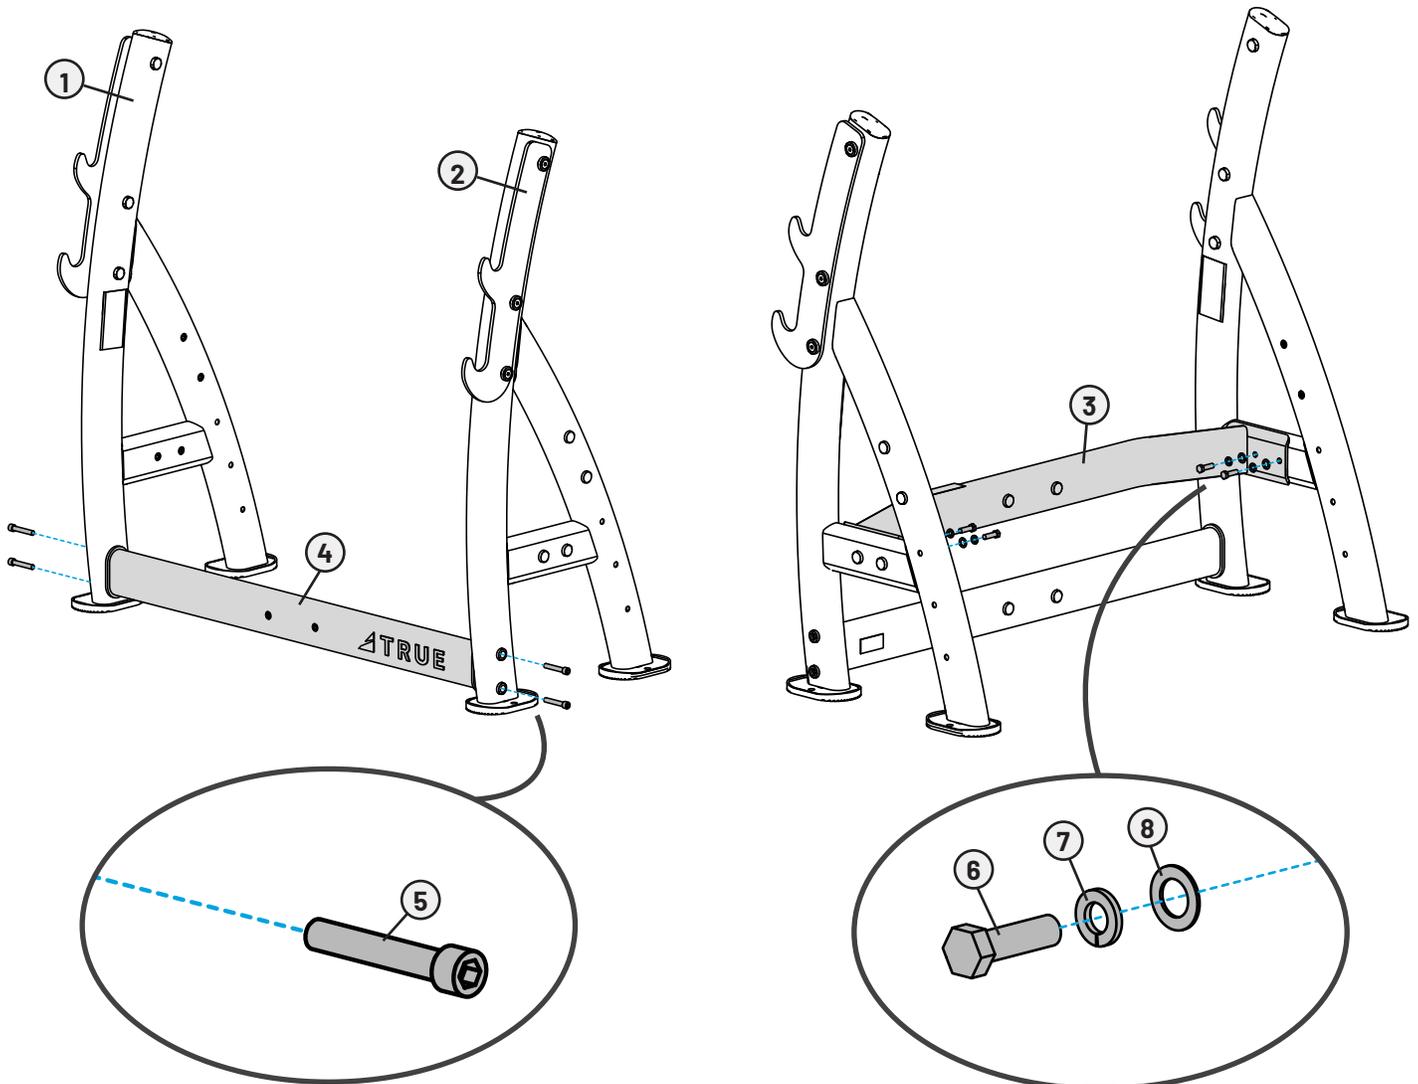


## STEP 2—ATTACH THE PAD FRAME TO THE UPPER AND LOWER FRAME ASSEMBLIES

Tools Used in this Step	
14mm (9/16") Socket Wrench or Box End Wrench	
5/16" Allen Wrench or Hex Bit	

Parts Used in this Step			
ITEM	PART#	DESCRIPTION	QTY
1	XFW72-MF030X-35	MAIN FRAME ASSY, MATTE BLACK	1
2	C 446LP	HHS, 3/8"-16, 1-1/4", LOCKING PATCH	4
3	C 749	WASHER, LOCK, 3/8", ZP	4
4	C 754C	WASHER, FLAT, 3/8" SAE, ZP	4

Loosely assemble the main frame assembly to the lower and upper frame assemblies.

Once all the frame pieces have been loosely fastened, fully tighten all the hardware from step 1 and 2 to secure all the frame pieces in place.

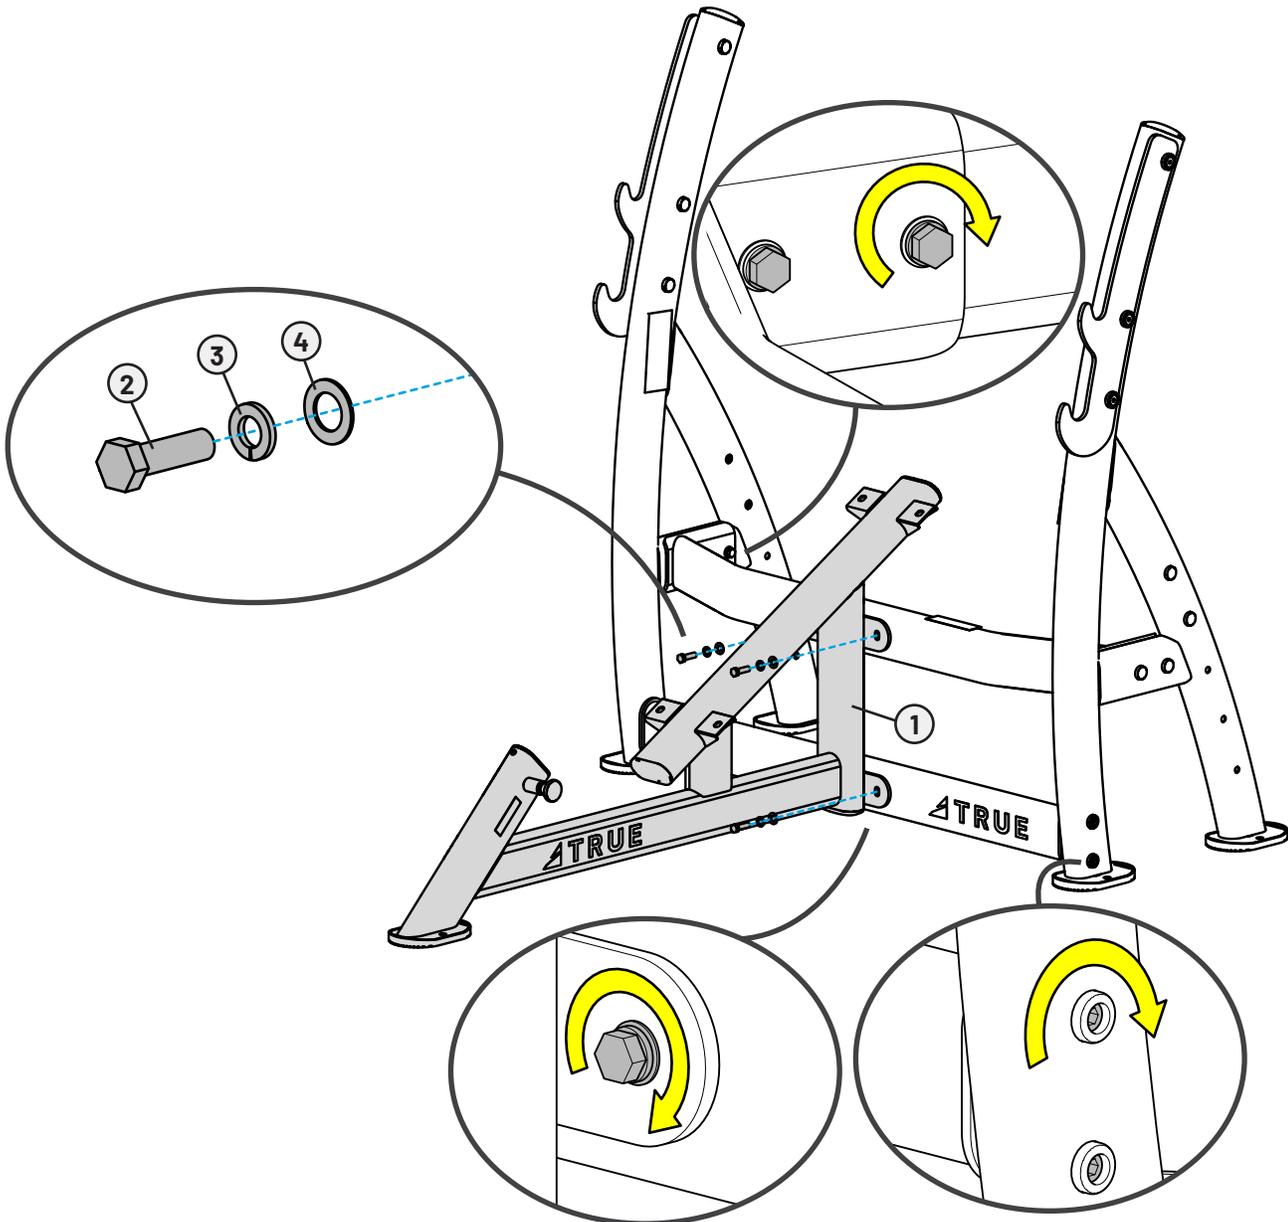

## STEP 3—ATTACH THE WEIGHT STORAGE POSTS TO THE LEFT AND RIGHT UPRIGHT ASSEMBLIES


### Tools Used in this Step

14mm (9/16")  
Socket Wrench or  
Box End Wrench



### Parts Used in this Step

ITEM	PART#	DESCRIPTION	QTY
1	XFW00-PH040X	SUBASSEMBLY, WEIGHT STORAGE HORN	6
2	C 955SBK	CAP, PLASTIC, BOLT CAP, BLACK	16
3	C 955A	BASE WASHER, PLASTIC CAP, 3/8" BOLT	16
4	C 754C	WASHER, FLAT, 3/8" SAE, ZP	16
5	C 749	WASHER, LOCK, 3/8", ZP	4
6	C 446LP	HHS, 3/8"-16, 1-1/4", LOCKING PATCH	4
7	C 452	HH SCREW, 3/8"-16 X 3"	2
8	C 451	HHS, 3/8"-16 X 2-3/4"	4
9	C 766A	LOCK NUT, 3/8"-16 X 17/64", NYLON	6

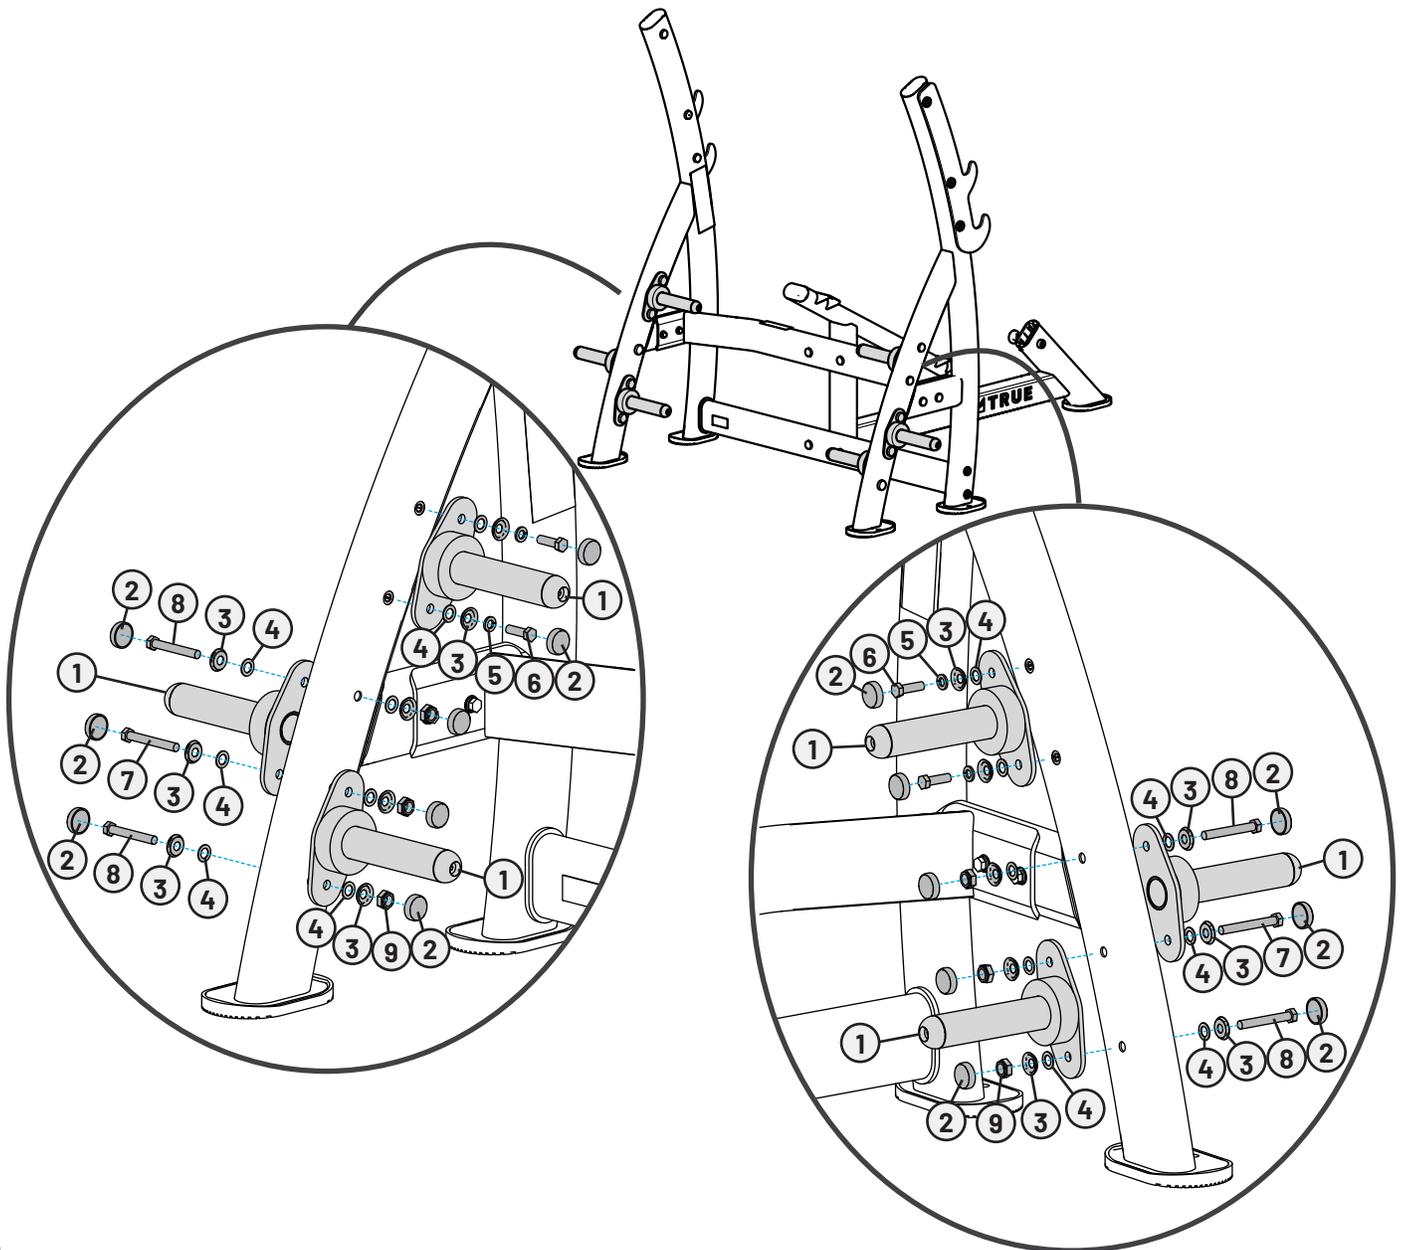


## STEP 4—ATTACH THE SEAT FRAME TO THE MAIN FRAME

Tools Used in this Step	
1/4" Allen Wrench	

Parts Used in this Step			
ITEM	PART#	DESCRIPTION	QTY
1	XFW72-AD030	WELDMENT, SEAT ADJ. FRAME	1
2	C 616	SHCS, 5/16"-18 X 1"	1


Pull and hold the pop pin out to slide the seat frame into the main frame. Verify the screw located on the back of the main frame is backed out so it does not interfere when you slide the seat frame into the main frame. Once the seat frame is attached, release the pop pin and tighten the screw located on the back of the main frame.

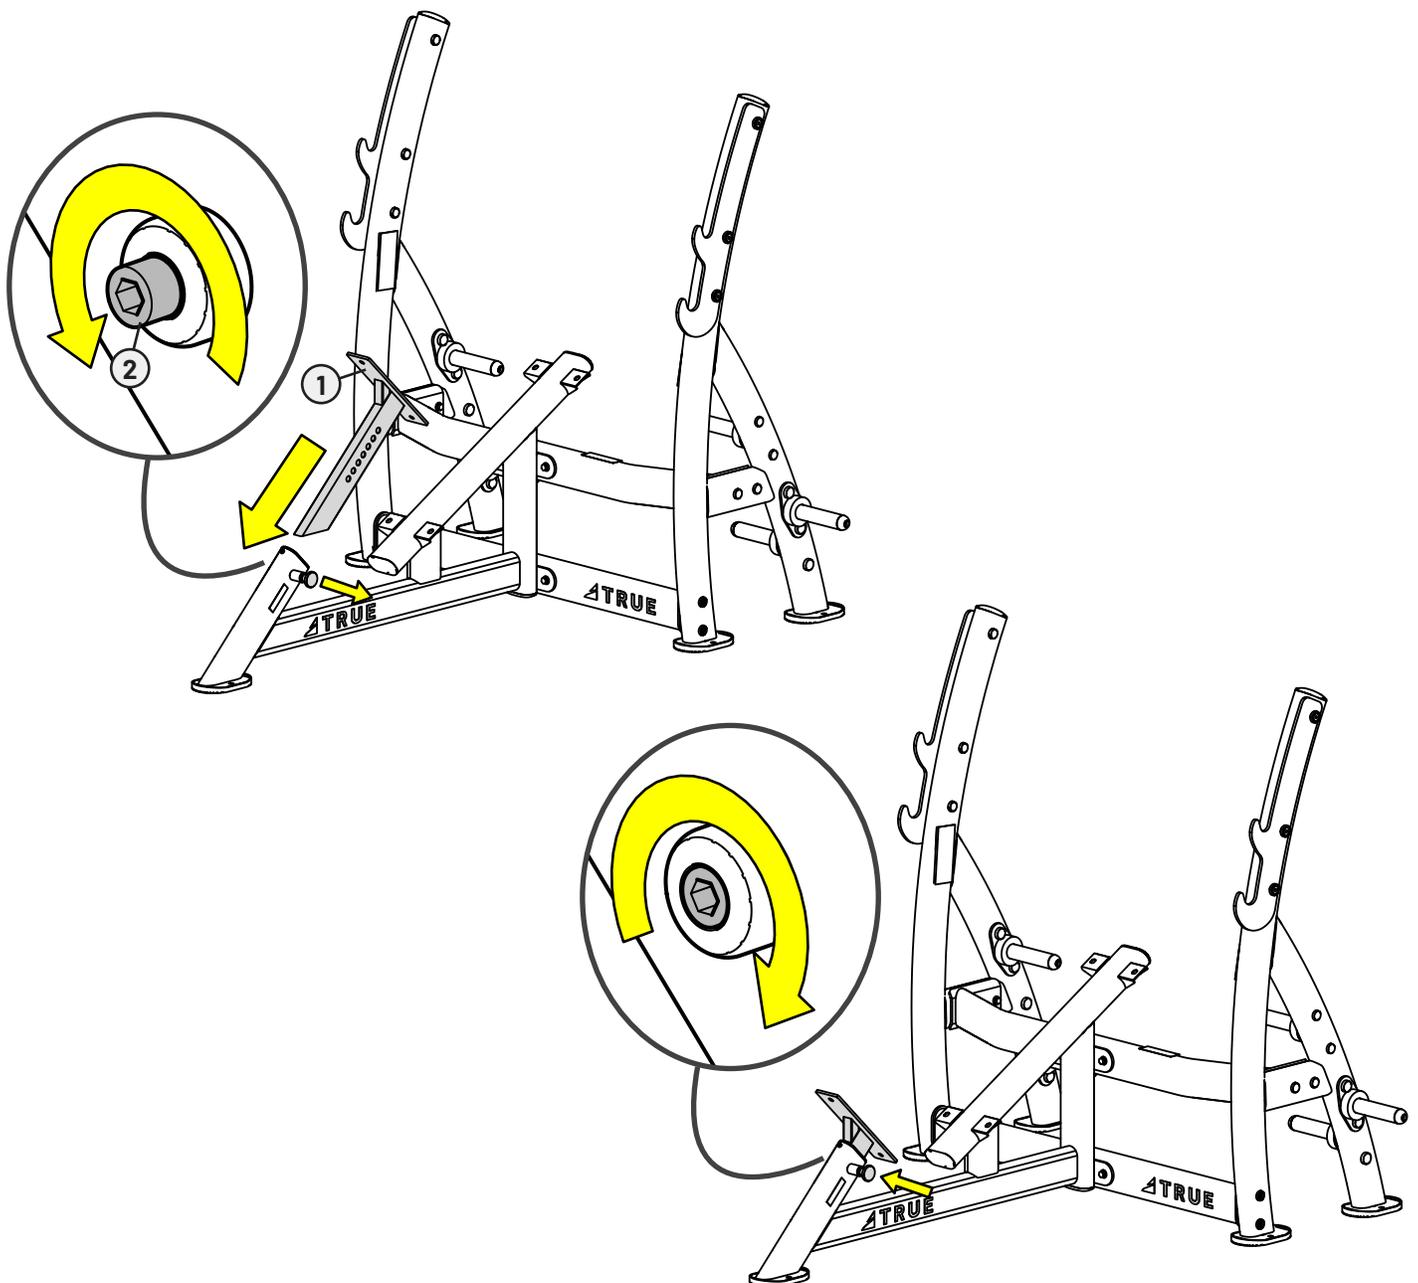

## STEP 5—ATTACH THE PADS

Tools Used in this Step	
14mm (9/16") Socket Wrench or Box End Wrench	


Parts Used in this Step			
ITEM	PART#	DESCRIPTION	QTY
1	PAD-BK072-00X	PAD, BACK (W/FABRIC), BLACK WITH SINGLE BLACK STITCH	1
2	PAD-ST001-00XBK	SUBASSEMBLY, PAD, BICYCLE SEAT, BLACK	1
3	C 446LP	HHS, 3/8"-16, 1-1/4", LOCKING PATCH	6
4	C 749	WASHER, LOCK, 3/8", ZP	6
5	C 754C	WASHER, FLAT, 3/8" SAE, ZP	6
6	C 955A	BASE WASHER, PLASTIC CAP, 3/8" BOLT	6
7	C 955SBK	CAP, PLASTIC, BOLT CAP, BLACK	6

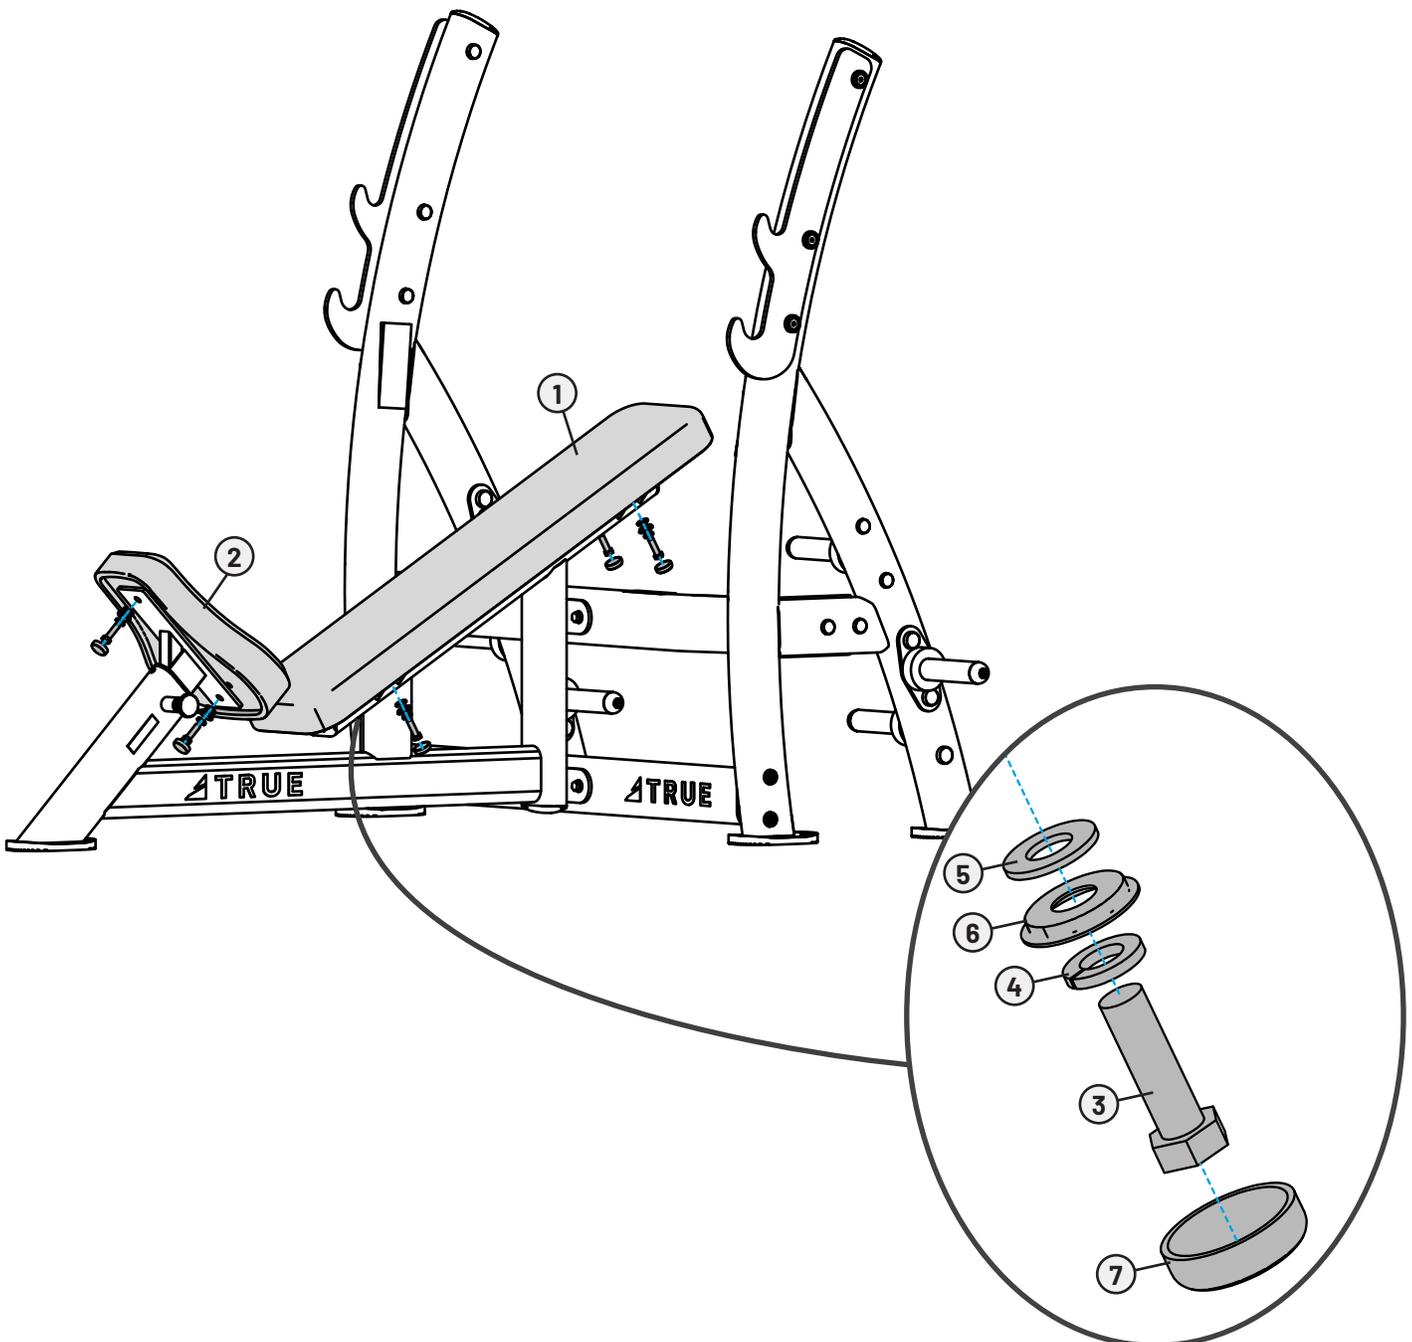

## STEP 6—VERIFY ALL ADJUSTMENTS FUNCTION AS INTENDED

To test the seat height, pull the pop pin out and place into each of the 7 adjustment holes.

**IMPORTANT!** Verify the pin inserts in and out of each hole completely.

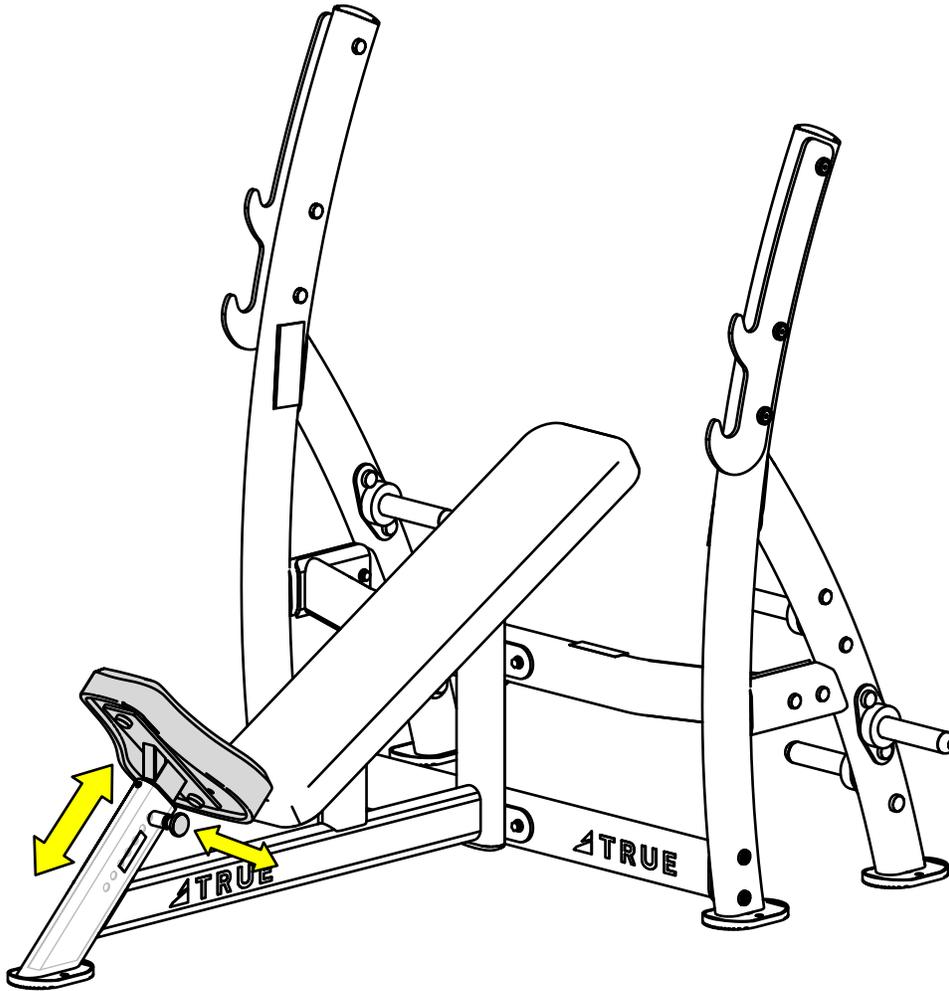

If any of the adjustments are not functioning as intended, contact TRUE product support:

- [service@truefitness.com](mailto:service@truefitness.com)
- 800.883.8783

## PREVENTATIVE MAINTENANCE

Preventative maintenance is crucial to maintaining the function and safety of this equipment. Your facility must establish written guidelines for preventative maintenance and keep written or online records of the maintenance performed on these products. As a minimum, the items presented in the Safety Instructions section of this document and the items that follow here, should be included in your maintenance program.

**IMPORTANT!** Always purchase replacement parts from TRUE. Many parts are tested and manufactured specifically for TRUE equipment. Use of unapproved parts may cause serious injury and/or void the limited warranty.

## DAILY INSPECTION AND MAINTENANCE

The following items are critical to the safety of users and maintenance staff as well as ensuring the optimum performance of the machines. These inspections should be performed each day before the equipment is subject to use. TRUE is not responsible for performing or scheduling regular maintenance or inspections.

- Inspect for cleanliness. Wipe and dry the upholstery, frame, and chrome. (See cleaning the equipment.)
- Inspect all safety and instructional decals.
- Verify that anti-skid foot grips are intact and secure.

## WEEKLY INSPECTION AND MAINTENANCE

The following items are critical to the safety of users and maintenance staff as well as ensuring the optimum performance of the machines. These inspections should be performed each week. TRUE is not responsible for performing or scheduling regular maintenance or inspections.

- Verify that all hardware is tight and that associated frame members are secure. Apply a few small drops of a thread locking compound such as Loctite® on any loose bolts.
- Inspect frame for integrity and function. Replace any components at the first sign of wear with only TRUE supplied parts.

## OTHER SCHEDULED PREVENTATIVE MAINTENANCE

TRUE recommends that scheduled maintenance be performed by a qualified service technician. Please contact your dealer or visit [www.truefitness.com](http://www.truefitness.com) to contact a local TRUE authorized service technician.

### Every 6 Months

Lubricate pivot bearing and linear bearings with lithium grease.

## CLEANING THE EQUIPMENT

### Daily Cleaning

Wipe all machines with a water dampened cloth and dry completely. This includes painted parts, chrome plated parts, plastic parts, and upholstered pads. It is important not to leave parts damp. This will increase the potential for corrosion to occur.

**CAUTION:** Certain anti-bacterial cleaners and other harsh cleaning agents can induce corrosion on the machine components. These solutions can also dry out and cause cracking and splitting on the upholstery.

### Heavy Duty Cleaning

- Chromed Adjustment Tubes—Wipe away dust and dirt before applying a Teflon spray lubricant. TRUE recommends using Tri-Flow™ or a similar brand.
- Painted Frames—If you have scuff marks, grease or a heavy dirt buildup on frame components, start with a mild soap solution or a diluted solution of a product such as Simple Green with a dilution of 32:1. If you cannot remove the marks using those methods, use a car polish/cleaner. **DO NOT** use solvents such as lacquer thinner, mineral spirits or acetone. For deeper scuff marks, use an automobile finish rubbing compound.
- Upholstery—For heavy duty cleaning, use a mild soap solution. This method should be sufficient in the majority of instances. In severe stain cases, you can use a solution of 5-10% household bleach diluted with water. Be sure to test an inconspicuous area first. **DO NOT** use chemical cleaners on the vinyl upholstery. You can also use a lanolin based hand cleaner to clean your upholstery. Wipe off after cleaning with a damp cloth and thoroughly dry.
- Plastic Parts—Use a mild soap solution to clean dirt and grease marks.
- Linear Bearings—Clean the linear shaft and lubricate (as required) with Teflon based grease. Keeping linear bearings clean and lubricated is critical to long life and good performance.
- Labels—Use a mild soap solution to clean dirt and grease marks.

**CAUTION:** Do not use any acidic cleaners. Doing so will weaken the paint or powder coatings and may void the TRUE Warranty. Never pour or spray liquids on any part of the equipment. Allow the equipment to dry completely before using.

**CAUTION:** If you determine that the equipment needs service, make sure that the equipment cannot be used inadvertently and ensure other users know that the machine needs service.

To order parts or to contact a TRUE authorized service representative, please visit [www.truefitness.com](http://www.truefitness.com).

## WARRANTY INFORMATION

**ATTENTION OWNER'S:** To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

### COMMERCIAL WARRANTY

<b>CARDIO</b>				
WARRANTY ITEM	VAPOR, APEX	GRAVITY PLUS	GRAVITY	ADX, RO, SURGE
Frame*	7 Years (with registration)	7 Years (with registration)	7 Years (with registration)	5 Years (with registration)
Parts	3 Years	3 Years	3 Years	3 Years
Consoles	3 Years	3 Years	3 Years	2 Years
Labor**	2 Years (with registration)	2 Years (with registration)	1 Year (with registration)	1 Year (with registration)
Wear Items***	180 Days	180 Days	180 Days	90 Days

<b>STRENGTH</b>	
WARRANTY ITEM	PALLADIUM, FUSE XL, FORCE, FITNESS LINE, ATLAS, XFT, XFW, MP, SM, FT, FS
Frame*	10 Years (with registration)
Parts	5 Years
Cables and Linear Bearings	1 Year
Labor**	1 Year (with registration)
Wear Items***	90 Days (6 months for FORCE only)

<b>FLEXIBILITY</b>	
WARRANTY ITEM	STRETCH
Parts	1 Year
Wear Items***	90 Days

**Warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance.**

\*Frame is the serialized base of the unit and does not include paint or coatings. Frame warranty will equal that of parts warranty unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.

\*\*Labor warranty is available for equipment located within United States. TRUE Fitness equipment is automatically covered under a 6-month Limited Labor Warranty. This 6-month Limited Labor Warranty begins from the date of purchase shown by a valid receipt. If a valid receipt is not available, the 6-month Limited Labor Warranty period begins from the date of manufacture on the originally purchased equipment.

\*\*\*Wear Items include: batteries, covers, caps, badges, paint, pedal straps, toe clips, elliptical pedal inserts, foot pads, Coax/TV, HDMI, USB, mirroring or Ethernet connections, and safety key.

See *Warranty Details for product registration requirements, terms, conditions, and complete coverage details.*



**ATTENTION OWNER'S:** To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

## WARRANTY DETAILS

All TRUE Fitness products are distributed by TRUE and are warranted to the original product purchaser and the parts of the TRUE product (the "Product") listed below. During the applicable Warranty Period, the Product, under normal use and service, shall be free of manufacturing defects in workmanship and materials.

### NOTE:

- Standard shipping is included with warranty part replacement.
- Shipping for warranty frame or replacement is included for the period of three years from the original date of purchase.

### All Warranty Items are "LIMITED"

- This limited warranty does not cover damage or equipment failure resulting from or caused by improper assembly/ installation, failure to follow instructions and warnings in owner's manual, accident, misuse, abuse, unauthorized modification, failure to provide reasonable and necessary maintenance, software version upgrades, compatibility with third party/aftermarket hardware, software, applications, or websites.
- TRUE's liability shall under no circumstances exceed the actual amount paid by you for the product, nor shall TRUE under any circumstances be liable for any consequential, incidental, special or punitive damages or losses, whether direct or indirect.
- Some states or countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
- TRUE will neither assume nor authorize any person to assure for us any other obligation or liability concerning the sale of this Product. Under no circumstances shall TRUE be liable under this warranty, or otherwise, of any damage to any person or property, including any lost profits or lost savings, for any special, indirect, secondary, incidental, or consequential damages arising out of the use of or inability to use this Product.
- This limited warranty, which is given expressly and in lieu of all other express warranties, constitutes the only warranty made by TRUE.
- The remedies described herein are your sole and exclusive remedies and TRUE's entire liability for any breach of this limited warranty.
- No one is authorized to change, modify, or extend the terms of this limited warranty.
- This limited warranty is in lieu of all other warranties of any kind either expressed or including but not limited to implied warranties of merchant.
- This limited warranty applies to the product only while the product remains in the possession of the original purchaser and is not transferable.
- This limited warranty becomes VALID ONLY if the Product is initially assembled/installed by a TRUE authorized dealer/ technician (if anyone other than a TRUE authorized dealer/technician initially assembles and installs the Product, this limited warranty will be void unless the written authorization of TRUE is first obtained).
- The "Warranty Period" for this limited warranty shall be for the duration forth in the applicable charts, beginning from the date of original purchase; provided, however, except to the extent prohibited by applicable law, the "Warranty Period" shall only be six months for labor (from the date of original purchase) unless, within 45 days of purchaser's receipt of this Product (A) the warranty is registered on-line or (B) if the form provided with equipment is filled in, signed by the original purchaser, and mailed to TRUE.
- All serial numbers must be intact on the Product for this limited warranty to be valid.
- Installation or download of any 3rd party or after-market products will result in voided warranty. This includes, but is not limited to, electrical and mechanical parts, software, or applications.
- TRUE will ship to an authorized service provider any new or rebuilt replacement part or component, or at our option, replace or refund the Product.
- Replacement parts are warranted for the remaining portion of the original warranty period.
- Proof/receipts of necessary maintenance may be required within 30 days of requested warranty part or service.
- This limited warranty does not apply to the performance of the heart rate accuracy will not be warranted as performance varies, based on user's physiology, age, method of use, and other external factors.

**ATTENTION OWNER'S:** To ensure you get the most out of your purchase and receive the full benefits of our warranty, you must register your product within 45 days of purchaser's receipt of this product.

## WARRANTY REGISTRATION

Thank you for purchasing a TRUE product!

To ensure you get the most out of your purchase and receive the full benefits of our warranty, **you must register your product within 45 days of purchaser's receipt of this product.**


How to register your product:

- **Online:**  
Simply visit our website at [truefitness.com](http://truefitness.com) and register your product warranty in one simple step.
- **QR Code:**  
Scan the QR code below with your smartphone to be taken directly to the registration page.



- **By Mail:**  
Complete the information below and mail to:  
TRUE Product Support  
1 GLAZER WAY  
ST. CHARLES, MO 63301

PLEASE RETAIN THIS PORTION FOR YOUR RECORDS  
BASE SERIAL NUMBER:

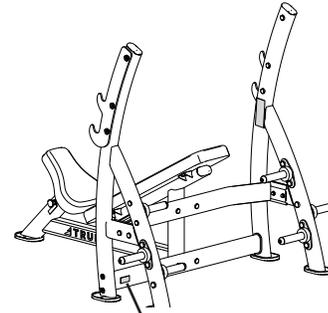

base serial  
number location



### Warranty Registration

Base Serial Number

Purchase Date

Company (if applicable)

Customer Name (First and Last)

Email Address

Phone Number

Street Address

City

State

Postal Code

Country







CONTACT US  
service@truefitness.com  
1.800.883.8783

1 GLAZER WAY  
ST. CHARLES, MO 63301

[TRUEFITNESS.COM](https://www.truefitness.com)

